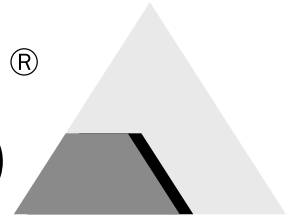


Videolarm™

for

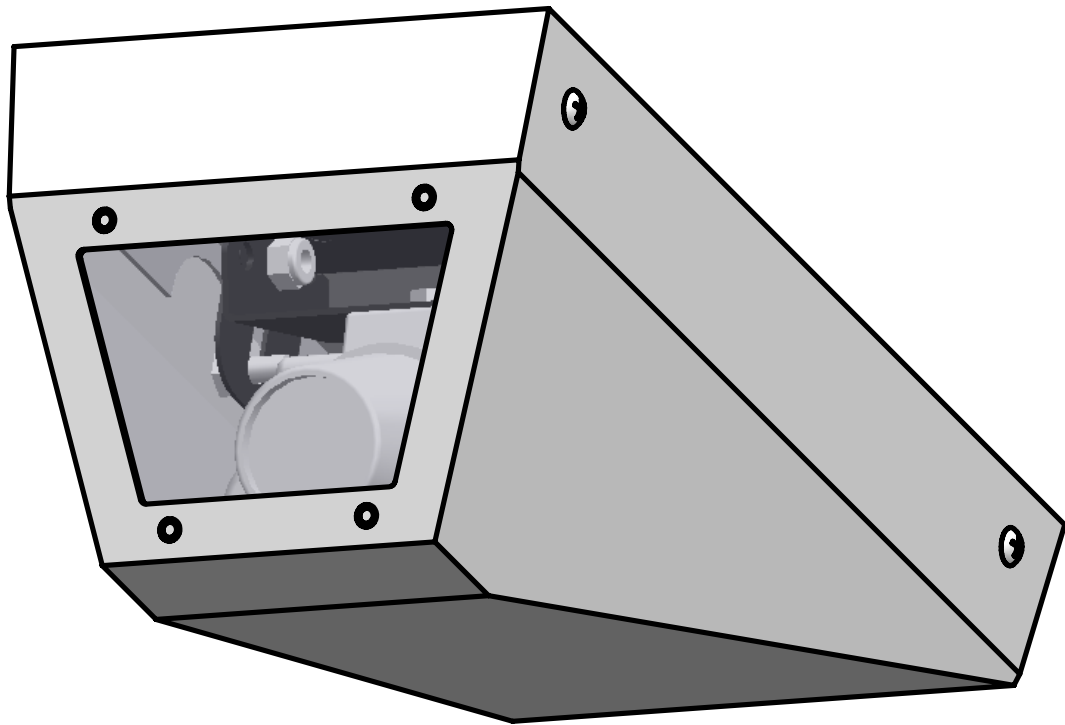
AXIS®
COMMUNICATIONS



PRODUCT INSTRUCTIONS

MODEL:

24888



Before attempting to connect or operate this product,
please read these instructions completely.

81-IN6208R0

IMPORTANT SAFEGUARDS

1. Read Instructions - All the safety and operating instructions should be read before the unit is operated.
2. Retain Instructions - The safety and operating instructions should be retained for future reference.
3. Heed Warnings - All warnings on the unit and in the operating instructions should be adhered to.
4. Follow Instructions - All operating and user instructions should be followed.
5. Electrical Connections - Only a qualified electrician should make electrical connections.
6. Attachments - Do not use attachments not recommended by the product manufacturer as they may cause hazards.
7. Cable Runs - All cable runs must be within permissible distance.
8. Mounting - This unit must be properly and securely mounted to a supporting structure capable of sustaining the weight of the unit. Accordingly:
 - a. The installation should be made by a qualified installer.
 - b. The installation should be in compliance with local codes.
 - c. Care should be exercised to select suitable hardware to install the unit, taking into account both the composition of the mounting surface and the weight of the unit. Be sure to periodically examine the unit and the supporting structure to make sure that the integrity of the installation is intact. Failure to comply with the foregoing could result in the unit separating from the support structure and falling, with resultant damages or injury to anyone or anything struck by the falling unit.

DOME/HOUSING/ELECTRICAL COMPONENT

WARRANTY INFORMATION

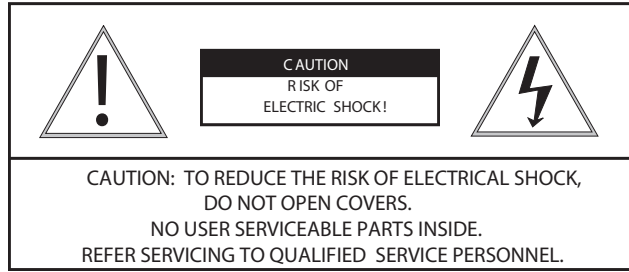
Axis, Incorporated warrants that its domes and housing sold here under shall be fit for the ordinary purpose for which said products are intended and shall be free from defects in material and workmanship for a period of three years from date of sale to buyer. Note that all electrical components will be warranted for a period of three years from date of sale to buyer. Axis makes no other warranty of any kind with respect to this product, whether expressed or implied, including, without limitation, the implied warranty of fitness for a particular purpose.

In the event of a breach of the above warranty, Axis shall, at its option, repair or replace said product. This is Axis's sole obligation under this warranty. In no event shall Axis be liable for any incidental or consequential damages, as defined in section 2-715 of the Uniform Commercial Code by a breach of this warranty.

Axis shall repair or replace defective products upon shipment of products returned prepaid to Axis.

Repairs made necessary by reason of accident, misuse or normal wear shall be charged at Axis's standard rate. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

SAFETY PRECAUTIONS



The lightning flash with an arrowhead symbol, with in an equilateral triangle, is intended to alert the user to the presence of non-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point with in an equilateral triangle is intended to alert the user to presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

UNPACKING

Unpack carefully. Electronic components can be damaged if improperly handled or dropped. If an item appears to have been damaged in shipment, replace it properly in its carton and notify the shipper.

Be sure to save:

1. The shipping carton and packaging material. They are the safest material in which to make future shipments of the equipment.
2. These Installation and Operating Instructions.

SERVICE

If the unit ever needs repair service, the customer should contact Axis (1-800-444-2947) for authorization to return and shipping instructions.

TECHNICAL SUPPORT

If technical support is needed, Axis has set-up a technical support line for their customers.

AXIS TECHNICAL SUPPORT

1-800- 444-2947



Electrical Specifications

24888



Class 2 Only
24 VAC Blower
Tools: Philips Screwdriver 7/16 wrench

Note: DO NOT EXPOSE ENCLOSURE TO RAIN OR MOISTURE

English



Clase 2 Solamente
24 Sopladores del VAC.
Herramientas: Destornillador de Philips 7/16 llave

Nota: NO EXPONGA EL RECINTO A LA LLUVIA O A LA HUMEDAD

Español



Classe 2 Seulement
24 Ventilateurs de VCA.
Outils : Tournevis de Philips 7/16 clé

Note : N'EXPOSEZ PAS LA CLÔTURE À LA PLUIE OU À L'HUMIDITÉ

Français



Kategorie 2 Nur
24 VAC Gebläse.
Werkzeuge: Philips Schraubenzieher 7/16 Schlüssel

Anmerkung: SETZEN SIE EINSCHLIESSUNG NICHT REGEN ODER FEUCHTIGKEIT AUS

Deutsch



Classe 2 Somente
24 Ventiladores do VAC.
Ferramentas: Chave de fenda de Philips 7/16 de chave

Nota: NÃO EXPONHA O CERCO À CHUVA OU À UMIDADE

Portuguese

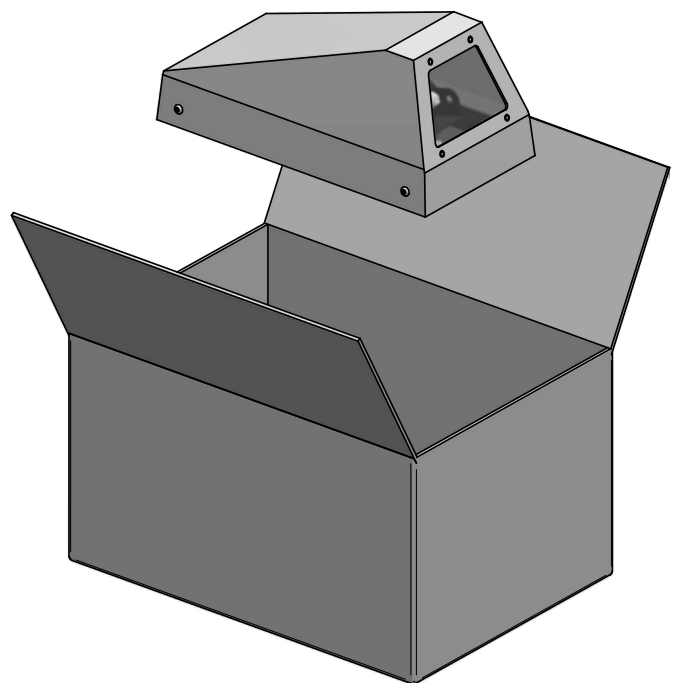


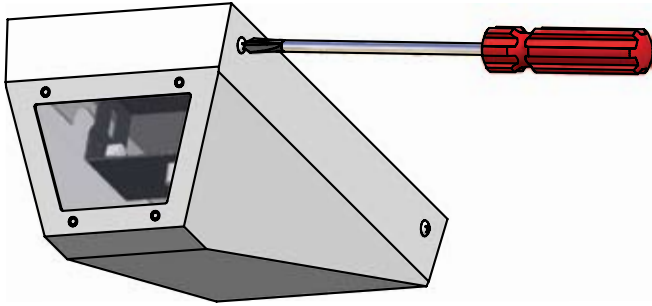
Codice categoria 2 Soltanto
24 Ventilatori di VCA.
Attrezzi: Cacciavite di Philips 7/16 di chiave

Nota: NON ESPONGA LA RECINZIONE A PIOGGIA O AD UMIDITÀ

Italiano

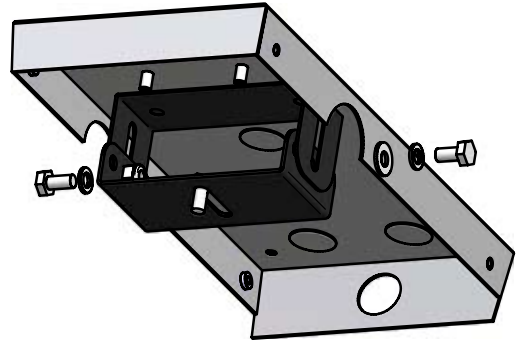
Content of Box



1

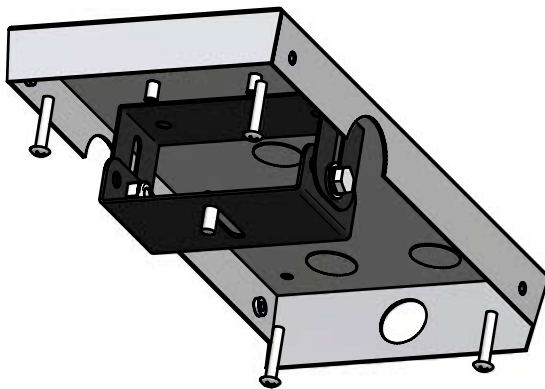
Remove the housing top by removing the (4) #8-32 screws using a Phillips Screwdriver.

- Quite la tapa de la cubierta quitando (4) los tornillos #8-32 usando un destornillador Phillips.
- Enlevez le dessus de logement en enlevant (4) les vis #8-32 à l'aide d'un tournevis Phillips.
- Entfernen Sie die Gehäuseoberseite, indem Sie die (4) Schrauben #8-32 mit einem Kreuzkopfschraubenzieher entfernen.
- Remova o alto da carcaça removendo (4) os parafusos #8-32 usando uma chave de fenda Phillips.
- Rimuova la parte superiore dell'alloggiamento rimuovendo (4) le viti #8-32 per mezzo di un cacciavite "phillips".

2

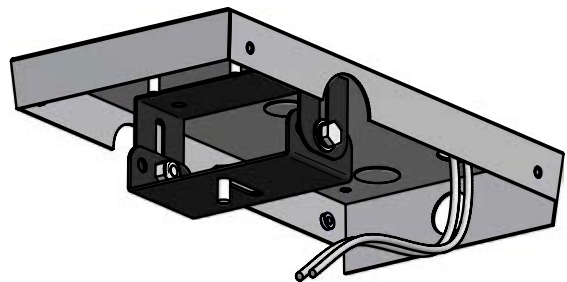
Install the camera bracket using the 1/4-20 bolt provided.

- Instale el soporte de la cámara fotográfica usando el perno 1/4-20 proporcionado.
- Installez la parenthèse d'appareil-photo à l'aide du boulon 1/4-20 fourni.
- Bringen Sie den Kamerahaltewinkel mit dem bereitgestellten Schraubbolzen 1/4-20 an.
- Instale o suporte da câmera usando o parafuso 1/4-20 fornecido.
- Installi la staffa della macchina fotografica per mezzo del bullone 1/4-20 fornito.

3

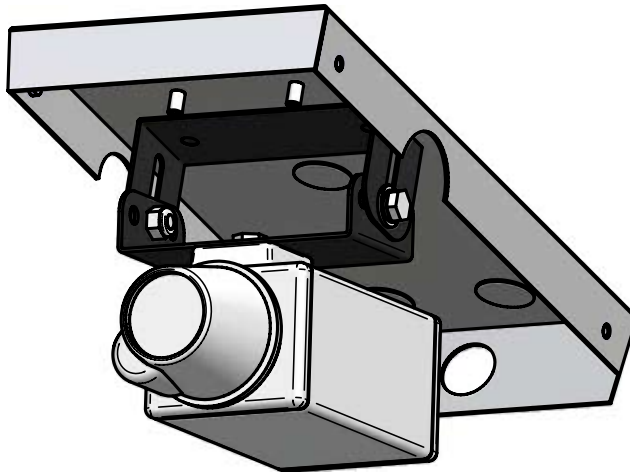
Position the housing in the desired location and mark the location of the four mounting holes.

- Coloque la cubierta en la localización deseada y marque la localización de los cuatro agujeros de montaje.
- Placez le logement dans l'endroit désiré et marquez l'endroit des quatre trous de support.
- Bringen Sie das Gehäuse in der gewünschten Position in Position und kennzeichnen Sie die Position der vier Entlüftungslöcher.
- Posicione a carcaça na posição desejada e marque a posição dos quatro furos de montagem.
- Posizioni l'alloggiamento nella posizione voluta e contrassegni la posizione dei quattro fori di montaggio.

4

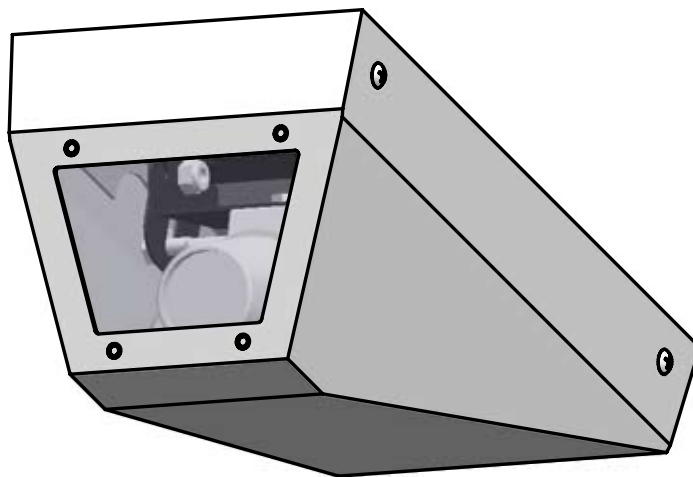
Pass electrical and video cables through the access hole in the back of the housing or one of the two knockouts in the bottom of the housing.

- Pase los cables eléctricos y video a través del agujero de acceso en la parte posterior de la cubierta o la que esta' de los dos golpes de gracia en el fondo de la cubierta.
- Passez les câbles électriques et visuels par l'ouverture d'accès dans le dos du logement ou de celui des deux coups de grâce au fond du logement.
- Führen Sie die elektrischen und videokabel durch das Zugangsloch in der Rückseite des Gehäuses oder des der zwei Knockouts in der Unterseite des Gehäuses.
- Passe cabos elétricos e video através do furo de acesso na parte traseira da carcaça ou de esse dos dois knockouts no fundo da carcaça.
- Passi i cavi elettrici e video attraverso il foro di accesso nella parte posteriore dell'alloggiamento o di quello dei due knockouts nella parte inferiore dell'alloggiamento.

5

Attach camera and complete wiring. Adjust the camera angle, and tighten the camera bracket.

- Termine el cableado de la cámara fotográfica. Ajuste el ángulo de cámara fotográfica, y apriete el soporte de la cámara fotográfica.
- Accomplissez le câblage d'appareil-photo. Ajustez l'angle d'appareil-photo, et serrez la parenthèse d'appareil-photo.
- Führen Sie Kameraverdrahtung durch. Justieren Sie den Kamerawinkel, und ziehen Sie den Kamerahaltewinkel fest.
- Termine a fiação da câmera. Ajuste o ângulo de câmera, e aperte o suporte da câmera.
- Completi i collegamenti della macchina fotografica. Registri l'angolo di macchina fotografica e stringa la staffa della macchina fotografica.

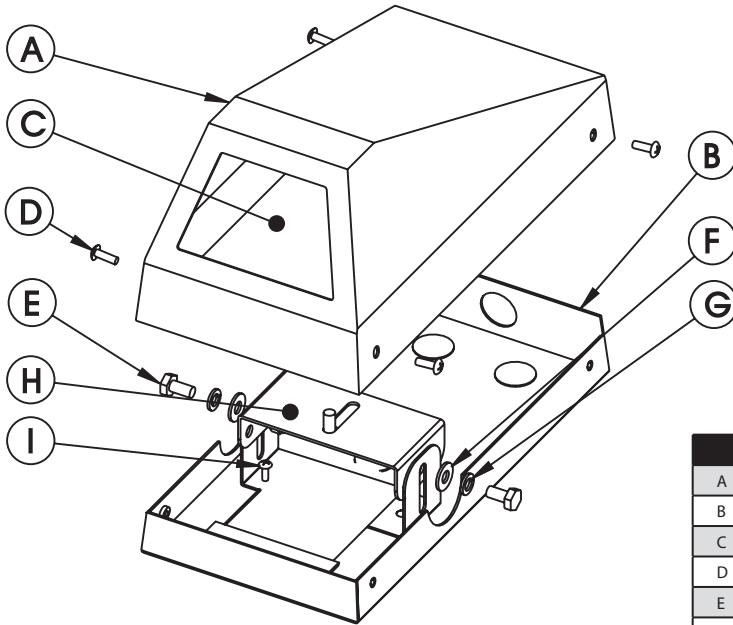
6

Attach the housing top back to the housing using the (4) #8-32 screws, or security screws.

- Una la tapa de la cubierta de nuevo a la cubierta usando (4) los tornillos #8-32, o la seguridad atornilla.
- Attachez le dessus de logement de nouveau au logement à l'aide (4) des vis #8-32, ou la sécurité baise.
- Bringen Sie die Gehäuseoberseite zurück zu dem Gehäuse mit den (4) Schrauben #8-32 an, oder Sicherheit schraubt.
- Una a parte traseira do alto da carcaça à carcaça usando (4) os parafusos #8-32, ou a segurança parafusa.
- Fissi la parte superiore dell'alloggiamento di nuovo all'alloggiamento per mezzo (4) delle viti #8-32, o la sicurezza scopa.

Replacement Parts List

24888



QTY.	PART NUMBER	DESCRIPTION
A	50-VL1576	ACEM20 HOUSING TOP
B	30-VL1310	CE20 MOUNTING PLATE
C	WDCEM20	REPLACEMENT WINDOW
D	90-BTSR04	8-32X1/2 RD PHILLIPS HD SS
E	90-BTHH11	1/4-20 X 1/2 HEX HD ZINC
F	92-WSFL01	1/4 SAE FLAT WASHER 18-8 SS
G	92-WSSL01	1/4 SPLIT LOCKWASHER 18-8 SS
H	30-VL787	CAMERA MOUNT BRKT
I	90-BTSR21	6-32 X 1/4" RD PHILLIPS SS

General Dimensions/ Mounting Hole & Cable Access Hole Location Diagrams

24888

