

Windows 95 and LANtastic 7.0 with AXIS Print Monitor

This technical note describes how to install an Axis print server on a Windows 95 computer using the LANtastic 7.0 operating system.

The AXIS Print Monitor uses NetBIOS/NetBEUI for printing, so make sure that your LANtastic client is running this protocol.

Follow the 3 main steps below:

1. Install the AXIS Print Monitor software according to the instructions in the readme.txt file or according to your user documentation.

2. Install a new printer on the computer

1. Start the Add Printer Wizard by selecting Settings - Printers from the Start Menu and double-click on the Add Printer icon.

2. After clicking Next> in the first dialog the Wizard then asks you to select between Local Printer and Network Printer. Select Local Printer.

3. Choose an appropriate print driver for your printer from the manufacturer and model lists displayed. Click Next>.

4. Select an AXIS Printer Ports from Available Ports list. The ports appear as <name>.LP1, <name>.LP2, and <name>.CM1, where <name> is AX followed by last six digits of the Axis print server serial number, e.g. AX560B35.

5. Click the Configure Port button.

6. Choose when Status Pop-up messages are to displayed from the Configure AXIS Printer Ports dialog. A Help facility is available should you require any additional information. Check the appropriate boxes and then click OK, click Next>.

7. Enter an appropriate name for your printer and click Next>

8. Choose whether you wish to produce a Test Page and then click Finish.

Now the installation is complete and the system is set up to print.

3. Create printer resource in LANtastic on the same computer.

1. Select Start - Program - LANtastic 7.0

2. Select Manage Server

3. Select Share Drives and Printers

4. When prompted about name and password type SUPERVISOR and SUPERVISOR

5. Make sure that the server This Server is shown at the top, otherwise click on Select

6. Click on: Add

7. Select Printer and type in e.g. @LASER

8. Enter a description if needed.

9. Select at the bottom which printer the setup should be valid for and click CREATE.

4. The setup is now complete and all LANtastic users can connect to the shared printer @LASER independently if they are using DOS, Windows 3.1x or Windows 95.