

Addendum to 'Meta information using XML for AXIS 7000'

In the 2.48/1.08 software release for Axis 7000/70U, more internal variables are available as described on page 14 in the 'Meta information using XML for AXIS 7000' document. The new internal variables are:

- INT_DATE_TIME will give the date and time as e.g. 20060312140433
- INT_DATE_AMERICAN will give the date in American format e.g. 03/12/06
- INT_DATE_INTERNATIONAL will give the date in International format e.g. 2006-03-12
- INT_DATE.UTC will give the number of seconds since January 1, 1970 as e.g.1233317895
- INT_TIME_AMERICAN will give the current time in American format e.g. 2 pm
- INT_TIME_INTERNATIONAL will give the current time in International format e.g. 14.00
- INT_BRAND will give the brand of Axis device e.g. 'Axis'
- INT_MODEL will give the model number of device e.g. '7000'
- INT_SOFTWARE_VERSION will give the current software version e.g. 2.48
- INT_SERVER_NAME will return the SMB server name
- INT_FULL_NAME will give name of authenticated user e.g. John Smith