

# HOW TO.

Disable the door icon on  
**AXIS I8016-LVE and  
AXIS A8207-VE MKII**

## Introduction

In the situation that a system is configured to use the relay connection intended for a door latch, for an alternate purpose than to unlock the door, it may be desirable to disassociate the door open icon shown on the intercom panel from that relay to avoid any possible confusion from the intercom user.

Follow these instructions to avoid turning on the door open icon with the associated relay.



### Prerequisites

AXIS I8016-LVE - firmware 10.11 or later

AXIS A8207-VE MkII - firmware 10.11 or later

Please note that Axis doesn't take any responsibility for how this configuration may affect your system. If the modification fails or if you get other unexpected results, you may have to restore the settings to default.


## Instruction

1. Using the device's web interface, navigate to "plain config" (System) or use the URL <http://<IP>/intercom/index.html#/system/plainConfig>
2. Then, select the "IOPort" section.

By default the "Usage" text for Relay 1, to which the electronic door latch can be wired is set to "Door".

However, if this connection is to be used for some other purpose, the device administrator should edit the "Usage" text in the configuration page to something other than "Door" and the icon will no longer be associated with that relay.

Example for plain config page of AXIS I8016-LVE:

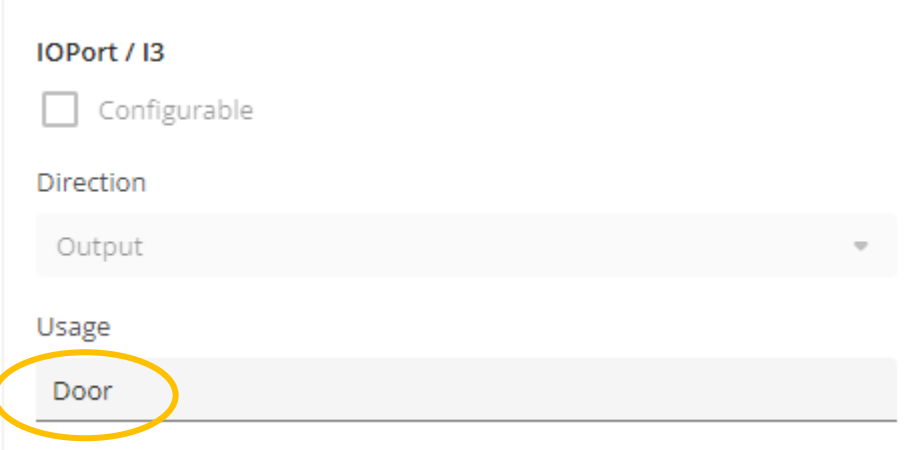

The screenshot shows the configuration page for IOPort / I3. It includes a checkbox for "Configurable", a "Direction" dropdown menu set to "Output", and a "Usage" dropdown menu set to "Door". The "Door" option in the Usage dropdown is circled in yellow.