

AXIS Camera Companion

QNAP Auto-configuration

AXIS Camera Companion 2.10 can automatically configure your QNAP NAS with user accounts and quotas for your cameras when you create a site.

This document is a quick guide to show how to prepare AXIS Camera Companion 2.10 to automatically configure the QNAP NAS with a shared folder and configure quotas to be used by cameras installed with AXIS Camera Companion.

Important: Before you start make sure the NAS has been connected to the network and configured with an administrator password and the hard drives have been initialized. Please refer to the QNAP User documentation to learn how to setup your QNAP NAS for the first time.

STEP 1. Run the AXIS Camera Companion client on your Windows PC. Create a "Site" for your camera network. Name the site a name, and set up the password.

Camera Compa	nion	
Site na	me and pas	ssword
Site name:	Camera site	
Name to descri	be the site, for example 'h	nome' or 'store'.
🗷 Use site pass	word (Recommended)	
Site password:	••••	
Confirm	ard:	

If you lose the site password, the cameras must be reset to factory default.





STEP 3. Input camera's password & connect to each camera you want to add to your AXIS Camera Companion site.



STEP 4. Click Connect Network Share to start the Network Share Configuration Wizard. Select your QNAP NAS from the list and click Next.

Connect Netwo	ork Share			
Select	a storage devi	се		
Refresh]			
	MBR1000v4 (Gatew Model: Manufacturer: Administrator page:	ray) MBR1000v4 NETGEAR, Inc. <u>http://www.routerlogin.net/</u>		
	NASC9C06D Model: Manufacturer: Administrator page:	TS-221 QNAP Systems, Inc. http://192.168.1.32		
The stora	ge device wasn't liste	a →		
1 Make	sure the selected store	age device is configured correctly	Read more	
			Help < Back	Next > Cancel

STEP 5. AXIS Camera Companion will prompt for login credentials of QNAP NAS. (The default ID: admin, Password: admin)

Connect Network	k Share			\Leftrightarrow	
Networ	k storage user nan	ne and password	ł		
User name:	admin				
Password:	•••••				
			Help < Back	Next >	Cancel

STEP 6. Select a share folder under the selected QNAP NAS (Example: "Recordings") as the recording folder.

All required recording sub-folders for each camera will be automatically created under the selected share folder.

Connect Network Share	\Leftrightarrow		
Select a network share			
Refresh			
📇 Multimedia			
En Download			
Recordings			
E Web			
📇 Usb			
E Public			
homes			
home			
E Qsync			
Go to the network storage device's <u>configuration web page</u> to add shares or modify access	s permi	ssions.	
Help < Back	lext >	Cancel	

STEP 7. Click Next to set up the Network share for the cameras and review the site setup. Click Finish to complete the site installation.

AXIS Camera Companion				
				•
Ready to	install			
Site name:	Camera site			
Password protected:	Yes			
Recording method:	High resolution motion rec	ording		
Storage estimate:	1-2 GB / day. <u>Read more</u>			
Name	Address	Storage		
00408CE1D46C - C	Overview 192.168.1.16	\\192.168.1.32\Recordings	Recording must be enabled manually	
00408CC59125	192.168.1.31	\\192.168.1.32\Recordings		
00408CDC131A	192.168.1.23	\\192.168.1.32\Recordings		
00408CAC211F	192.168.1.15	\\192.168.1.32\Recordings		
Settings can be	e changed later on the Confi	guration page. Click Finish to app	ly these settings	
AXIS A			< Back	Finish Cancel