

AXIS M5525-E PTZ Network Camera

Repainting Instructions

AXIS M5525-E PTZ Network Camera

Impact on warranty

Impact on warranty

This product is approved for repaint by Axis, provided that you follow the instructions in this document and at www.axis.com/warranty-implication-when-repainting

Risks with repainting

There are several risks when disassembling or assembling an Axis product. There is always a certain yield loss during assembly. Training of operators and the use of correct tools mediates some of the problems but they can never be fully avoided. Some of the risks include:

ESD Damage – Always handle the product in an ESD safe environment. Even if precautions are taken there is always a risk of ESD damage. The damage can remain undetected and cause problems during the lifetime of the equipment.

Dust contamination – Opening a camera may expose the lens and sensor to dust or paint. Dust will affect the optical performance. Lenses need to be disassembled in a dust-free environment, preferably a cleanroom.


Paint overspray – Masking the different components of the equipment is critical. Failure to mask sensitive areas can cause problems with assembling the equipment. Any areas that are not painted at factory or have a different surface treatment than the rest of the parts (threads, ground and electrical contact surfaces) must also be masked to ensure function.

AXIS M5525-E PTZ Network Camera

How to repaint the product

How to repaint the product

Disassembly

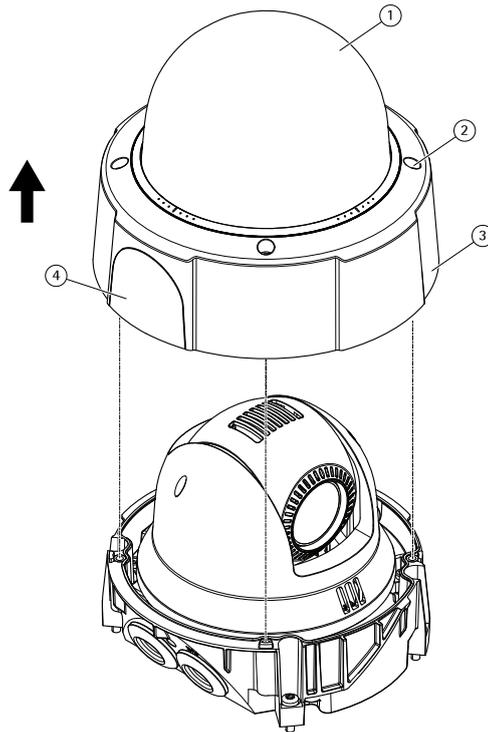


- 1 Dome
- 2 Screws (4x, T20)
- 3 Dome cover
- 4 Conduit cover

1. Remove the dome cover from the camera unit.
2. Remove the conduit cover if you are not going to use it.

AXIS M5525-E PTZ Network Camera

How to repaint the product

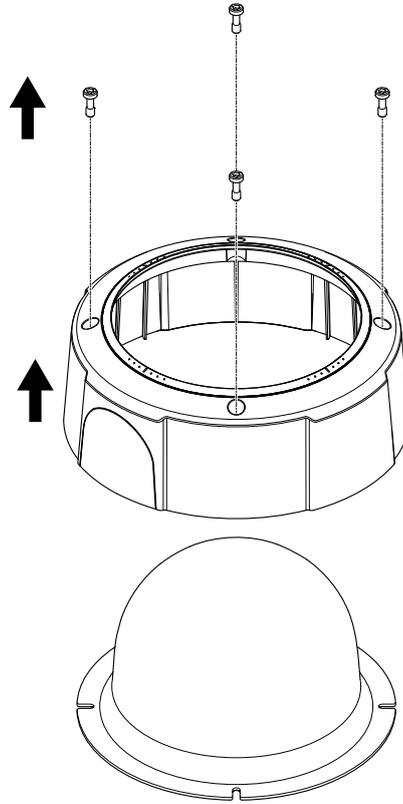

3. Remove the dome from the dome cover (4 screws, T20).
4. Remove the screws from the dome cover.

Preparations

- If applicable, the equipment must be disassembled according to the instructions in this document.
- Each part should be stripped from components and crucial parts masked to ensure successful reassembly.
- All parts to be repainted should be stripped of gaskets, screws, electrical components, connectors and plugs, windows and domes.
- All parts to be repainted must be thoroughly cleaned to remove grease, dust or oil.
- To ensure reassembly and functionality of the product, openings for screws, LED indicators, or microphones must be masked before painting.

Pretreatment of parts

Depending on the part material and type of paint applied at factory, different pretreatments should be done for the new paint to adhere as well as possible. For all variants though, proper cleaning to remove oil, grease and dust is strongly recommended.

For more information on the materials used in the product, see its datasheet at www.axis.com

Powder coated parts – Using fine sandpaper, remove the original powder coating down to the base material and clean the parts before painting, or use a primer.

AXIS M5525-E PTZ Network Camera


How to repaint the product

Anodised and chromated parts – Use a primer.

Uncoated stainless steel – No special pretreatment is needed, but make sure that the surface is clean before painting.

Plastic – Use a primer.

Repainting

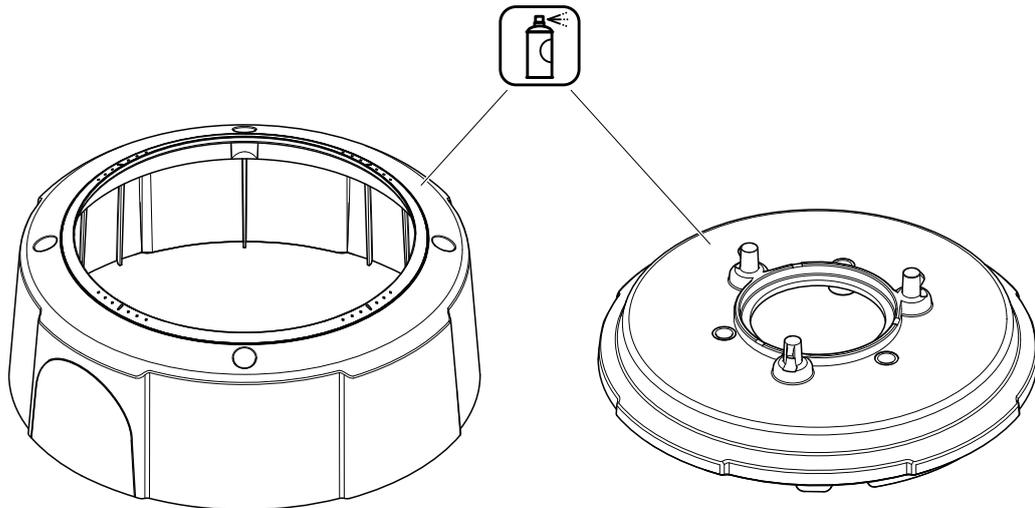

1. Make sure all necessary preparations have been made, see *Preparations on page 4*.
2. Apply a thin and even layer of spray paint according to the instructions of the paint manufacturer.
3. Let the paint dry.
4. To get a better coverage and clearer color, apply a second layer of spray paint.
5. When the paint is dry, remove the masking and reassemble the product.

Reassembly

1. Reattach the dome to the dome cover.
2. Reattach the dome cover to the camera unit and tighten the screws (torque 1 Nm, 0.74 lb ft).

