Quick-Start Secure Entry access control for Milestone XProtect®

AXIS Secure Entry for XProtect

September 2025

Contents

3
3
5
5
7
7
9
9
11
11
13
13
14
14
16
16
19

Introduction

AXIS Secure Entry for XProtect is a solution that unites physical access control with video surveillance. This integration lets you configure a complete Axis access control system directly from the XProtect Management client. The system is also seamlessly integrated with XProtect Smart Client, allowing operators to monitor access and perform access control actions. For more information about access control integration in XProtect, see using access control in XProtect Smart Client.

Prerequisites

Milestone XProtect 2024 R1 or higher

AXIS Optimizer version 5.6

AXIS Network Door Controller FW 12.5.68.1

NOTE

This guide requires that you have already installed Milestone XProtect with the required licenses. If you require a guide for this please visit Milestone support guides.


Please note that Axis doesn't take any responsibility for how this configuration may affect your system. If the modification fails or if you get other unexpected results, you may have to restore the settings to default.

Step 1 - Installing

This step will guide you on installing Secure Entry Access control via the optimizer installer

To install

- 1. Download the latest AXIS optimizer from axis.com.
- 2. Next run the exe installer file and follow the installation wizard, during this wizard you will be presented an option to install Axis Secure Entry, tick this option and continue with the installation

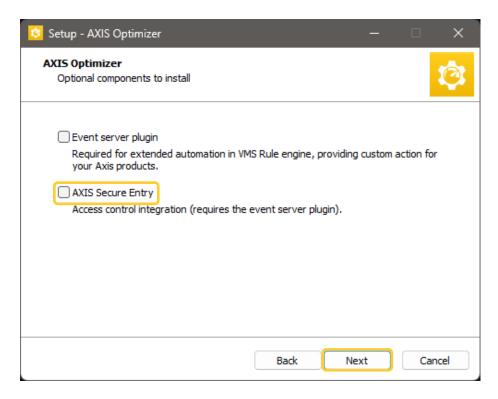

3. Once completed, you will have the AXIS optimizier section in your management client along with the Access control sub section.




Step 2 - Adding/updating & setting up devices


AXIS door controllers are added directly via AXIS Secure Entry access and are not added via XProtect itself.

To add devices


- 1. In the XProtect Management Client, expand the AXIS Optimizer menu and select Access control.
- 2. From the displayed screen, select "Devices" under the "CONFIGURATION" menu.
- 3. On the **Devices** page select the "**Discovered devices**" tab, you will see a list of all the controllers that have been discovered on your network

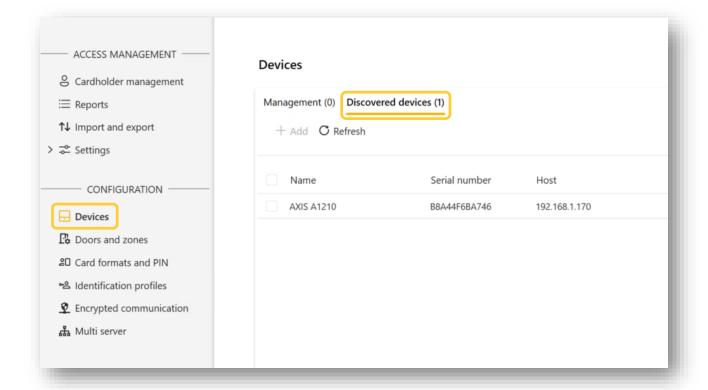


4. Select the devices you wish to add and press the "+Add" button, in the popup provide the credentials for the devices.

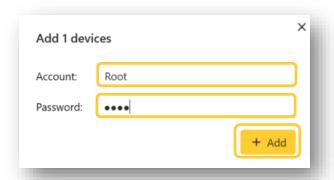

5. These devices will now appear under the management tab, This will display the name, status, serial number, IP address, Model and software version.

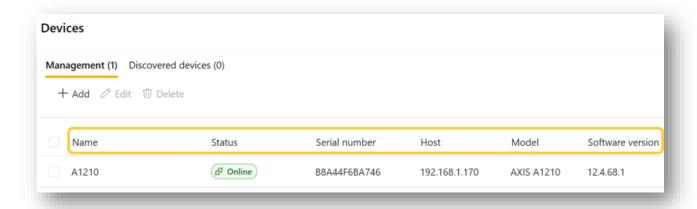

6. If your device was not discovered, you can manually add your device via the "+Add" in the management tab and provide the details in the pop-up.

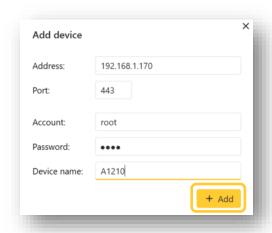


Step 3 - Creating Doors


This step shows you how to create doors.

To create doors


- 1. In the XProtect Management Client, expand the AXIS Optimizer menu and select Access control.
- 2. From the displayed screen, select "Doors and zones" under the "CONFIGURATION" menu.

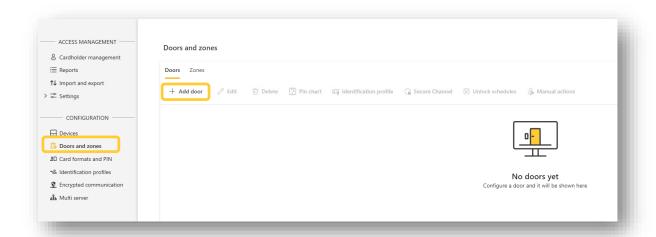


3. Click the "**+Add door**" button, in the pop-up give the door an appropriate name, select the door type and which device this door will be created on and select "**Next**".

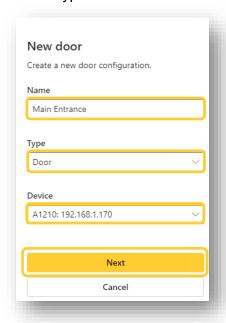

4. This will take you to the door configuration page, here you can add your peripherals such as readers, REX and door position sensors. For more information on what can be configured, please see the AXIS Secure Entry for XProtect user manual.

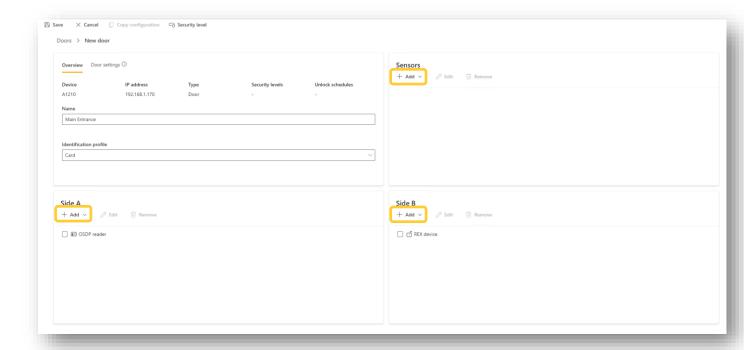

5. Once you have configured your door, ensure to set the correct identification profile and click save.

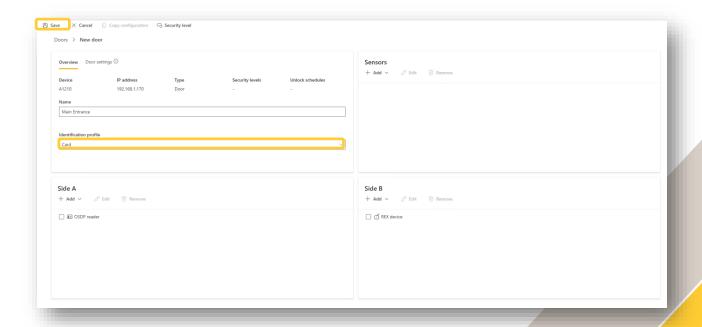

6. Your configured door is now displayed in the doors and zones table, repeat this process for your remaining doors that need to be configured.




Step 4 - Creating zones


This step shows you how to create zones.

To create zones

- 1. In the XProtect Management Client, expand the AXIS Optimizer menu and select Access control.
- From the displayed screen, select "Doors and zones" under the "CONFIGURATION" menu.
- 3. From the Doors and zones page select the "Zones" tab, and press "+Add zone"

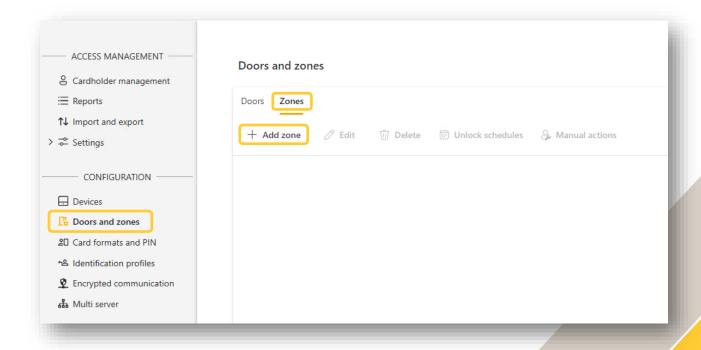

4. In the new box give the zone a name, using the "**+Add door**" button select the doors you want in your zone and click "**Add**".

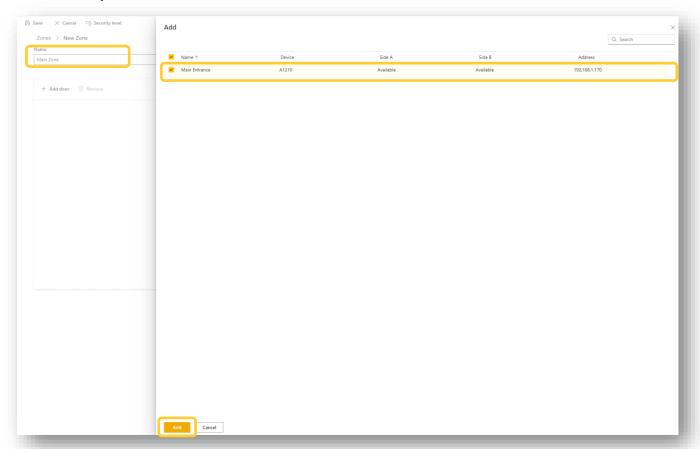

5. Next using the dropdown on each door choose the door usage, then finish by clicking "Save". Repeat this process for any remaining zones you wish to configure.




Step 5 - Creating cardholders


This step shows you how to create cardholders.

To create cardholders


- 1. In the XProtect Management Client, expand the AXIS Optimizer menu and select Access control.
- 2. From the displayed screen, select "Cardholder management" under the "ACCESS MANAGEMENT" menu.

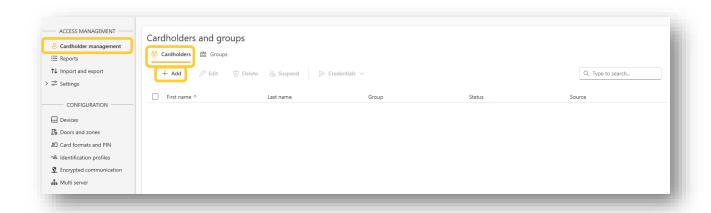


3. To create a cardholder, click the "+Add", in the pop-up enter the "First name" and "Last name" of the cardholder, then press "Next".

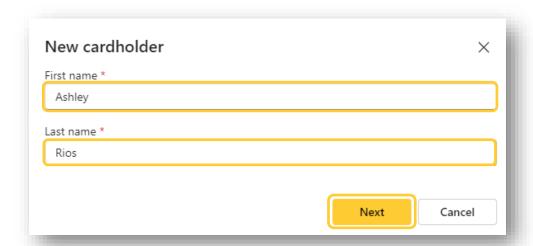

4. On the next page you can provide additional info such as an cardholder photo or email address, you can add the cardholder to a group or access rule if you already have one created.

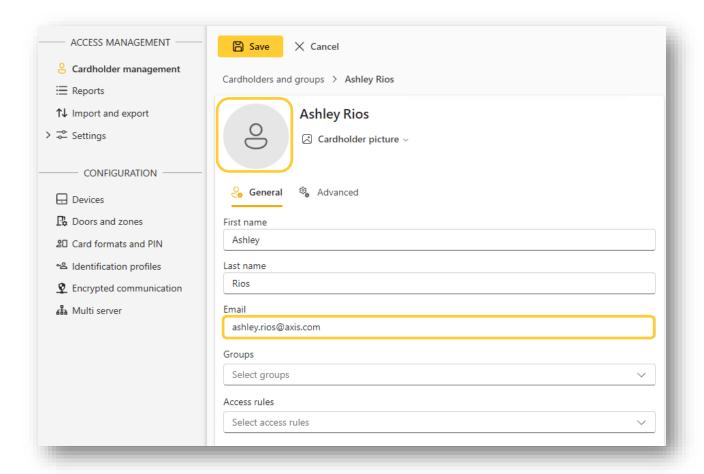

5. In the next box, you can click "**+Add**" to choose between the different credential types. Once you have added your credentials, you can save the cardholder. Repeat this process you all needed cardholders.

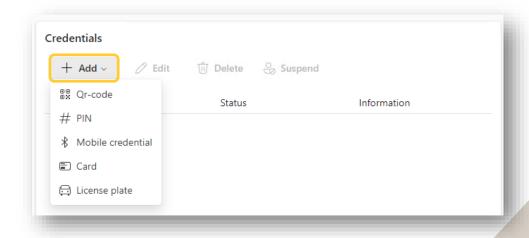


Step 6 - Creating groups


This step shows you how to create zones.

To create Groups

- 1. In the XProtect Management Client, expand the AXIS Optimizer menu and select Access control.
- 2. From the displayed screen, select "Cardholder management" under the "ACCESS MANAGEMENT" menu
- 3. On this page, select the tab "**Groups**" then press "**+Add**", in the pop-up give the group a name and initials

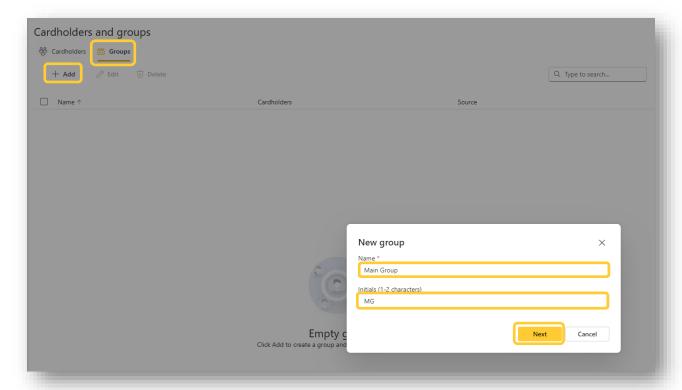

4. Next you can click the "**+Add**" button to bring up the list of cardholders, select the cardholders you wish to add and select "**+Add**". Once completed, press "**Save**", you can repeat the process for all groups you wish to create. These groups will also become a resource to be selected when creating cardholders.

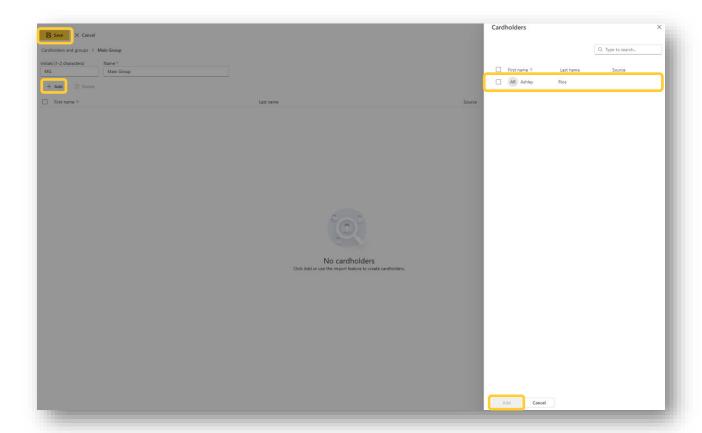


Step 7 - Creating access rules

This step shows you how to create access rules.


To create access rules

- 1. In the XProtect Management Client, expand the AXIS Optimizer menu and select Access control.
- 2. From the displayed screen, select "Cardholder management" under the "ACCESS MANAGEMENT" menu

3. From this page you can click the "**+Add**" button in the Access rule section, in the pop-up give this rule a name and press "**Next**"

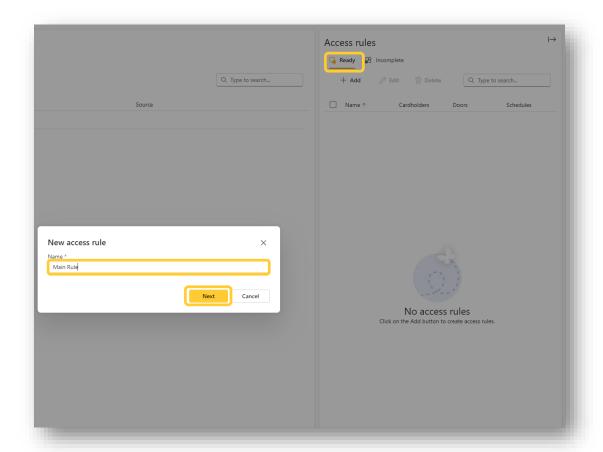

4. From this page you can add your cardholders, either individually or add via groups, you can select your door individually or via zones, and select you schedule this access rule should follow, and click "Save". You are not required to add cardholder and Zones directly, but a schedule must be selected. If no cardholder or door is added the rule will go to the "Incomplete" tab.

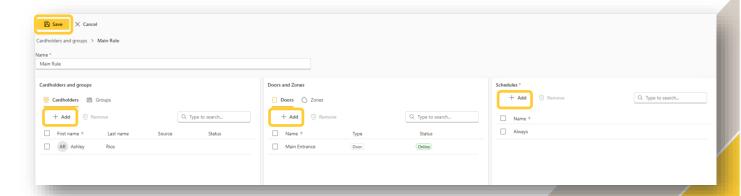


Step 8 - Creating access control system integration


This step shows you how to create the access control system integration.

To create the access control system integration


1. In the XProtect Management Client, select **Access Control**, in the sub menu right-click on **Access Control** and select **Create new**.

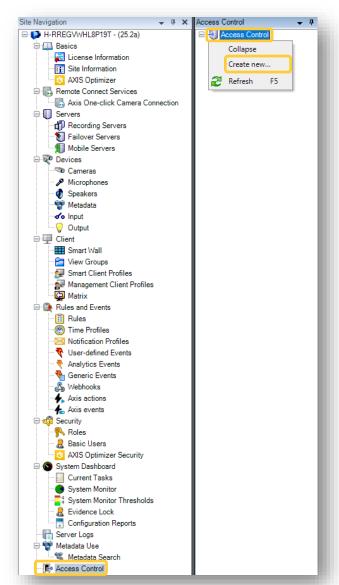


2. In the pop-up give the integration a name and select "AXIS Secure Entry" in the

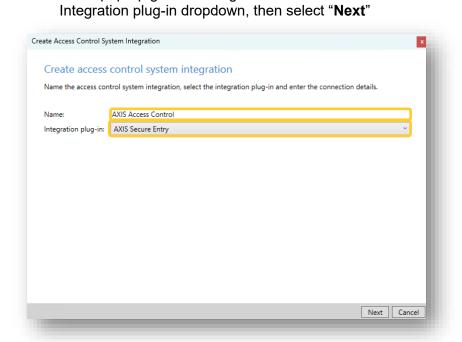


3. The next menu will show what devices are going to be added from the configurations you made in the previous steps. Click "Next".

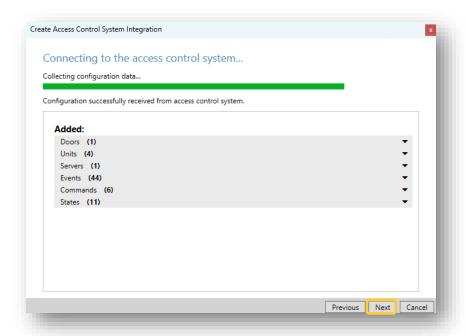

4. If you wish to pair any camera views with the doors this can be done by dragging the camera to the access point on this menu. Once you have paired any cameras you wish, press "Next".

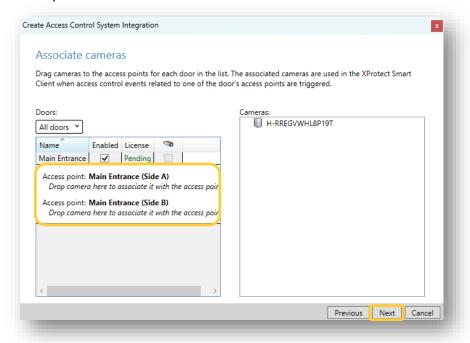

5. You have now completed the integration and can close the dialog box via the "Close" button. Your integration will now allow you to monitor related access control events in the XProtect Smart Client.

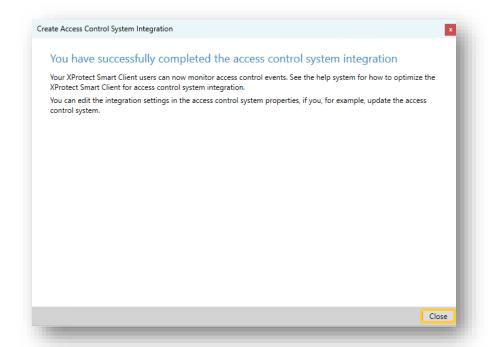

Considerations and limitations

- 1. Some AXIS Secure Entry for XProtect features, such as QR credentials or Active Directory, are not currently supported in this version but are planned to be added.
- 2. Changes to the hardware configuration for access control require a "Refresh Configuration" from the Metadata Use -> Access Control to be reflected in the XProtect Smart Client monitoring.
- 3. An AXIS license grace period has been given for the release of this integration.