



AXIS TF1805

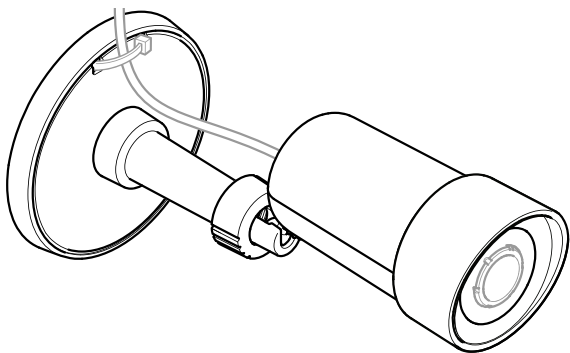

Installation guide
Guide d'installation
Installationsanleitung
Guida all'installazione
Guía de instalación
インストールガイド
Guia de instalação
РУКОВОДСТВО ПО УСТАНОВКЕ
설치가이드
安裝指南
Panduan instalasi
Kurulum kılavuzu



4x

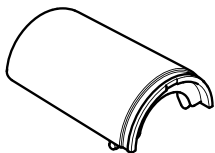


4x




4x



4x

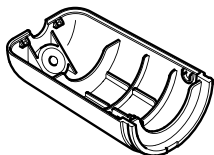


4x

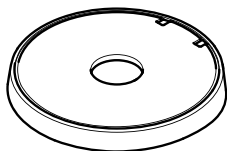


4x



4x

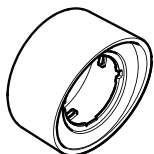

4x

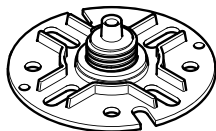

4x




 
4x




 
4x

1.1


4x

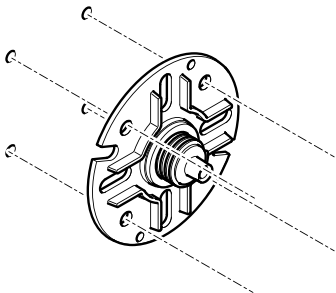


 

 
 


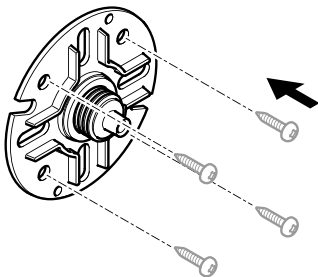
1.2

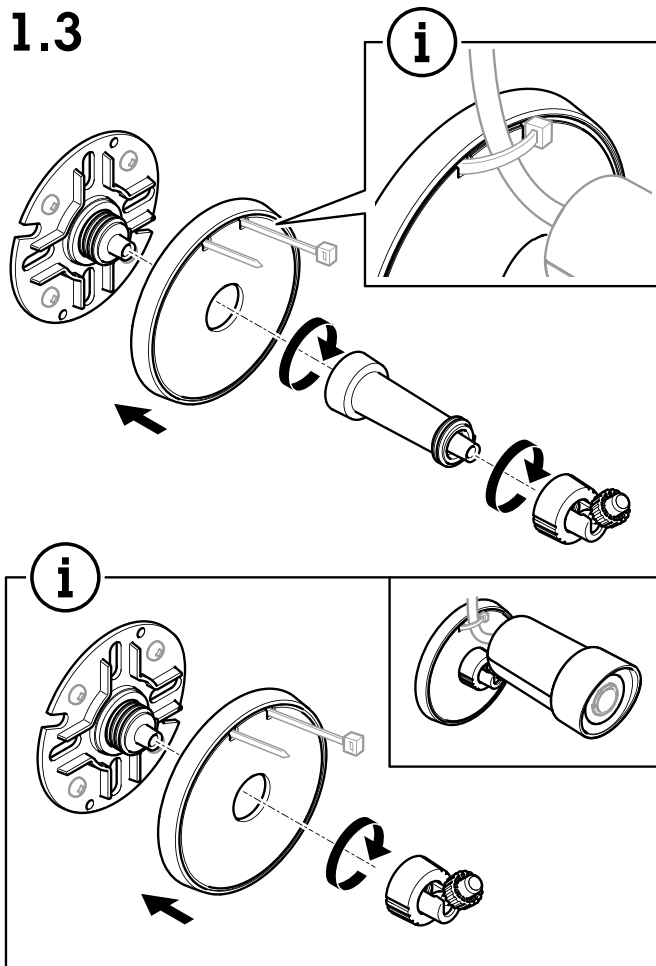


1.3




1.4

AXIS F2137-RE AXIS F2107-RE		 2.1
AXIS F2135-RE AXIS F2105-RE		 3.1
AXIS F2180-TE		 4.1
AXIS F2115-R		 6.1


2.1

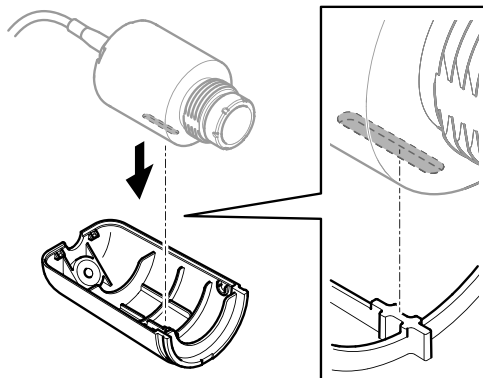


2.2

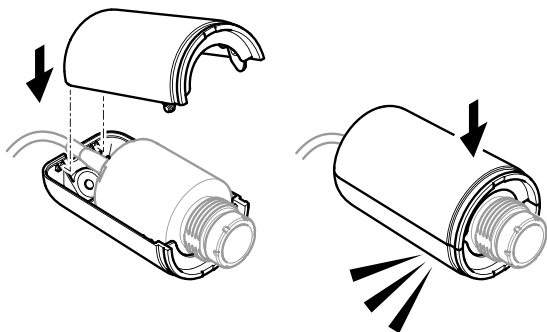


2.3

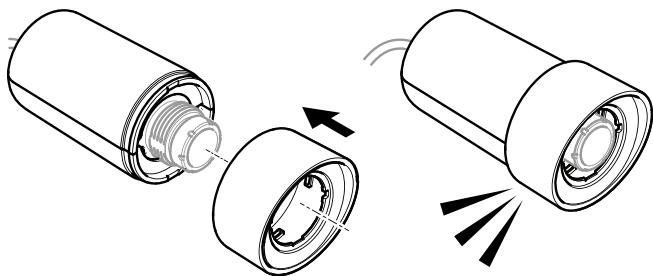


2.4

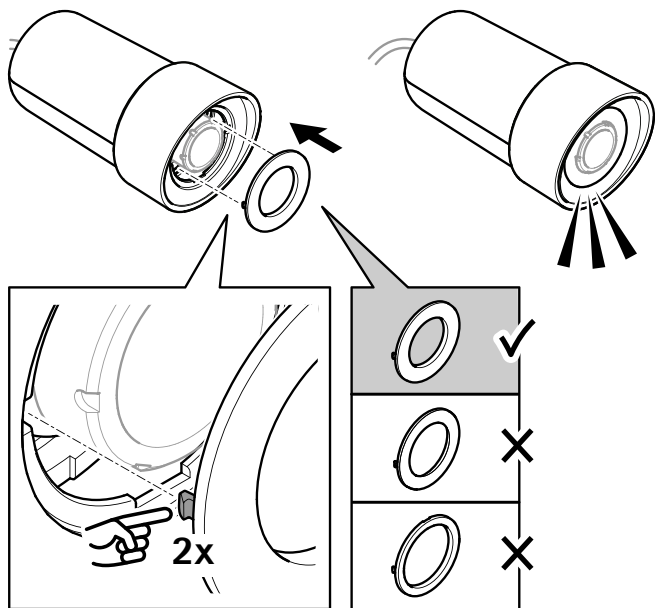


3.1

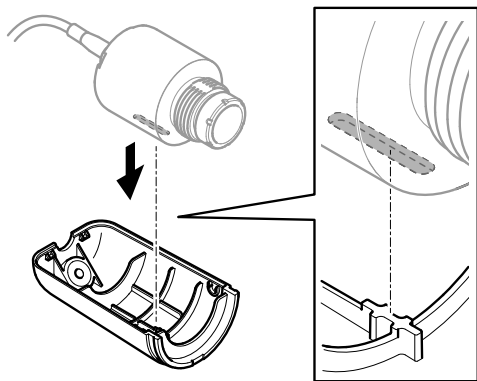


3.2

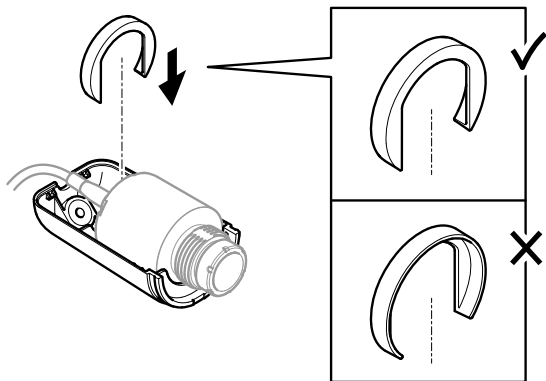


3.3

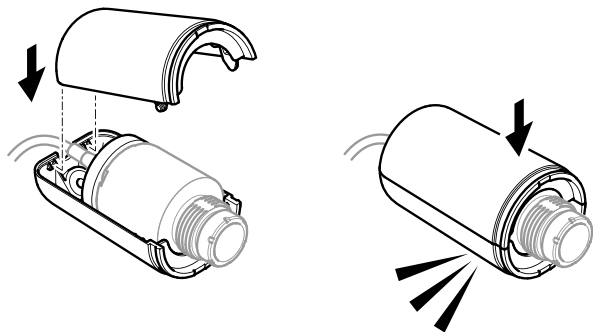


3.4

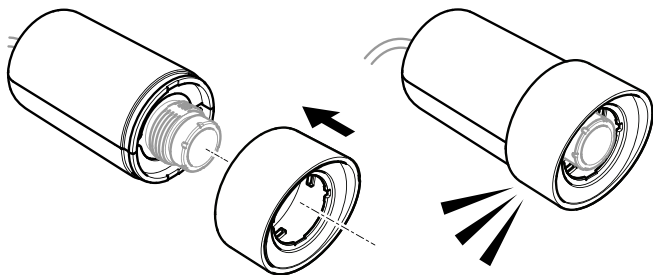


3.5

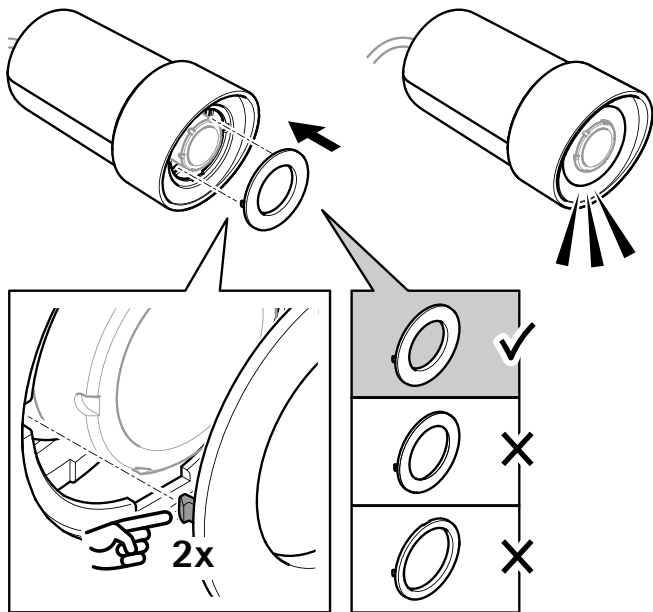


4.1

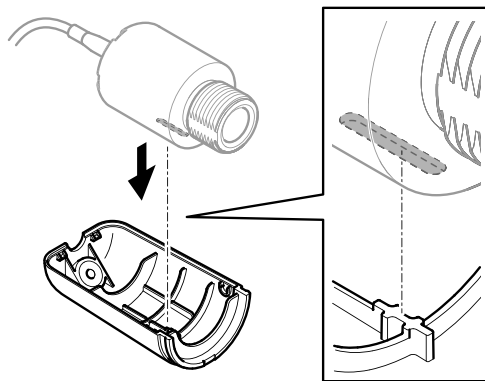


4.2

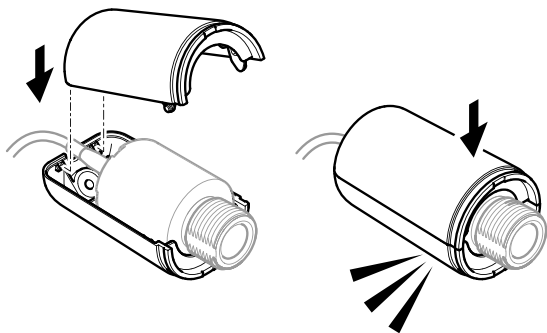


4.3

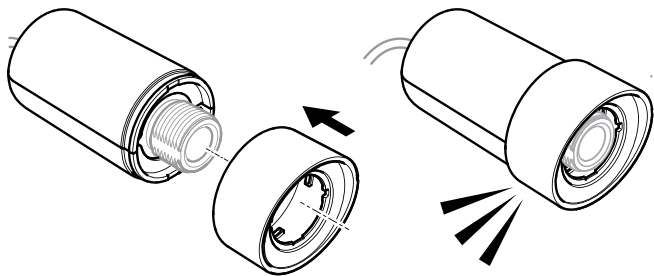


4.4

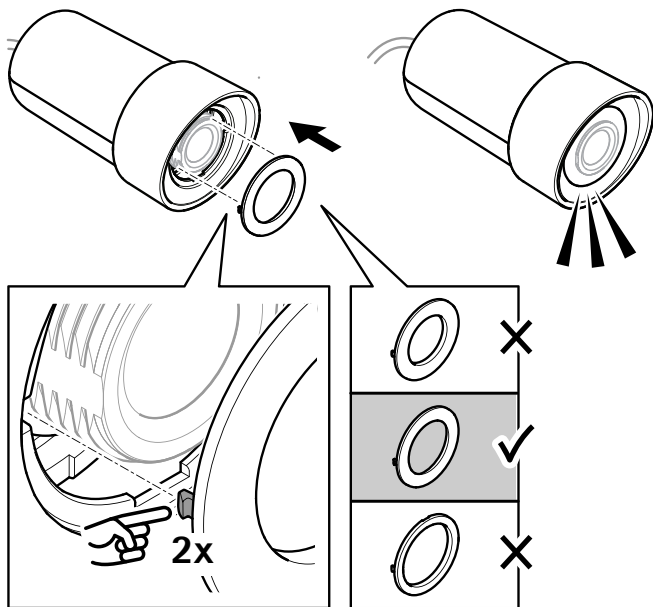


5.1

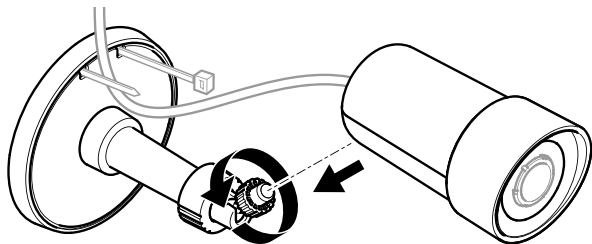


5.2

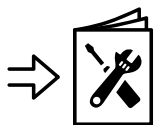


AXIS F2180-TE
AXIS F2137-RE
AXIS F2135-RE
AXIS F2115-R
AXIS F2107-RE
AXIS F2105-RE
Installation guide

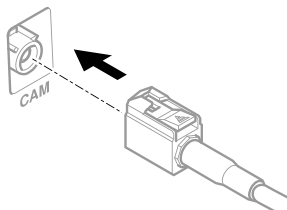


5.3

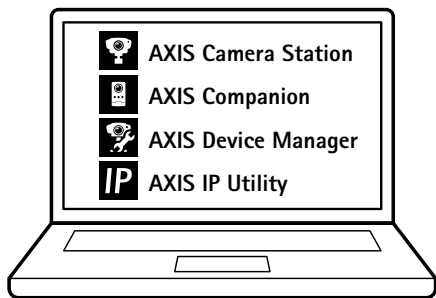


5.4

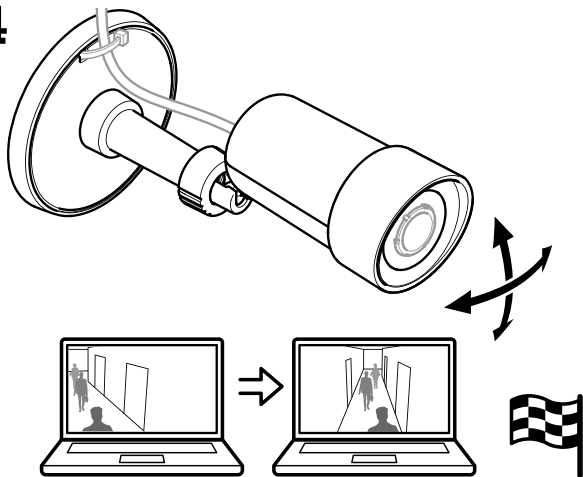


6.1

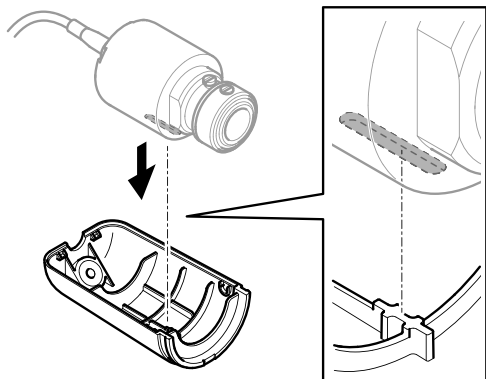


6.2

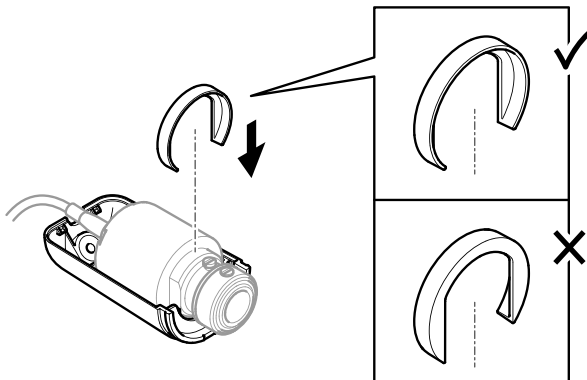


6.3

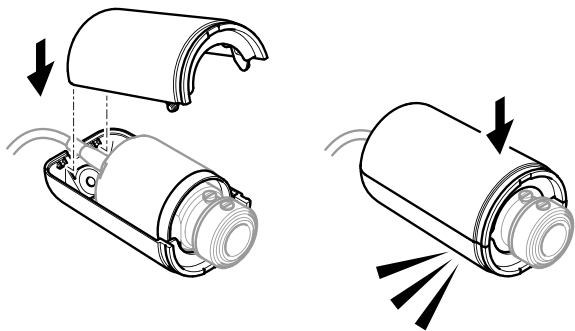


6.4

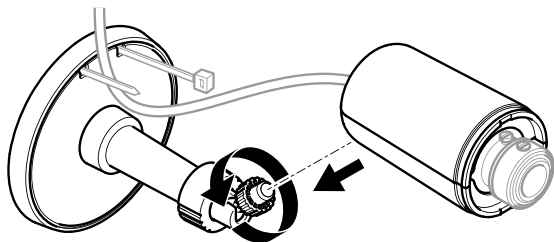

6.5

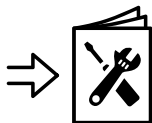


AXIS F2115-R
Installation guide

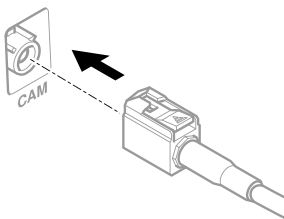





6.6




help.axis.com

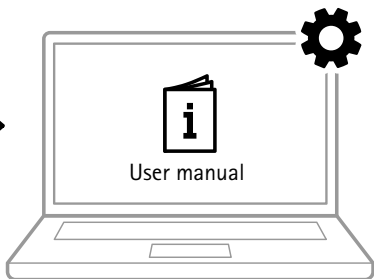


6.7

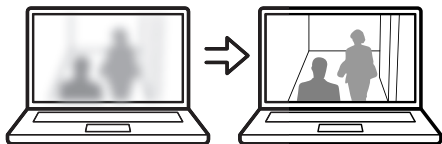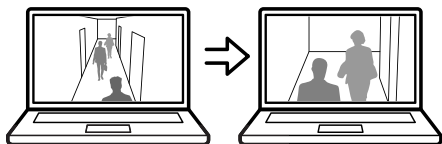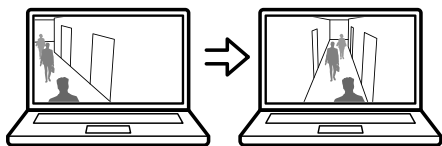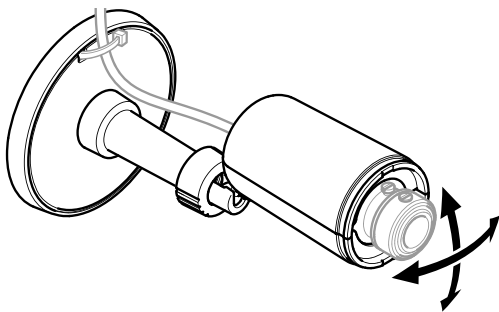

6.8

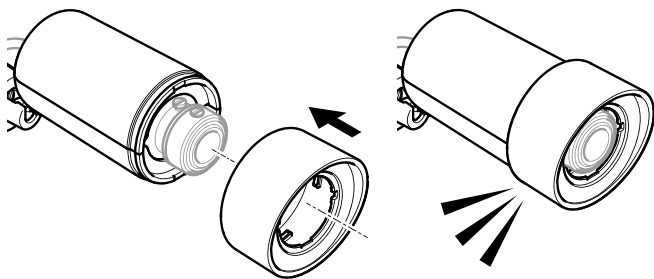

6.9

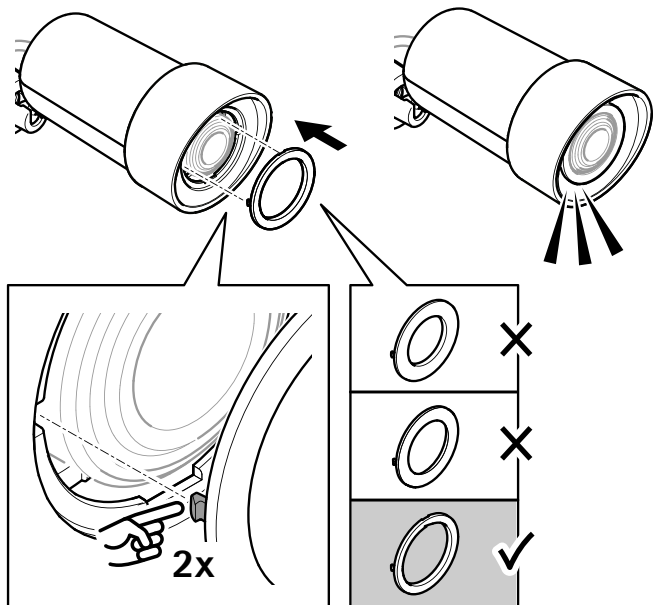



3446434

2025-11 (M2.2)

© 2025 Axis Communications AB