

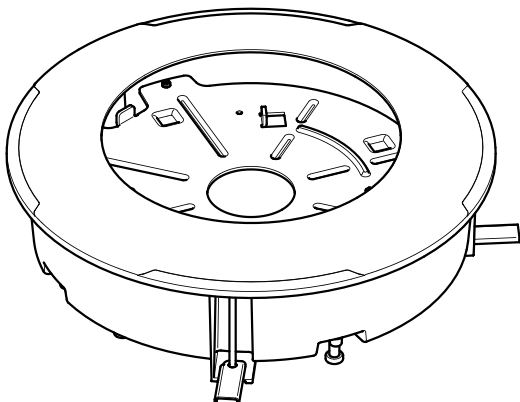
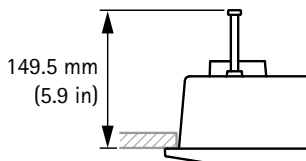



AXIS TP3208-E

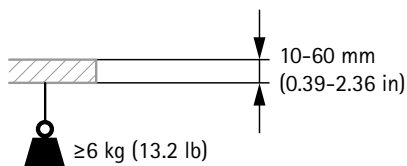


Installation guide
Guide d'installation
Installationsanleitung
Guida all'installazione
Guía de instalación
インストールガイド
Guia de instalação
Руководство по установке
설치가이드
安裝指南
Panduan instalasi
Kurulum kılavuzu

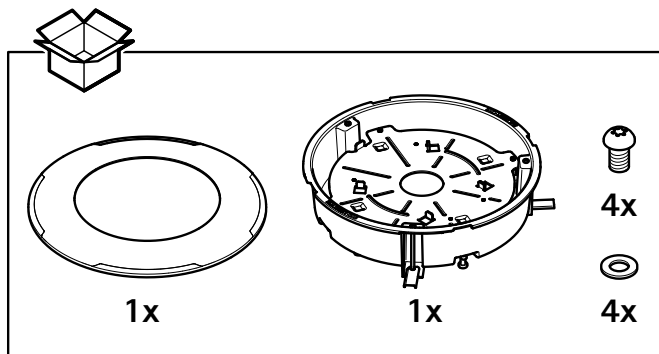



1.1

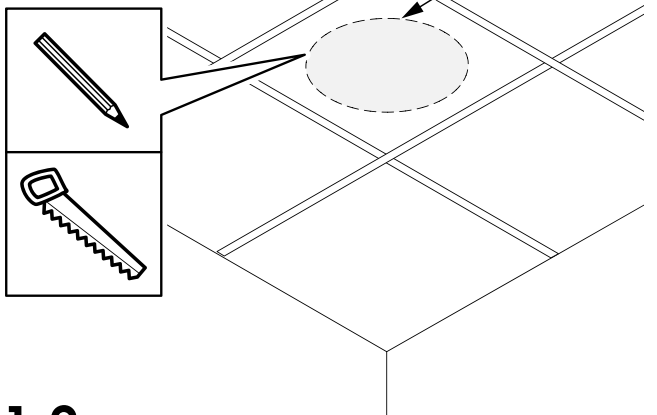


1.2

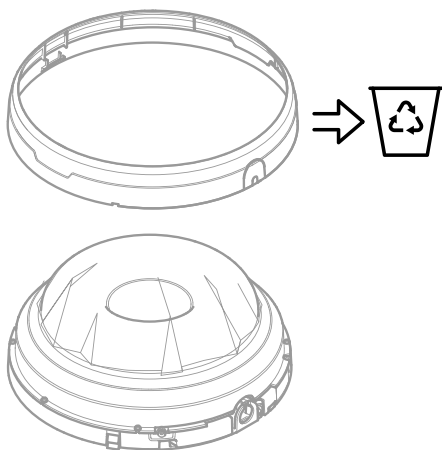


1.3

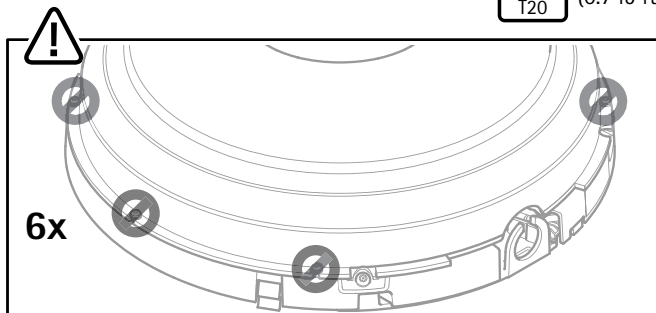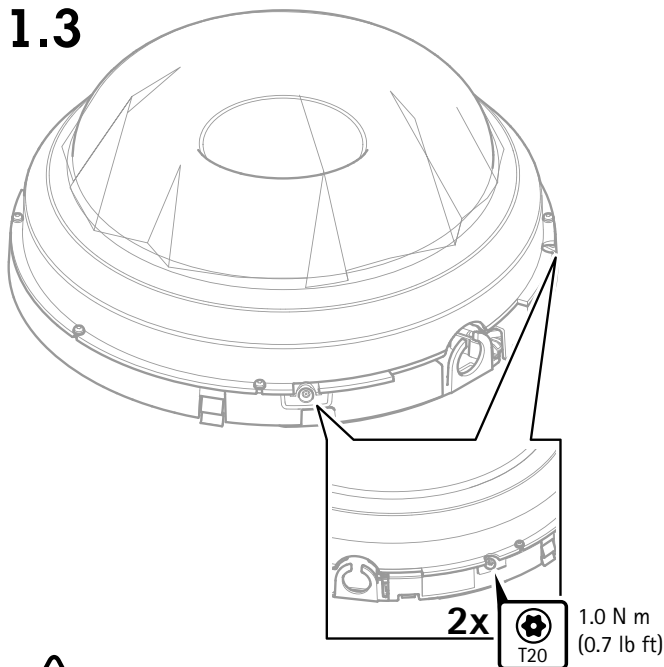


1.4

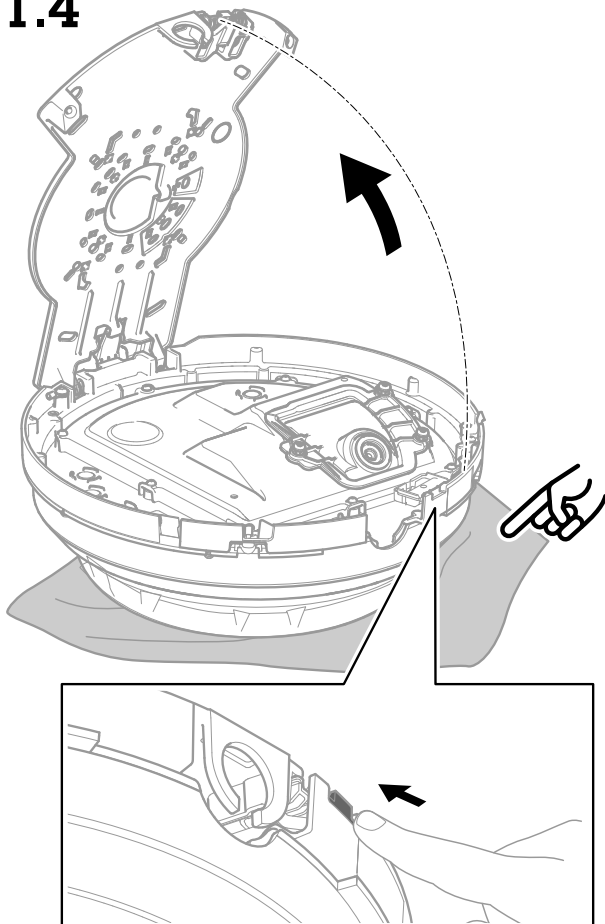


1.5

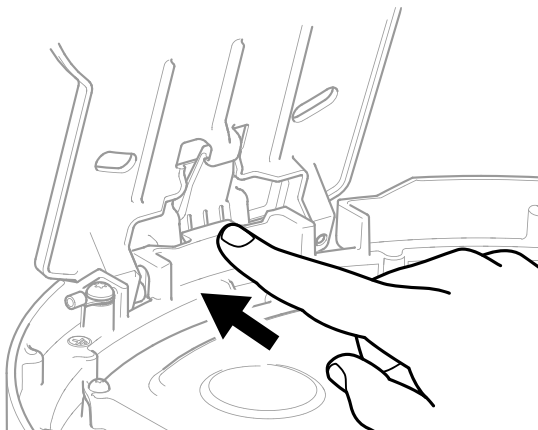


1.6

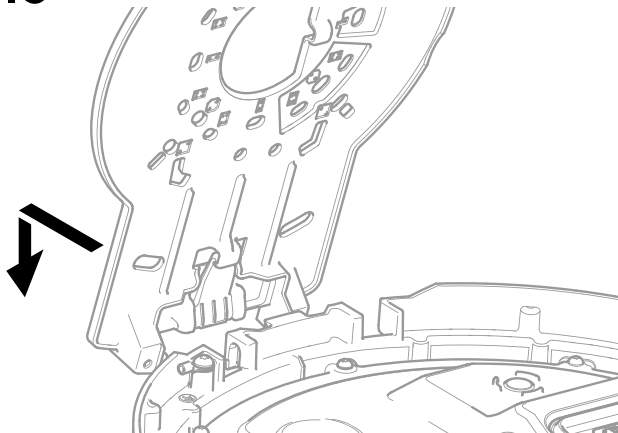


1.7

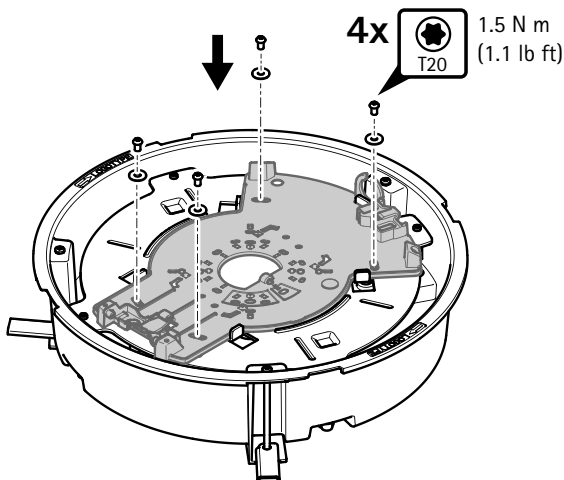


1.8

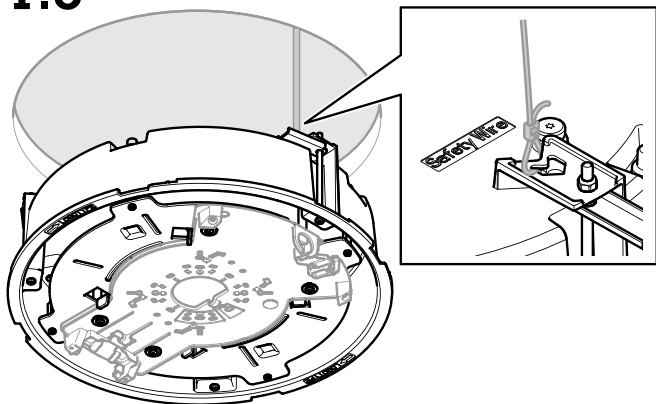


1.9

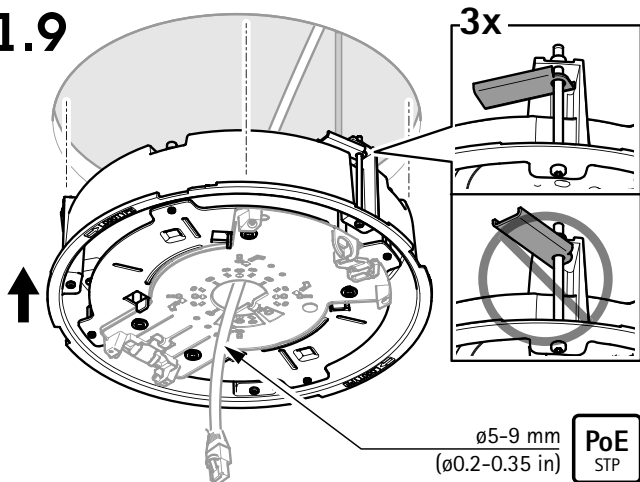


1.10

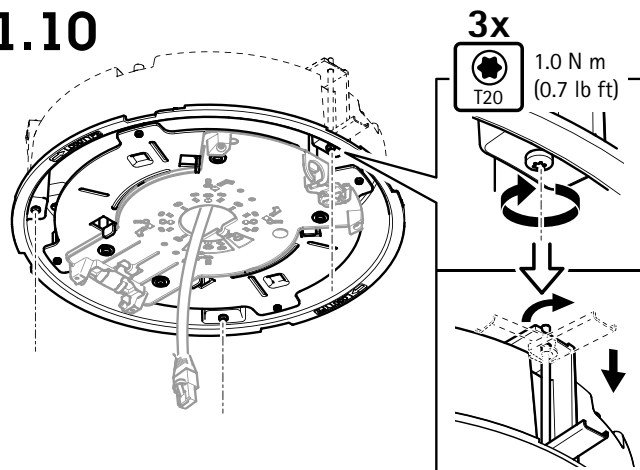



1.11

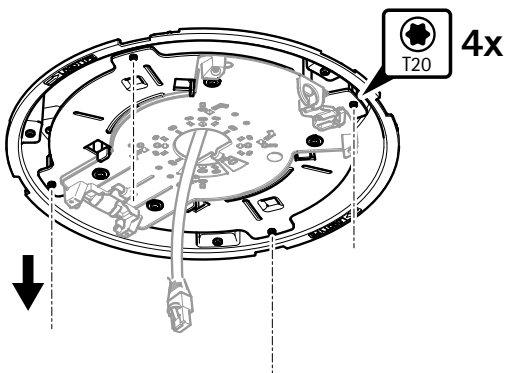

1.12

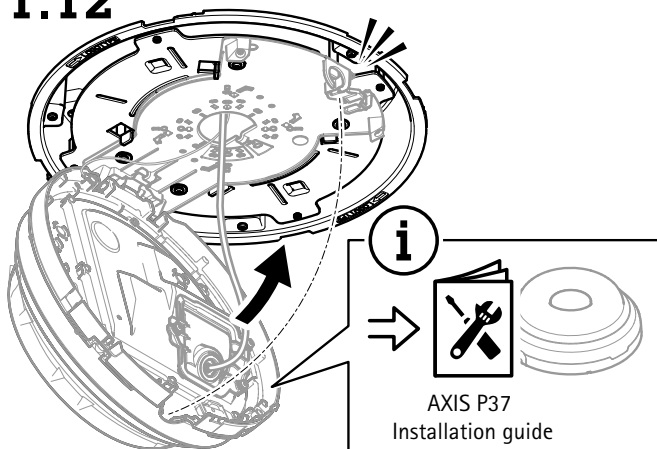

1.13

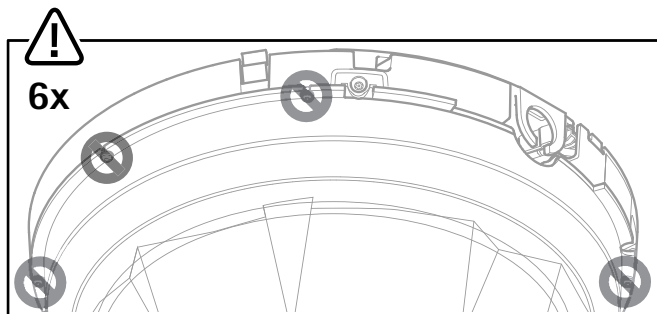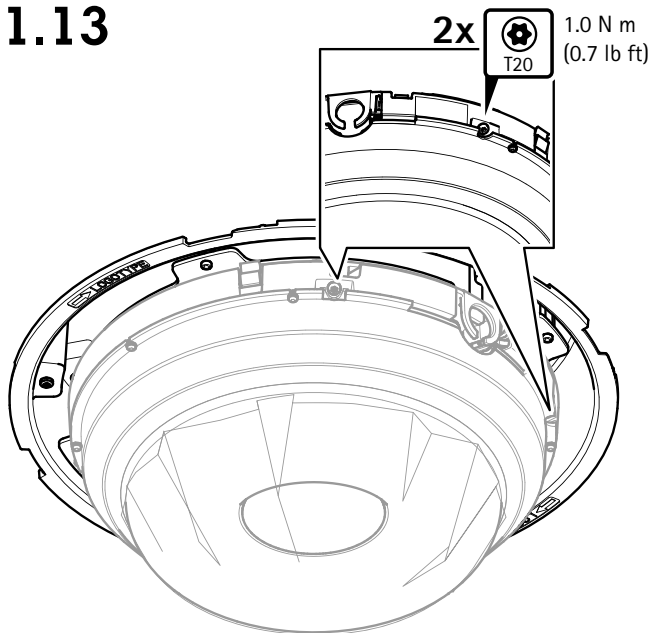


1.14


4x




1.0 N m
(0.7 lb ft)

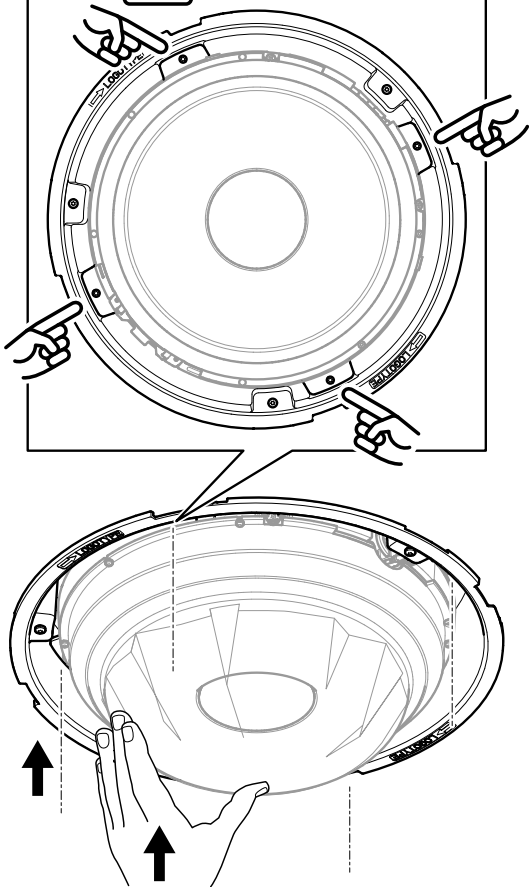

1.15


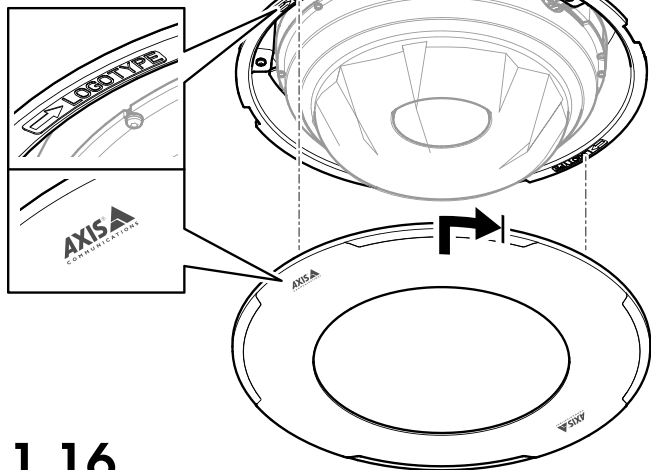


1.16

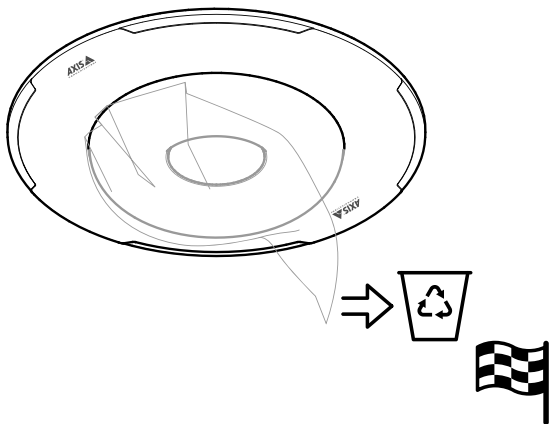



help.axis.com

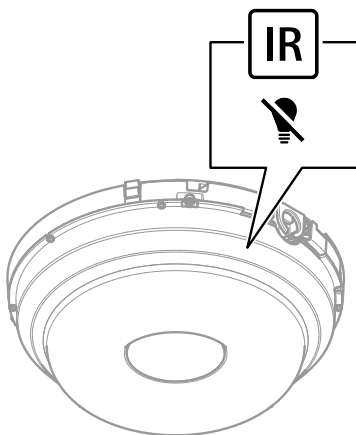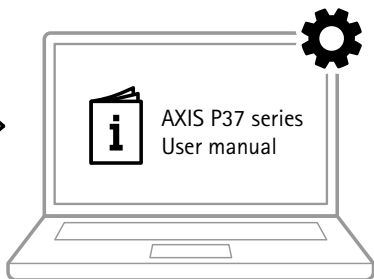



3424216

2025-12 (M2.2)

© 2025 Axis Communications AB