





AXIS TM3218

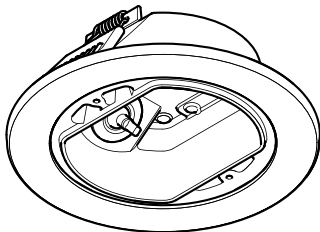


Installation guide
Guide d'installation
Installationsanleitung
Guida all'installazione
Guía de instalación
インストールガイド
Guia de instalação
Руководство по установке
설치가이드
安裝指南
Panduan instalasi
Kurulum kılavuzu

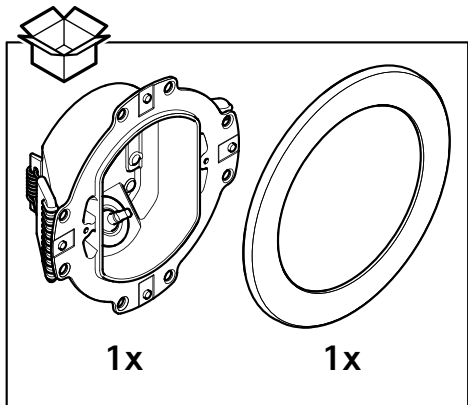


1.1

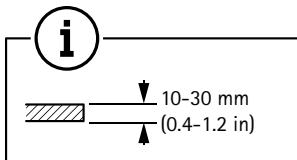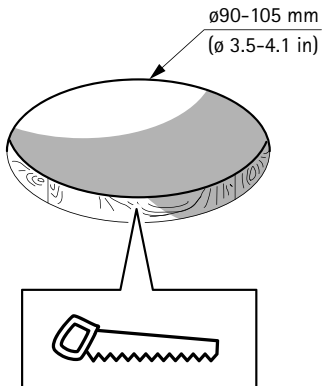


1.2

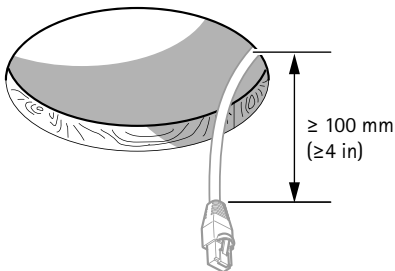


1.3

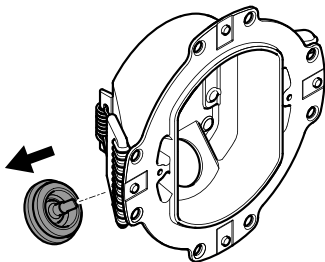


1.4

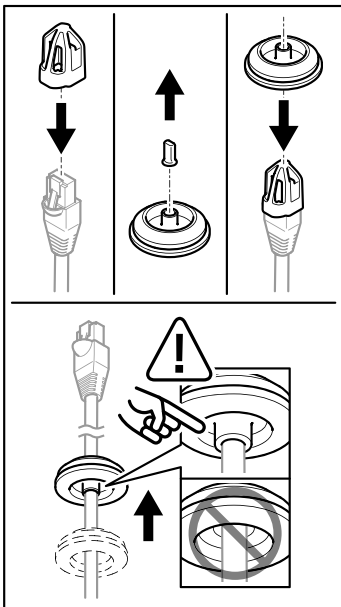


1.5

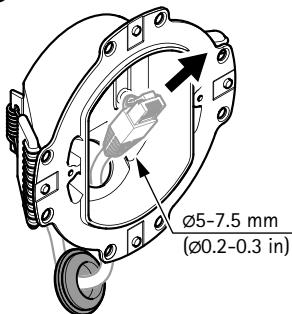


1.6

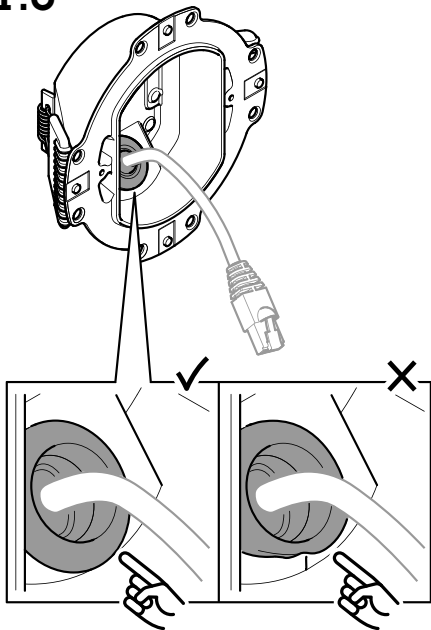

1.7

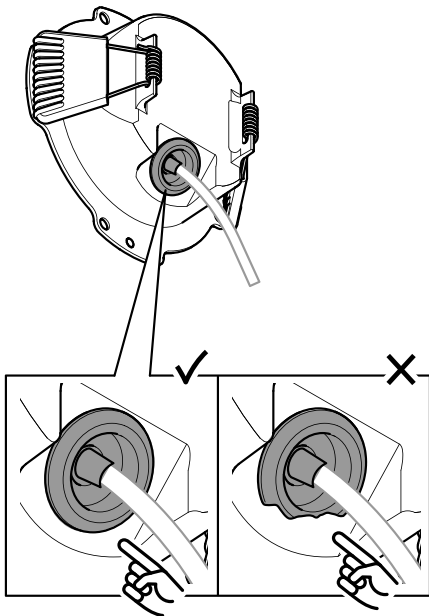


1.8

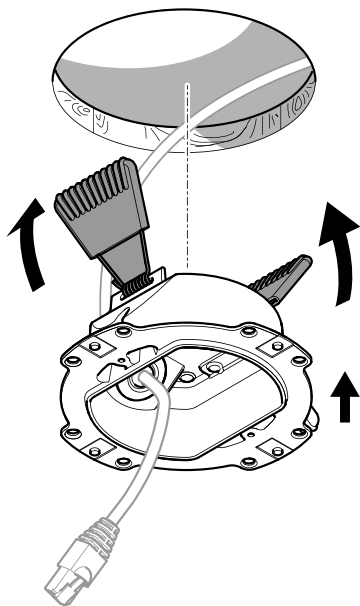


1.9


M3138-LVE

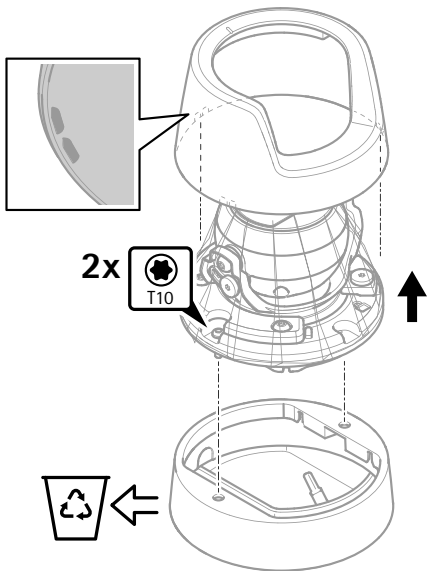



1.10

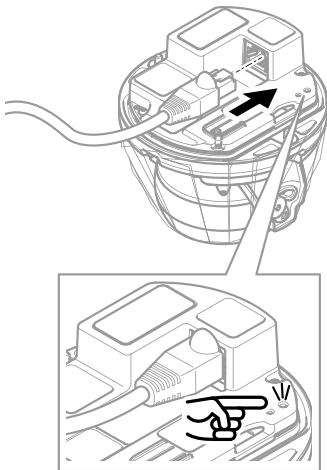



1.11

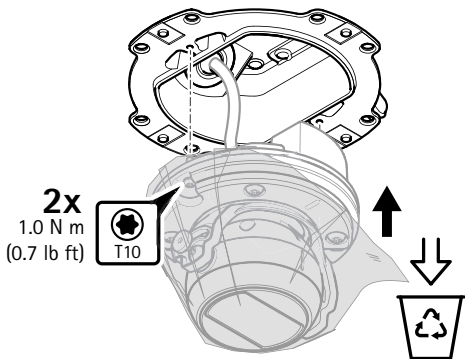


1.12

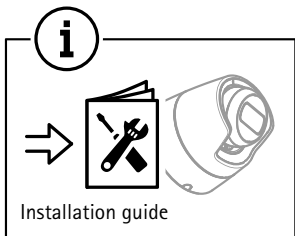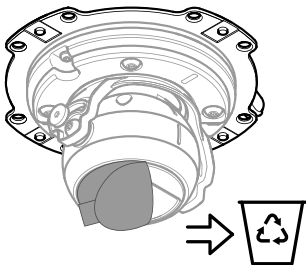

1.13

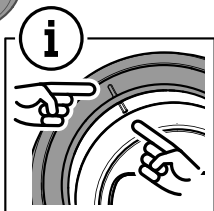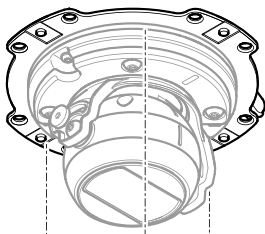

1.14

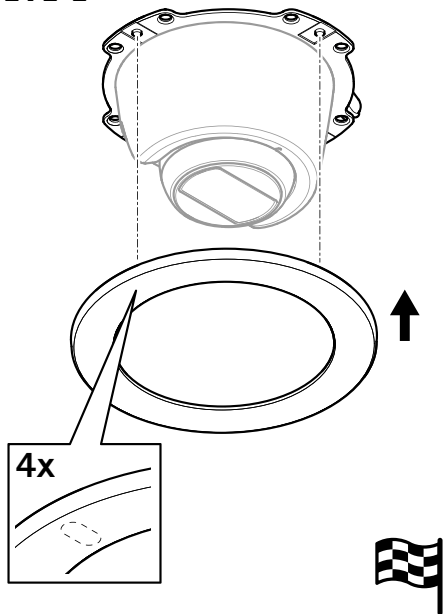



3613730

2026-06 (M3.2)

© 2026 Axis Communications AB