




AXIS TA9201




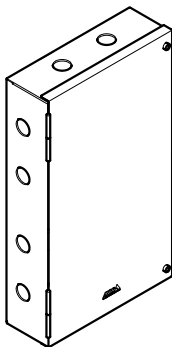


Installation guide
Guide d'installation
Installationsanleitung
Guida all'installazione
Guía de instalación
インストールガイド
Guia de instalação
Руководство по установке
설치가이드
安裝指南
Panduan instalasi
Kurulum kılavuzu


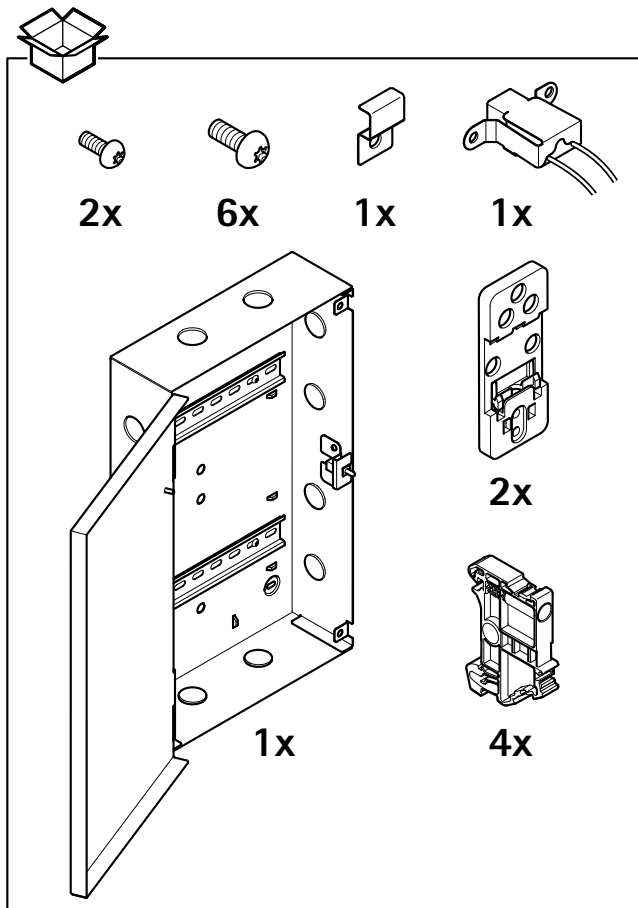


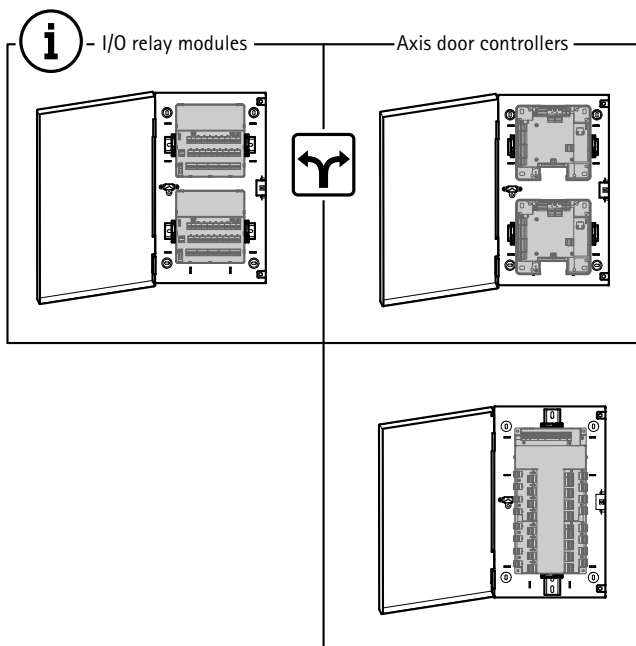

i

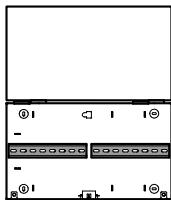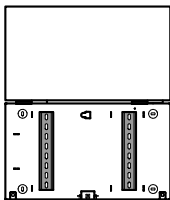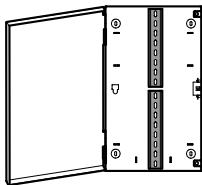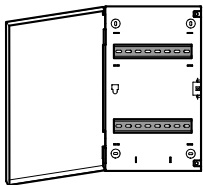


i

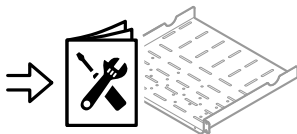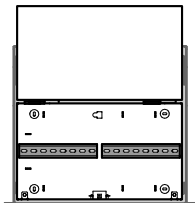


AXIS TW8100


1.1

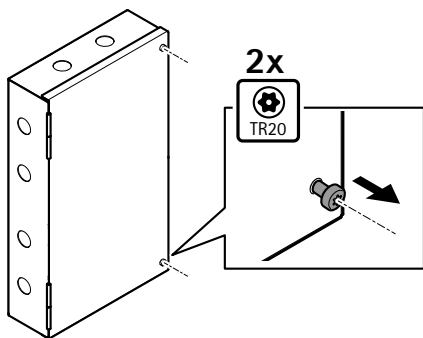


1.2




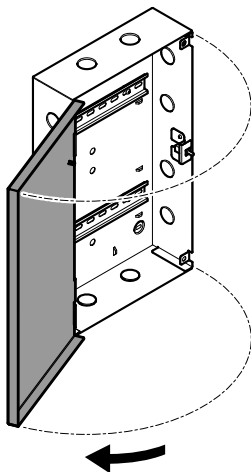



1.3

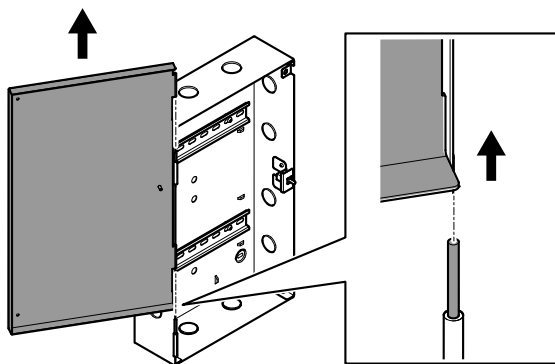


1.4

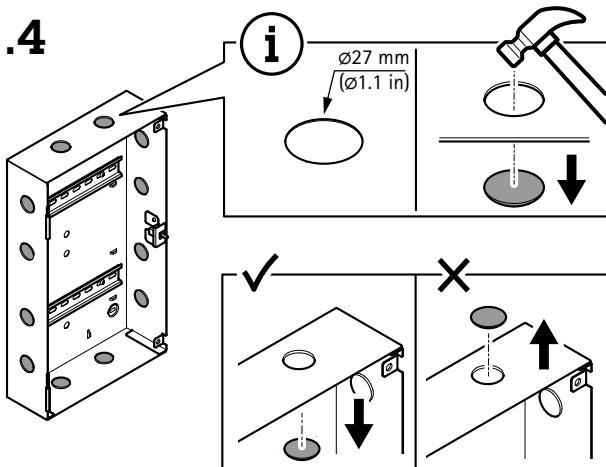

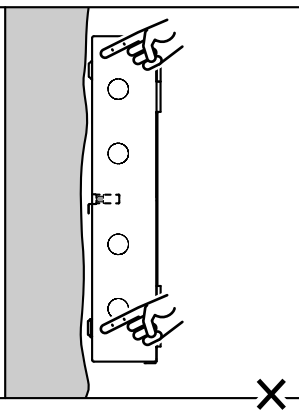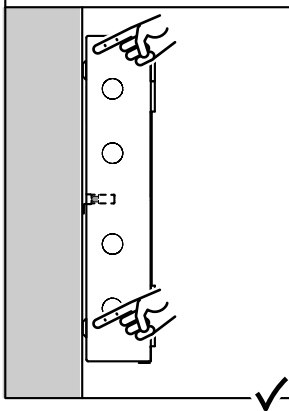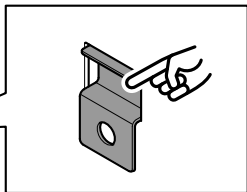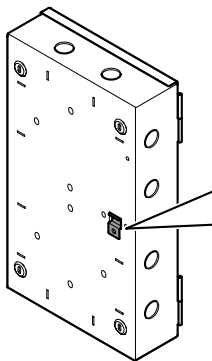


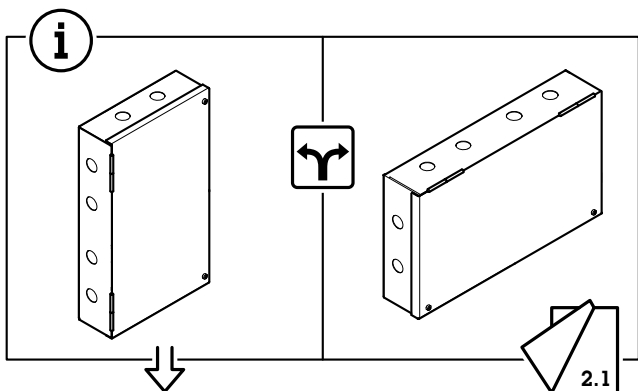


1.5

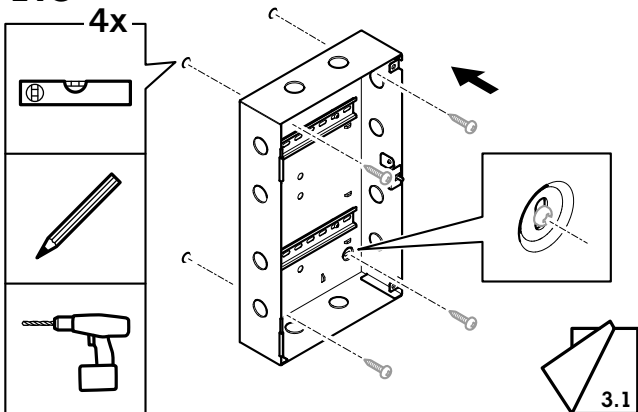


2.1

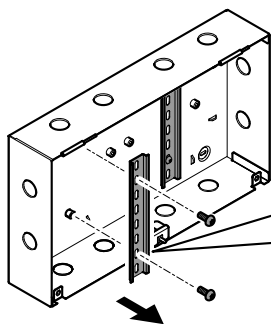


2x

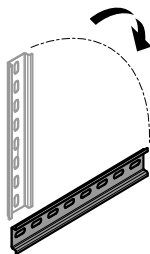


2.2

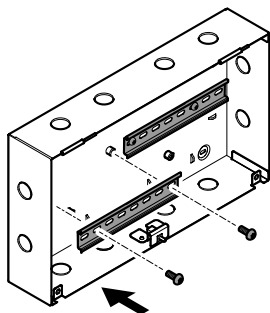


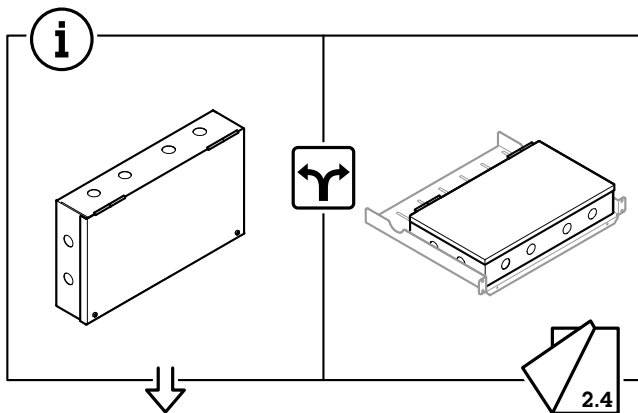



2.3

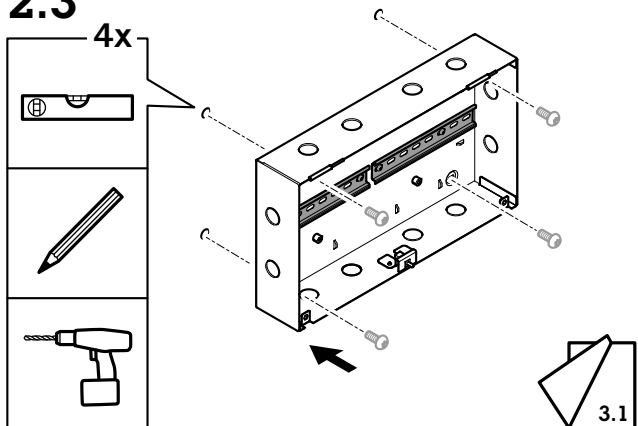


2.4

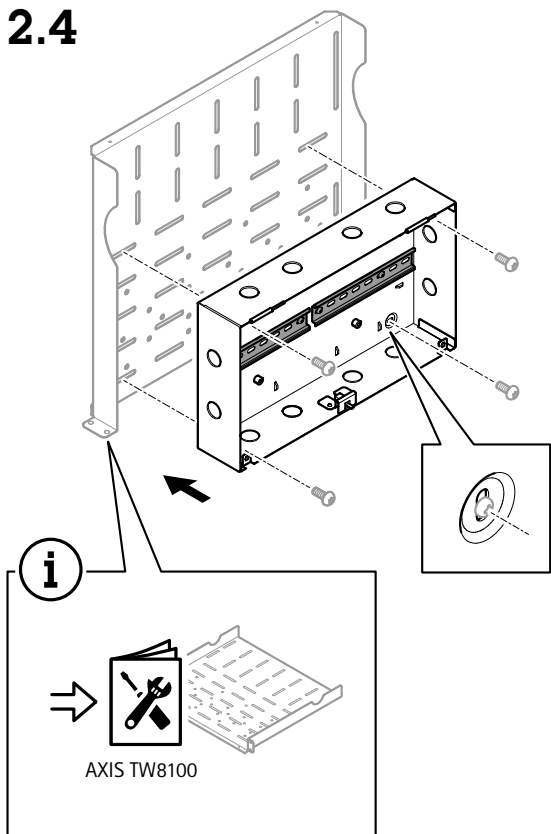


3.1

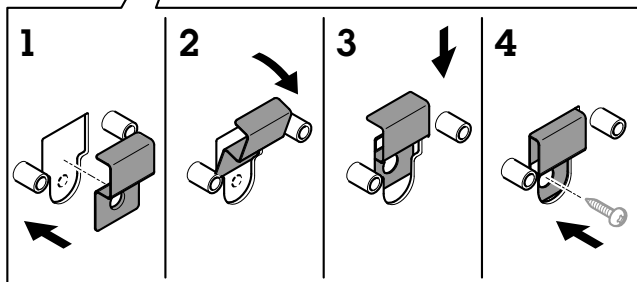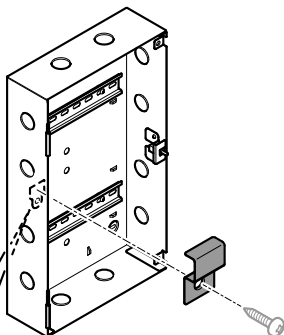



3.2

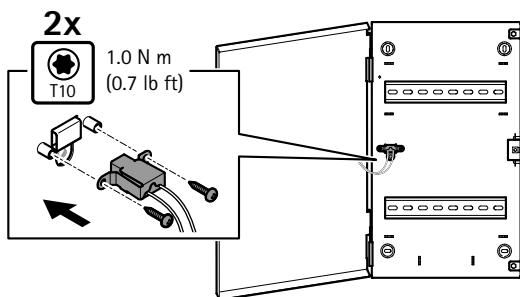


3.3

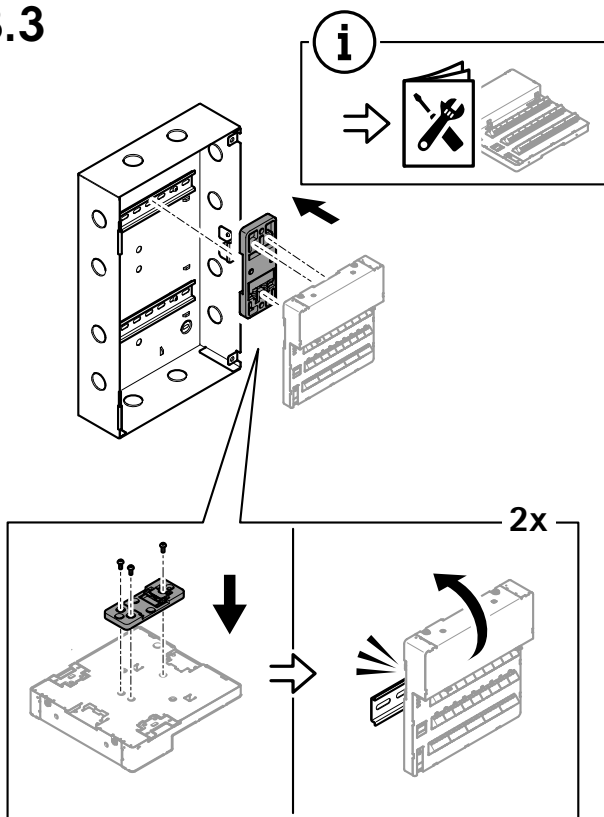


3.4

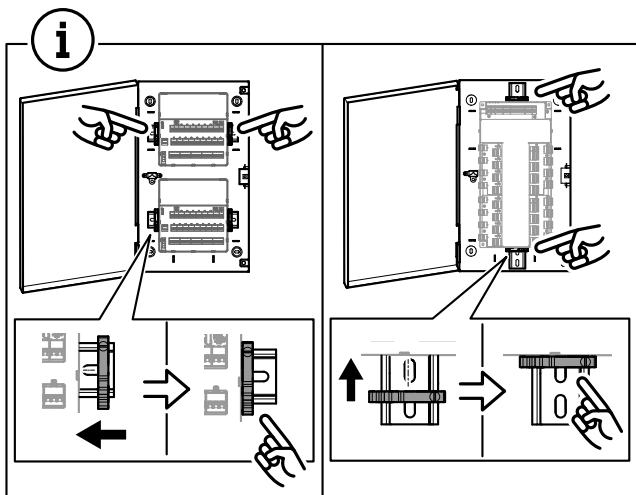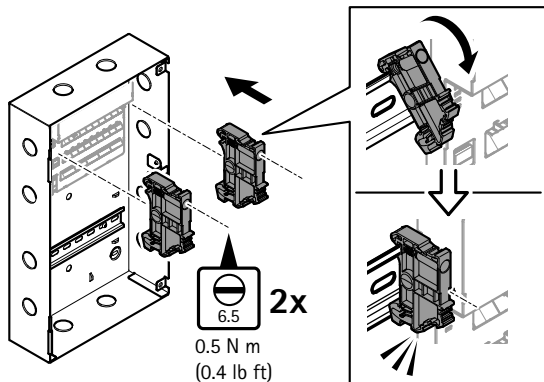


3.5

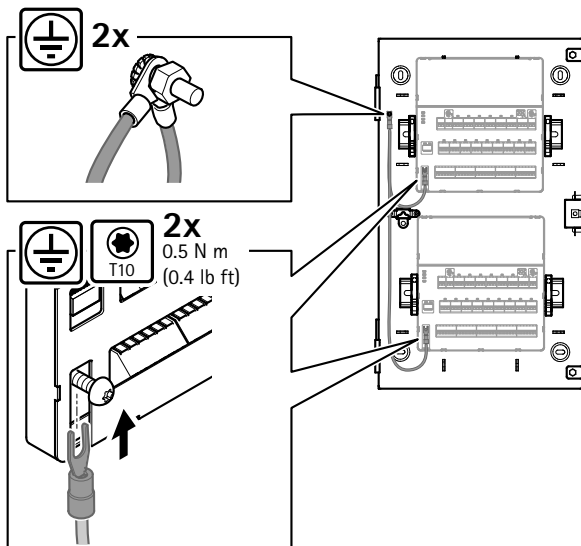


3.6

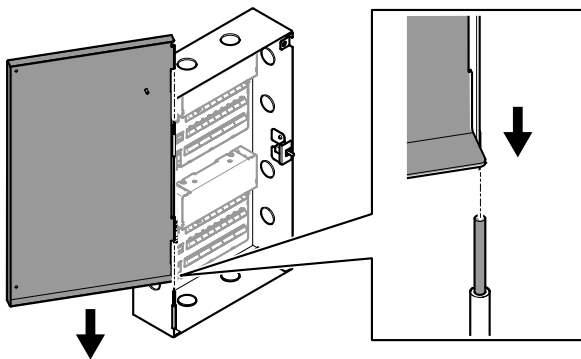


3.7

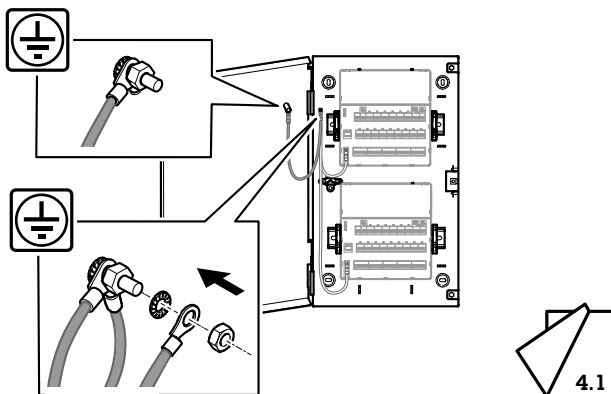

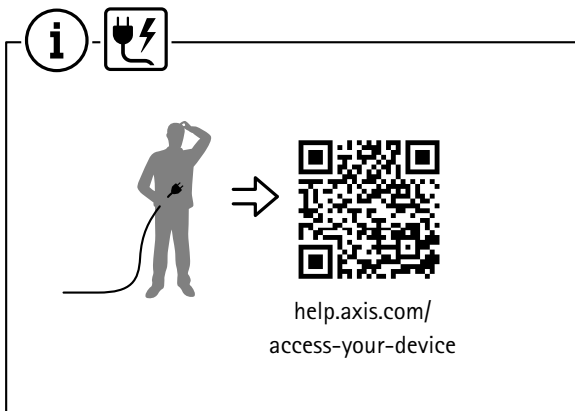

4.1

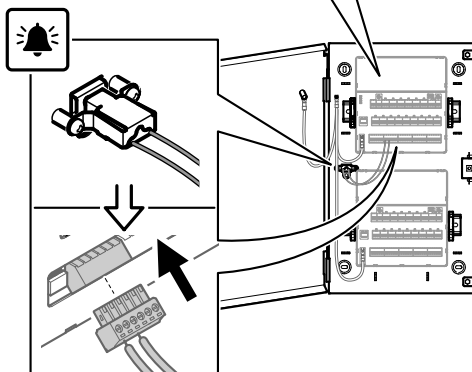



3592727

2026-09 (M2.3)

© 2026 Axis Communications AB