


How to connect power to AXIS T90B40 IR-LED Illuminator

Connection

Please be aware that AXIS T90B40 IR-LED requires two pieces of Mains adaptor PS24 in order to receive enough voltage.

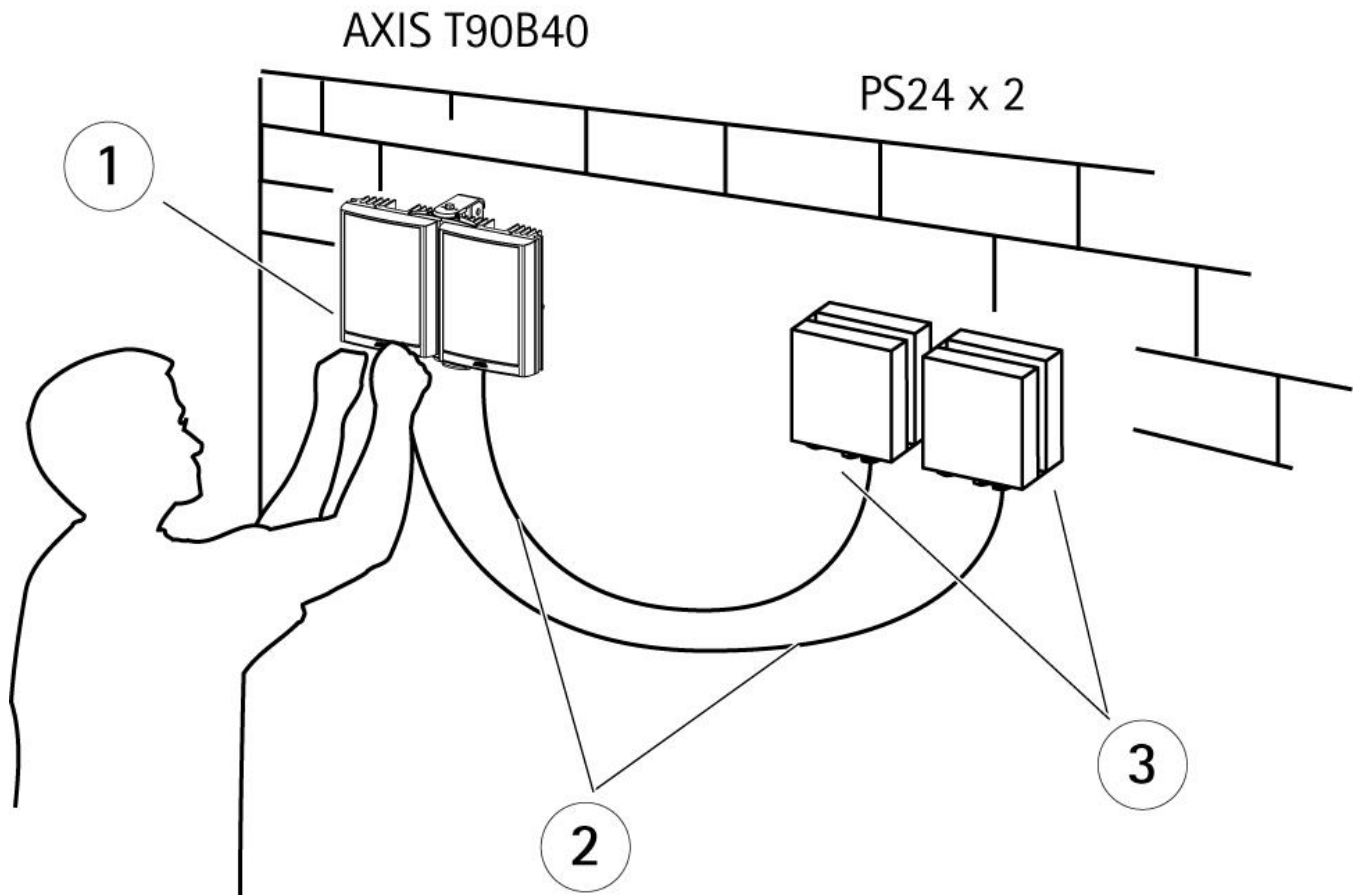

1. AXIS T90B40 IR-LED
2. Power cables
3. Power supply, Mains adaptor PS24