

# **Windows NT 4 and printing to an Axis print server using LPR**

## **Preparing Windows NT 4 for LPR/LPD printing**

1. Open the Control Panel
2. Click the Network icon
3. Select Protocols
4. Add TCP\IP Protocol
5. Select Services
6. Add MS TCP\IP Printing

## **Installing a printer**

1. Open the Control Panel
2. Open the Printers folder
3. Click Add Printer
4. Select My Computer and go to Next
5. Select Add Port
6. In Printer Ports, select LPR Port, and click New Port
7. In Add LPR compatible printer, enter the name or IP-address of the Axis print server as the server providing lpd
8. Enter 'pr1', 'pr2', ..., 'pr8' as the name of printer or print queue on that server
9. Choose a printer driver suitable for your printer and go to Next
10. Enter a printer name and go to Next
11. Select Shared if you wish to share the printer over the network
12. Then enter a share name and go to Next and Finish

## **Using a shared printer from a Windows 95 client**

1. Open the Control Panel
2. Open the Printers folder
3. Click Add Printer
4. Select Network Print Server and go to Next
5. Enter the path to the network printer or browse the network to find and select it
6. Go to Next and Finish