


Axis Print Servers

High Performance Multiprotocol
Print Servers for Virtually All Networks

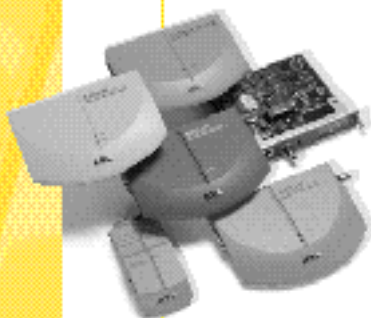

U s e r ' s
P r i n t i n g
G u i d e

AXIS PrintPoint 140 BJC User's printing guide

This guide details the procedures for printing through the AXIS PrintPoint 140 BJC network print server, once it has been properly installed. *Please refer to the User's Manual or the Quick Installation Guide for detailed installation instructions.*

AXIS PrintPoint 140 BJC makes printing easier

The AXIS PrintPoint 140 BJC Network Print Server is suitable for Ethernet networks. It connects to the network via a twisted pair (10baseT) cable. The AXIS PrintPoint 140 BJC is provided with a single high-speed parallel port, that can connect directly into the parallel port of the Bubble Jet printer.

Fast and easy to use

The AXIS PrintPoint 140 BJC is extremely user friendly and can communicate with several major computer systems and networking protocols. This makes it the ideal print server solution for mixed networking environments.

It facilitates printer connection to anywhere on your network and allows easy access to the print resources on your network.

The AXIS PrintPoint 140 BJC is also extremely fast. The data throughput is estimated at around 390 kbytes/second. High speed Centronics communication, such as Hewlett-Packard Fast-Mode, is also supported.

Windows

To print from Windows 3.1, Windows for Workgroups, Windows 95 or Windows NT, proceed as follows:

1. Select Print... from the File menu within your application. If the printer you want to use is the default printer, just proceed with printing from your application as normal.
2. If the required printer is not selected as default, click Setup... in the Print Document window and then select the name of the required printer, i.e. the name assigned to the printer during installation. Your Network Administrator will be able to supply you with the printer name.
3. Setup any of the parameters as needed, e.g. paper size, source, etc. Click OK and then proceed with your printing as normal.

OS/2

To print via the AXIS PrintPoint 140 BJC from an OS/2 workstation, proceed as follows:

1. Select Print... from the File menu within your application.
2. In the Print Document window, select the Queue name for the required printer. Your Network Administrator will supply you with the name.

AXIS PrintPoint 140 BJC User's Printing Guide

Part No: 15639

Revision: 1.0, Date: July 1997

Copyright © Axis Communications AB, 1995-1997

China (Beijing Office)

Axis Communications Ltd. Beijing Office

Phone: +86 - 10 6510 2705/6/7/8, Fax: +86 - 10 6510 2703

Email: axisbj@public3.bta.net.cn

China (Shanghai Office)

Axis Communications Ltd. Shanghai Office

Phone: +86 - 21 6445 4522, Fax: +86 - 21 6445 4757

Email: axissh@npc.haplink.co.cn

England

Axis Communications (UK) Ltd

Phone: +44 1753 714310, Fax: +44 1753 540990

Email: info.uk@axis.com

France

Axis Communications SA

Phone: +33 1 49 69 15 50, Fax: +33 1 49 69 15 59

Email: info@fr.axis.com

Hong Kong

Axis Communications Ltd.

Phone: +852 2836 0813, Fax: +852 2573 5935

Email: info@axis.com.hk

Japan

Axis Communications K.K.

Phone: +81 3 3663 8801, Fax: +81 3 3663 8802

Email: info@axiscom.co.jp, URL: <http://www.axiscom.co.jp/>

Singapore

Axis Communication Pte Ltd

Phone: +65 250 8077, Fax: +65 352 1655

Email: info@axis.com.sg

Sweden

Axis Communications AB

Phone: +46 46 270 18 00, Fax: +46 46 13 61 30

Email: info@axis.com, URL: <http://www.axis.com/>

USA

Axis Communications Inc.

Phone: 1-800-444-AXIS, (617) 938-1188

Fax: (617) 938-6161

Email: info@axisinc.com, URL: <http://www.axisinc.com/>

