

## Getting Your AXIS StorPoint CD+ Up & Running

- 1) Connect your AXIS StorPoint CD+ to the network and turn it on.

- 2) **Ethernet Address - Serial Number**

You will need to know the Ethernet address of your AXIS StorPoint CD+. The Ethernet address is the same as the serial number which you will find on the label on the underside of the server unit and at the back of the tower.

You can note the serial number here:


\_\_\_\_\_

- 3) **Automatic IP Setting (DHCP)**

Try accessing your AXIS StorPoint CD+ via your standard web browser. Use the default server name *AXIS<nnnnnn>* where *<nnnnnn>* are the last six digits of the serial number.

### Example

The serial number of your AXIS StorPoint CD+ is 00408C3E5207. Enter *AXIS3E5207* in the address/location field:

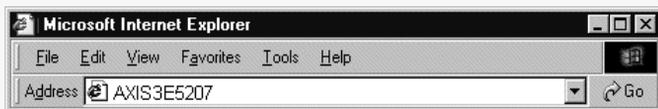

- If the **File View** page appears in your web browser, the IP address was set automatically when you connected the AXIS StorPoint CD+ to your network. You can skip directly to step 6.
- If the connection cannot be established, you must set the IP address manually using one of the methods described in step 4.

**Note:** *This will not work in NetWare environments.*


- 4) **Setting the IP Address Manually**

Acquire an unused IP address for your AXIS StorPoint CD+ from your Network Administrator. Use one of the following methods to set the IP address. For more information, refer to the AXIS StorPoint CD+ User's Manual which is available from the AXIS Network Product CD and from the Axis web site at [www.axis.com](http://www.axis.com).

**Note:** *The new IP address must be set within 30 minutes after restarting your AXIS StorPoint CD+.*

#### 4a) Windows Networks - Web Browser

In most Windows environments, you can use a standard web browser to set the IP address. Enter the following in the address/location field:

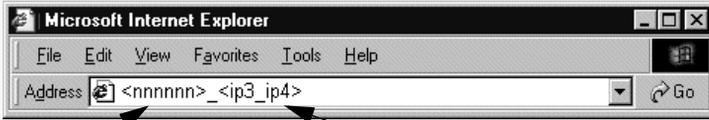


<nnnnnn> are the last six digits of the **serial number**, e.g. 3E5207 for the serial number

<ip3\_ip4> the last two groups of the **desired IP address**, e.g. 253\_80 for the IP address

The AXIS StorPoint CD+ retrieves the first two groups of the new IP address from the subnet.

#### Example

The serial number of your AXIS StorPoint CD+ is 00408C3E5207 and you want to assign it the IP address 192.16.253.80. Your Windows client has the IP address 192.16.6.40. Enter 3E5207\_253\_80 in the location/address field.

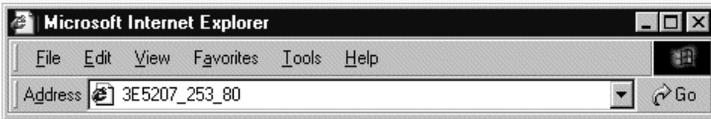

**Note:** If the connection cannot be established, set the IP address using ARP described in 4b or refer to the AXIS StorPoint CD+ User's Manual which is available on the AXIS Network Product CD.

#### 4b) Windows - ARP

In Windows you can set the IP address using the **arp -s** command:

```
arp -s <IP address> <Ethernet address>  
ping <IP address>
```

#### Example

```
arp -s 192.16.253.80 00-40-8C-3E-52-07  
ping 192.16.253.80
```

The host will return e.g. 'Reply from 192.16.253.80'. This indicates that the IP address is set and that the communication is established.

**Note:** The *arp -s* command may vary from system to system. For more information, refer to the AXIS StorPoint CD+ User's Manual available from the AXIS Network Product CD or from the Axis web site at [www.axis.com](http://www.axis.com)

4c)

### UNIX and OS/2 - ARP

In UNIX and OS/2, you can set the IP address using the **arp -s** command:

```
arp -s <IP address> <Ethernet address> temp  
ping <IP address>
```

#### Example

```
arp -s 192.16.253.80 00:40:8C:3E:52:07 temp  
ping 192.16.253.80
```

The host will return e.g. '192.16.253.80 is alive'. This indicates that the IP address is set and the communication is established.

**Note:** *The arp -s command may vary from system to system. For more information, refer to the AXIS StorPoint CD+ User's Manual available from the AXIS Network Product CD or from the Axis web site at [www.axis.com](http://www.axis.com)*

4d)

### Macintosh - Text Editor

In Macintosh, you set the IP address using a text editor:

1. Open the **Chooser** from the **Apple** menu.
2. Click the **AppleShare** icon.
3. From the **Select a file server** list, select **AXIS<nnnnnn>\_AT** where **<nnnnnn>** are the last six digits of the serial number, e.g. **3E5207**.
4. Select **Registered User** and click **Connect**. By default, the Name is set to **root** and the Password is set to **pass**.




5. Select the **System** folder and click **OK**. Open the **System** icon created on the desktop and select the **Server Properties** folder.
6. Open the **config.ini** file.
7. In the **[IP]** section, set **InternetAddress** = *<the desired IP address>*.
8. In the **[Server]** section, set **Restart** = **yes** to restart the server.
9. Select **Save** from the **File** menu.


**Note:** *The AppleTalk protocol must be enabled on your client.*

## 5) Accessing Your AXIS StorPoint CD+

Access the web interface of your AXIS StorPoint CD+ by entering the **IP address** of your AXIS StorPoint server in the location/address field of your web browser.

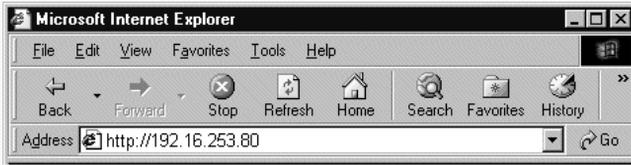

- 6) The **File View** page appears. Click the **admin** button to access the Administration web pages. You will be prompted for the Server password the first time during a session.

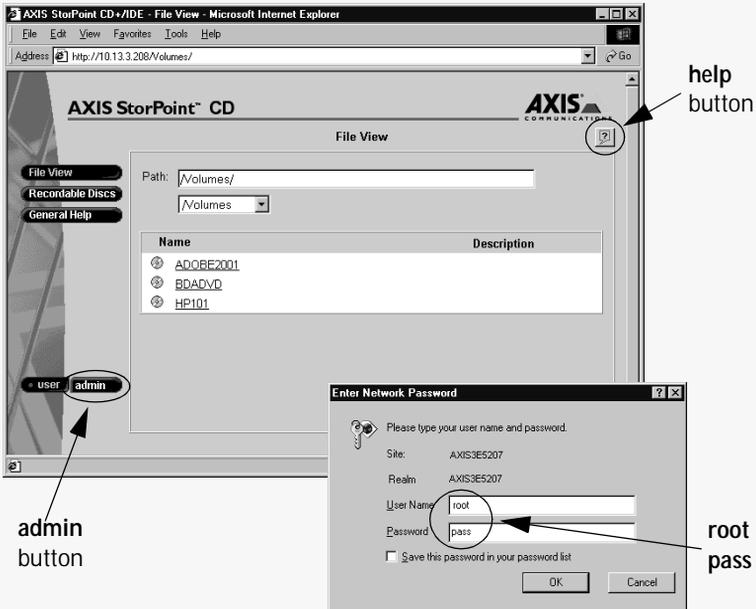

**Note:** The default user name and password are **root** and **pass**.

- 7) For more information, refer to the AXIS StorPoint CD+ User's Manual, available from the AXIS Network Product CD or from the Support section on the Axis web site at [www.axis.com](http://www.axis.com)