DAILY USE GUIDE

AXIS W110 Body Worn Camera
AXIS W111 Body Worn Camera

Camera features




Button actions

Action	Button presses	
Power on/off	Press the **Power button** to turn on. Hold the **Power button** for 5 seconds to turn off.	
Mute audio on/off	Hold the **Function button** for 3 seconds.	
Activate live streaming	Double-press the **Function button.** 2x	
Check remaining battery	Press the Function button once.	
Record	Press the Recording button once or twice.	
Add bookmark	Press the **Recording button** once during active recording.	
Stop recording	Hold the **Recording button** for 3 seconds.	
Enable wireless for AXIS Body Worn Assistant	Press the **Top** and **Function buttons** at the same time.	2 3

Note: If the camera is in Silent Mode or muted while being docked, the camera will revert to normal settings the next time it is removed from the dock.

Docking

AXIS W110 and AXIS W111 Body Worn Cameras do not need to be powered on or off – taking the camera in and out of the dock power cycles the unit. While docked, the camera will charge, offload video, and install any updates made in AXIS Body Worn Manager.

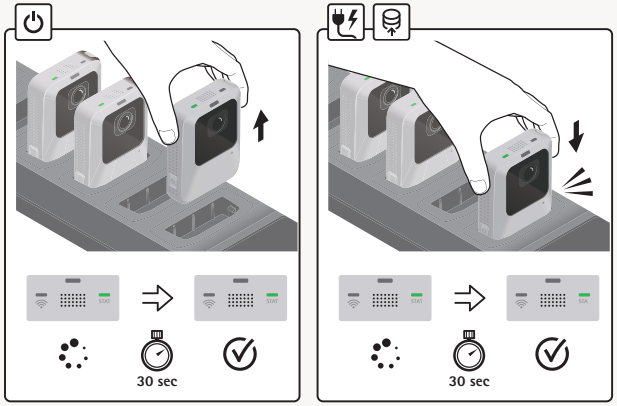

Voice feedback

AXIS W110 and AXIS W111 Body Worn Cameras can provide the user with feedback when certain actions are performed, such as starting or stopping a recording, pairing with AXIS Body Worn Assistant, or when the battery is about to run out. This feedback can be given through vibrations, beeps, or voice. If you select the voice option, the camera gives the alerts as spoken messages. (Example: Pressing the Function button will provide information about the percentage of remaining battery capacity.)

Voice feedback is helpful for inexperienced camera users since it provides clear information about what happens when they perform an action. It is also useful for alerting non-wearers that a recording has been activated. The type of feedback you want can be selected in the camera profiles settings in AXIS Body Worn Manager.


Mounting accessory use

AXIS W110 and AXIS W111 Body Worn Cameras come with a magnetic lanyard mount that attaches to the back of the unit. Additional mounting accessories are available that make the cameras compatible with all other Axis body worn camera mounts.

Visit www.axis.com/products/accessories-for-body-worn to explore all available mounting accessories.

In-field charging

While in the field, AXIS W110 and AXIS W111 Body Worn Cameras can be charged using a standard cell phone charger that supports 5V and up to 3 amps, as well as with the AXIS TW1909 Charging Adapter.

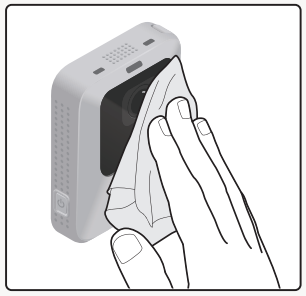


Cleaning

AXIS W110 and AXIS W111 Body Worn Cameras can be cleaned using non-abrasive, solvent-free neutral soap, or detergent, with water. It can be disinfected using up to 50% isopropyl alcohol. Ensure the unit is dry before placing in dock.

Status LED indications



LED	Meaning
Recording LED	Red = Recording active
Status LED	Green = Ready for use Green flashing = Battery running low Amber steady (while in use) = Storage full or storage error Amber pulsing (while docked) = Battery charging, file transfer in progress, software update in progress
Microphone LED	Amber = Microphone off
WiFi connectivity LED	Green = Paired with AXIS Body Worn Assistant, holster sensor, or streaming to AXIS Body Worn Live Amber pulsing = Trying to pair/connect Red = Pair/connect failed

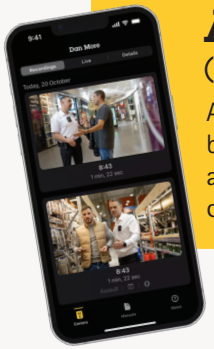

AXIS Body Worn Assistant

(iOS or Android)

A mobile app that gives you instant access to recordings on your Axis body worn camera. You can review video on the spot, categorize it, and add notes. You can also stream video from other Axis body worn cameras in real-time

Learn more:
www.axis.com/products/body-worn

AXIS COMMUNICATIONS

©2026 Axis Communications AB. All rights reserved.