


# Important!

**⚠ Do not start up the camera until all protective packing has been removed, or the camera will be damaged!**

Before installing the camera, complete the steps below.

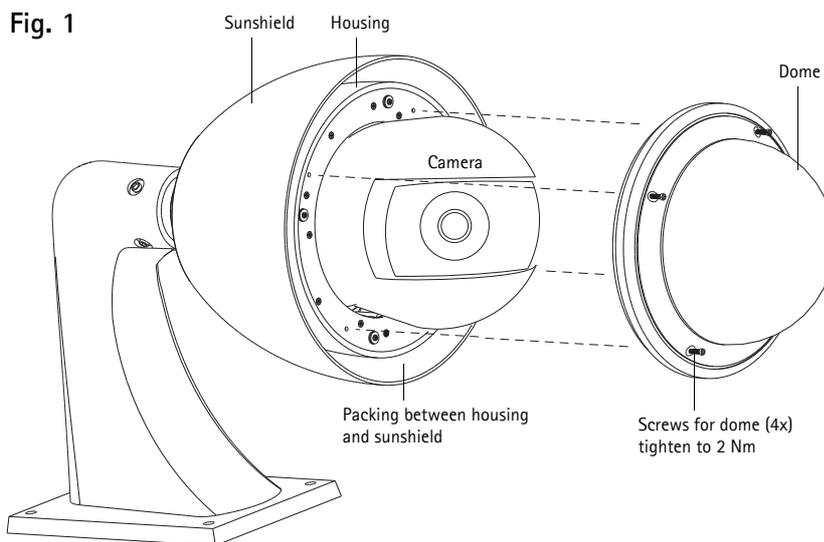

1. Place AXIS 215 PTZ-E network camera on a clean, solid surface.
  2. Loosen the four dome screws holding the dome. Make sure the o-ring on the screw is in place.
  3. Carefully unwrap AXIS 215 PTZ-E network camera.
  4. Carefully remove the packing between the housing and sunshield (see Fig. 1).
  5. Remove the plastic protection from the desiccant bags.
  6. Fold the ends of the desiccant bags and place in the empty slots (see Fig. 2).
  7. Attach the dome and tighten the four screws to 2 Nm.
- ⚠ It is important that the dome is sealed. Make sure to set the correct torque (2 Nm).**

