

AXIS M30 Dome Camera Series AXIS M3085-V Dome Camera AXIS M3086-V Dome Camera AXIS M3088-V Dome Camera

Repainting instructions

Impact on warranty

Impact on warranty

This product is approved for repaint by Axis, provided that you follow the instructions in this document and at *axis.com/warranty-implication-when-repainting*.

Risks with repainting

There are several risks when disassembling or assembling an Axis product. There is always a certain yield loss during assembly. Training of operators and the use of correct tools mediates some of the problems but they can never be fully avoided. Some of the risks include:

ESD Damage – Always handle the product in an ESD safe environment. Even if precautions are taken there is always a risk of ESD damage. The damage can remain undetected and cause problems during the lifetime of the equipment.

Dust contamination – Opening a camera may expose the lens and sensor to dust or paint. Dust will affect the optical performance. Lenses need to be disassembled in a dust-free environment, preferably a cleanroom.

Paint overspray – Masking the different components of the equipment is critical. Failure to mask sensitive areas can cause problems with assembling the equipment. Any areas that are not painted at factory or have a different surface treatment than the rest of the parts (threads, ground and electrical contact surfaces) must also be masked to ensure function.

Repaint the product

Repaint the product

Preparations

- If applicable, disassemble the device according to the instructions in this document.
- Clean all parts that will be repainted thoroughly to remove grease, dust, or oil.
- To ensure reassembly and functionality of the product, mask any openings (for example for screws, LED indicators, or microphones) before you paint.

Pretreatment of parts

Depending on the part material and type of coating applied at factory, pretreatment might be necessary for the new coating to adhere well. Before you apply a new coating, we recommend the following pretreatment:

- 1. If necessary, roughen up the surface with a light sandpaper or similar to increase adhesion. Alternatively, remove the original coating down to base material.
- 2. Clean the parts properly to remove oil, grease, and dust.
- 3. If necessary, apply a primer layer suitable for the specific material to increase adhesion to the parts. For outdoor products, we recommend a primer to improve corrosion resistance.


We recommend pretreatment of parts made of the following materials:

- powder coated
- wet painted
- anodised
- chromated
- stainless steel
- other metal
- plastic

The material used in the product is PC/ABS GW-1041.

Repaint the product


Disassembly

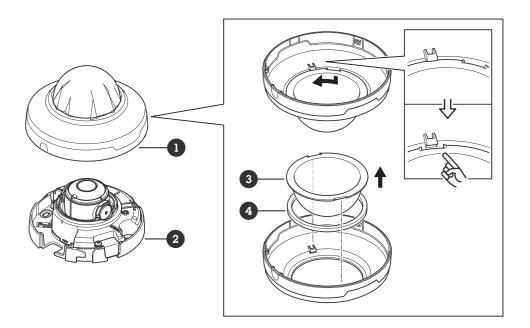

- Dome casing 1
- 2 3 Camera unit
- Dome
- 4 Dome gasket
- 1. Remove the dome casing.
- 2. Remove the dome and dome gasket.


Repainting

1. For AXIS M3086-V Mic, make sure to mask the opening on the dome casing.



2. Apply a thin and even layer of spray paint according to the instructions of the paint manufacturer.

Repaint the product



- 3. Let the paint dry.
- 4. To get a better coverage and clearer color, apply a second layer of spray paint.
- 5. For AXIS M3086-V Mic, remove the masking when the paint is dry.

Reassembly

- 1. Reattach the dome, dome gasket and dome casing.
- 2. Reassemble the dome casing and camera.

Repainting instructions AXIS M30 Dome Camera Series © Axis Communications AB, 2023 Ver. M1.5 Date: November 2023 Part no. T10200353