
AXIS 540+/AXIS 560

Network Print Servers

User's Manual

Regulatory Information

Safety Notices Take some time to read through the safety notices before installing the print server. Please observe all safety markings and instructions when using this product.

Important: Observe "Important:" in the text to avoid operational impairment. Do not proceed until you have fully understood the implications.

Electromagnetic Compatibility (EMC)



USA This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- reorient or relocate the receiving antenna
- increase the separation between the equipment and receiver
- connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- consult the dealer or an experienced radio/TV technician for help. Shielded (STP) network cables must be used with this unit to ensure compliance with the class B limits..

Europe This digital equipment fulfils the requirements for radiated emission according to limit B of EN55022, and the requirements for immunity according to EN55024 residential, commercial, and light industry. Compliance is not valid for unshielded network cables.

Japan This is a class B product based on the standard of the Voluntary Control Council for Interference from Information Technology Equipment (VCCI). If this is used near a radio or television receiver in a domestic environment, it may cause radio interference. Install and use the equipment according to the instruction manual. Compliance is not valid for unshielded network cables.

Australia This electronic device meets the requirements of the Radio communications (Electromagnetic Compatibility) Standard 1998 AS/NZS 3548. Compliance is not valid for unshielded network cables.

Liability Every care has been taken in the preparation of this manual; if you detect any inaccuracies or omissions, please inform your local Axis office, which can be found on the cover of this document. Axis Communications AB cannot be held responsible for any technical or typographical errors and reserves the right to make changes to the product and manuals without prior notice. Axis Communications AB makes no warranty of any kind with regard to the material contained within this document, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose. Axis Communications AB shall not be liable nor responsible for incidental or consequential damages in connection with the furnishing, performance or use of this material.

Axis' Trademarks AXIS IP JumpStarter, AXIS ThinWizard, axinstall, AXIS Print Monitor, AXIS AddPrinter.

Other Trademark Acknowledgments Adobe Acrobat Reader, Aix, Apple, Debian, Ethernet, EtherTalk, IBM, LAN Manager, LAN Server, Macintosh, Microsoft, Novell NetWare, OS/2, OS/400, AS/400, Red Hat, Solaris, SuSe, UNIX/Linux, Microsoft Windows, are registered trademarks of the respective holders.

Support Services Should you require technical assistance, please contact your Axis dealer. If your questions cannot be answered immediately, your Axis dealer will forward your queries through the appropriate channels to ensure you a rapid response. On the Internet you can find online manuals, technical support, software updates, application software, corporate information, etc..

Patent information Axis AB has intellectual property rights relating to technology embodied in the product that is described in this document. In particular, and without limitation, these intellectual property rights may include one or more of the patents listed at <http://www.axis.com/patent.htm> and one or more additional patents or pending patent applications in the US and other countries.

Software Acknowledgments This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit.

USER'S MANUAL AXIS 540+/AXIS 560 EN

Part No. 22997, Revision 4.0a

Date: August 2005 - Copyright © Axis Communications AB, 2005

This manual applies to the AXIS 540+/AXIS 560 with firmware version 7.00 or higher.

Table of Contents

Section 1	Introduction	6
	About this Manual	6
	Supported Environments	6
	About Axis	6
	Support Services	7
Section 2	Product Overview	8
	Package Contents	8
	AXIS Network Product CD	9
	Physical Description	10
	Features and Benefits	11
Section 3	Basic Installation	13
	Quick overview	13
	Connect the Hardware	13
	Assign an IP Address to the Print Server	14
	Automatic IP Address Assignment	15
	Manual IP Address Assignment	16
	Making Network Printers available for printing on your PC 18	
	Installation Methods	18
Section 4	Adding Printers in Windows	19
	Adding printers in Windows 2000 / XP / 2003 using AXIS AddPrinter Wizard	20
	Adding printers in Windows 2000 / XP / 2003 using Windows Add Printer Wizard	22
	Adding Printers in Windows 2000 / XP / 2003 using the Microsoft LPR Monitor	25
	Adding Printers in Windows NT using the Microsoft LPR Monitor	26
	AXIS Print Monitor Software	28
	Adding Printers over TCP/IP in Windows NT using AXIS Print Monitor	29
	Adding NetBIOS/NetBEUI Printers in Windows 2000 using AXIS Print Monitor	30
	Adding Printers over NetBIOS/NetBEUI in Windows NT using AXIS Print Monitor	31
	Adding Printers in Windows 98 and Me over TCP/IP using AXIS Print Monitor	32
	Adding Printers in Windows 98 and Me over NetBIOS/NetBEUI using AXIS Print Monitor	33
Section 5	Adding Printers in Macintosh	35
	Bonjour Printing in Mac OS X	35
	Installation in Mac OS X using AppleTalk	37
	Installation of LPR printing in Mac OS X	37
	Installation on Mac OS 9.1 or older, using AppleTalk	38

	Choosing a Printer	38
Section 6	Adding Printers in NetWare	42
	Setup using NDPS	43
	Setup using iPrint	57
	Basic Setup with AXIS NetPilot	61
	Advanced Installation using AXIS NetPilot	62
	Basic Queue-based printing over IP	64
Section 7	Adding Printers in UNIX/Linux	67
	Print Tools	67
	Typical Invocation via a Windows Manager	68
	Typical Invocation from a Terminal Window	69
	Debian 3.0	70
	Red Hat 7.3	71
	SuSE 8.0	73
	AXIS axinstall Script	74
	Print Methods on TCP/IP Networks	76
Section 8	Adding Printers in OS/2	78
	TCP/IP Printing	78
	NetBIOS/NetBEUI Printing in OS/2	79
Section 9	Updating the Firmware	81
	Upgrading the Firmware	81
	Obtaining the Software	83
Section 10	Management and Configuration	84
	Using a Web Browser for Print Server Management ...	84
	Using AXIS ThinWizard for Print Server Management ..	88
	Using FTP for Print Server Management	90
	Using Telnet	92
	Using SNMP	94
	Using Novell Utilities	95
Section 11	Configuration Possibilities	97
	Autodetect Printer Type	97
	E-mail Notification	98
	IPP (Internet Printing Protocol)	98
	Network Speed	106
	Changing Language in the Print Server's Web Interface ..	107
Section 12	Logical Printers	108
Section 13	IP Addressing	115
Section 14	The Test Button	119
Section 15	Troubleshooting	120
Section 16	Technical Specification	123

Section 17	The Parameter List	126
	AXIS 540+	126
	AXIS 560	134
	SNMP Device Index	144
Section 18	Glossary	146
	Index	151

Section 1 Introduction

Thank you for purchasing the AXIS 540+/AXIS 560. This product has been developed to connect your printers anywhere in your network, allowing all network users access to shared printer resources.

About this Manual

This manual is applicable for the AXIS 540+/AXIS 560 with firmware version **7.00** or higher, providing introductory information as well as detailed instructions on how to set up and manage the print server in various network environments. It is intended for everyone involved in installing and managing the print server. To fully benefit from this manual, you should be familiar with basic networking principles.

These instructions are based on the settings in a **new and unconfigured** print server. To reload the default parameters, you can perform a Factory Default, which will restore most of the settings. See *“Performing a Factory Default”* on page 119.

Supported Environments

- Windows
- NetWare
- Macintosh
- OS/2
- UNIX/Linux

About Axis

Axis increases the value of network solutions. The company is an innovative market leader in network video and print servers. Axis' products and solutions are focused on applications such as security, surveillance, remote monitoring and document management. The products are based on in-house developed chip technology, which is also sold to third parties.

Axis was founded in 1984 and is listed on the Stockholmsbörsen (XSSE:AXIS). Axis operates globally with offices in 14 countries and in cooperation with distributors, system integrators and OEM partners in 70 countries. Markets outside Sweden account for more than 95 % of sales. Information about Axis can be found at www.axis.com

Support Services

Should you require any technical assistance, please contact your Axis reseller. If your questions cannot be answered immediately, your Axis reseller will forward your queries through the appropriate channels to ensure a rapid response.

If you are connected to the Internet, you can:

- Download user documentation and firmware updates
- Find answers to previously resolved problems in the FAQ database. Search by product, category or phrase
- Report problems to Axis support staff by logging in to your private support area
- Visit the Axis support Web at www.axis.com/techsup

Section 2 Product Overview

Package Contents

Verify that nothing is missing from the AXIS 540+/AXIS 560 package by using the check list below. Please contact your dealer if anything is missing or damaged. All packing materials are recyclable.

<i>Hardware</i>	<i>Model</i>	<i>Part Number</i>	<i>Power Adapter</i>
Axis Print Server	AXIS 540+	0058-001-02	PS-H
	AXIS 560	0053-101-02	PS-H

<i>Power Adapter</i>	<i>Model</i>	<i>PS-H Part Number</i>
PS-H	Australia	19111
	Europe	19108
	UK	19109
	USA/Japan	19110

<i>Media</i>	<i>Title</i>	<i>Part Number</i>
CD	AXIS Network Product CD	22965
Warranty sheet	Warranty Axis Servers (USA)	21681
	Warranty Axis Servers (other countries)	21680
Printed Material	INSTAL GUIDE AXIS 540+/560 E1	22909

<i>Optional accessories (not included in box)</i>	<i>Description</i>	<i>Part Number</i>
AXIS 540+	Self-adhesive velcro ribbons	13282 & 13283
	Printer cable extension	13522
AXIS 560	Parallel printer cable	13360
	Serial printer cable	13281

Ensure that the print server's Power Adapter is marked with the correct voltage! Refer to the tables above for details.

AXIS Network Product CD


The AXIS Network Product CD provides an easy-to-use electronic catalog, that includes Axis software, firmware and user documentation. If your computer is set to French, German, Italian or Spanish, the information will automatically be presented in that language, otherwise you will see the English version.

To read the PDF documents you need an Acrobat Reader, which can be fetched at <http://www.adobe.com/products/acrobat/readmain.html>

Start-up Procedures for Windows	If your computer is configured to autostart CDs, the AXIS Network Product CD will start automatically when inserted into a local CD drive on Windows 98, Me, NT, 2000 and XP platforms. You can also navigate to the CD root directory and start the <i>index.htm</i> file from within the Windows file manager.
Start-up Procedures for UNIX/Linux, and Mac OS	Using your preferred file manager application, navigate to the CD root directory and click <i>index.htm</i>
Latest Version	The latest version of Axis documentation, software and firmware is available on www.axis.com

Physical Description

AXIS 540+

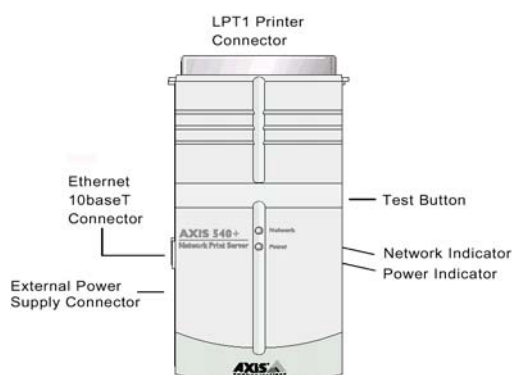


Network Connectors AXIS 540+ is designed for 10 Mbps Ethernet networks and connects to the network via a twisted pair (10baseT) cable.

Printer Port AXIS 540+ is provided with a single high-speed IEEE 1284 compatible parallel port (LPT1) that connects directly to any standard printer without the need of cabling.

Centronics-to-Centronics and Centronics-to-mini Centronics extension cables may be obtained from your local distributor for use with printers physically unable to accommodate the print server.


AXIS 560

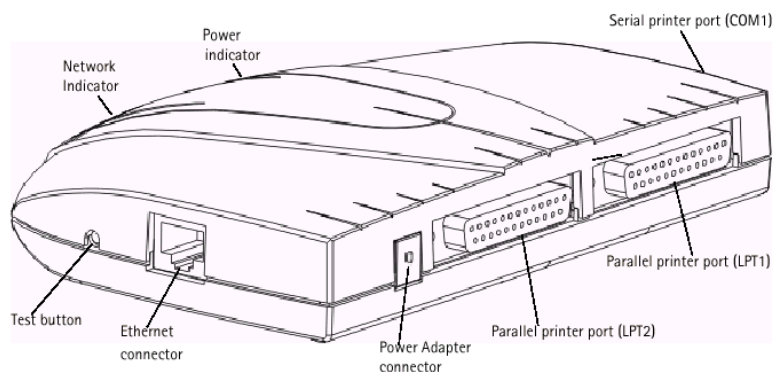

Network Connectors AXIS 560 is designed for 10 Mbps Ethernet networks and connects to the network via a twisted pair (10baseT).

Printer Ports AXIS 560 is provided with two high-speed IEEE 1284 compatible parallel ports (LPT1 and LPT2) and one serial port (COM1). Print data can be directed to any of the three ports simultaneously, which means that three different printers can be used at the same time, regardless of protocol.

Backside label of print server

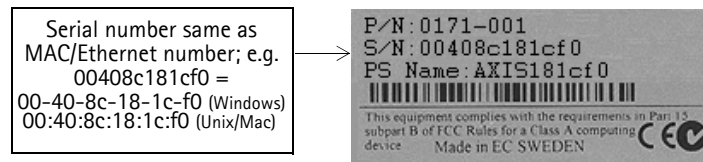

Note: "S/N" can also appear as "Ser. No." or "Serial no."

Test Button	<p>The test button is used for:</p> <ul style="list-style-type: none"> • Printing a test page to check the connection to the printer. • Printing the parameter list showing the print server settings. • Performing a Factory Default of the print server, which will restore most of the parameters and settings to factory default values. <p>See <i>The Test Button</i>, on page 119 for details.</p>
Network Indicator	The network indicator flashes to indicate network activity.
Power Indicator	The power indicator is lit while power is applied. If it is not lit, or if it flashes, there is a problem with the print server or its Power Adapter.
Printer compatibility	All printers can be used except host-based printers (also known as CAPT, GDI, PPA or Windows-based printers).
Configuration and Management	The print server can be configured and managed from its internal Web pages. These Web pages offer you a platform independent management tool that is suitable for all supported network environments. See <i>Using a Web Browser for Print Server Management</i> , on page 84 for details.

Features and Benefits

Reliability	The print server provides high performance and reliability combined with low power consumption. The electronic circuits are based on the AXIS ETRAX 100 LX chip, which comprises an integrated 32 bit RISC processor and associated network controllers.
Flexibility	The print server supports printing in all major computer systems and environments, including five different print methods in the TCP/IP environment. The integrated IPP (Internet Printing Protocol) function allows for printing from LAN to LAN via a WAN, such as the Internet.
Easy to Install	The print server installs, operates and is managed in a reliable and easy fashion.

- Security** You can assign a password to restrict login and printer access.
- Monitoring** The internal print server Web pages and AXIS ThinWizard (3.0 and up) allow you to continuously monitor printer status. The Web pages are used to monitor single Axis units while AXIS ThinWizard can be used to monitor multiple Axis units.
- Through e-mail notification, the printer administrator can be notified by e-mail whenever an event that requires human intervention occurs in a printer. The e-mail contains a short and concise description of the event.
- Future Proof** The firmware stored in the print server Flash memory can be upgraded over the network. This allows you to quickly update and enhance its operational features when new print server software becomes available.

Section 3 Basic Installation

Quick overview

Follow these steps to make your printer network ready:

1. *Connect the Hardware*, on page 13
2. *Assign an IP Address to the Print Server*, on page 14
3. *Making Network Printers available for printing on your PC*, on page 18

Connect the Hardware

1. Make sure that the printer is switched off and that the Power Adapter is disconnected from the print server.
2. Locate the serial number, found on the underside label of the print server, and write it down. *Example: S/N: 00408c181cf0*
3. Connect the printer directly to a port on the print server or using an appropriate cable.
4. Connect the AXIS 540+/AXIS 560 to your network (Ethernet Connector).
5. Switch on the printer and make sure it is ready for printing (display showing "Online", "Ready", etc.)
6. Connect the Power Adapter to the print server. The Network Indicator will start flashing when the print server is correctly connected to the network.
7. Wait 1 minute and press the test button once. A **test page** will be printed on the connected printer – keep it handy during the installation. The test page will show the assigned IP address of the print server.

Print server's
IP address →

```

AXIS Network Print Server Test Page
Power-on time: 0 days, 1 hour, 2 min.
RAM size: 0.0 Mbyte
Flash size: 2.0 Mbyte
Default language: English

Printer at LPT1:
Manufacturer: Unknown
Command Sets: Unknown
Capabilities: No printer information.

Printer at USB1:
Manufacturer: Unknown
Command Sets: Unknown
Capabilities: No printer information.

Ethernet Auto Negotiation: 100 Mbps
Node address: 00:40:0c:10:1c:f0
TCP/IP: enabled
Internet address Default router Net mask
192.168.3.191 <automatic router>

```

Assign an IP Address to the Print Server

Methods for Setting the IP Address You can obtain an IP address for your print server by using one of the following methods, depending on your network operating environment.

See *IP Addressing*, on page 115 for detailed instructions on IP address management.

Automatic IP Address Assignment

Method	Server required	Comment
AXIS AddPrinter Wizard		See "Adding printers in Windows 2000/XP / 2003 using AXIS AddPrinter Wizard" on page 20
DHCP	DHCP server	Dynamic assignment of IP addresses. See "Obtain an IP Address with DHCP" on page 15
RARP	RARP server	Static assignment of IP addresses. Cannot be used over routers. See "Obtain an IP Address using RARP in UNIX/Linux" on page 16
BOOTP	BOOTP server	Static assignment of IP addresses. See "Obtain an IP Address using BOOTP in UNIX/Linux" on page 15
Auto-IP	No server required.	Automatic assignment of IP addresses. See "Auto-IP Addressing" on page 117

Manual IP Address Assignment

When assigning an IP address manually you need to know the Ethernet address of the print server. The Ethernet address is based on the print server's serial number, found on its underside label. *Example: A print server with the serial number 00408c181cf0 will have the Ethernet address 00 40 8c 18 1c f0.*

Method	Platform	Comment	See
ARP/Ping	Windows	Requires the IP address for each device to be downloaded individually. Cannot be used over routers.	"Set the IP Address using ARP in Windows 98/NT/Me/2000/XP/2003" on page 16
	UNIX/Mac OS X	You must define the Default Router and Subnet Mask . Log in to the print server's Web pages and select Admin Network Settings Detailed View TCP/IP Network Default Router and Subnet Mask . DHCP, Auto-IP, BOOTP and RARP must first be set to No .	"Set the IP Address using ARP in UNIX/Linux and Mac OS X" on page 17
AXIS AddPrinter Wizard	Windows 2000, XP, 2003	Axis software that allows you to find print servers in your network and assign an IP address to them.	"Adding printers in Windows 2000 / XP / 2003 using AXIS AddPrinter Wizard" on page 20
AXIS ThinWizard	Windows 2000/XP	Axis software that assists in setting the IP address of multiple print servers simultaneously. This software is recommended for large organizations and enterprise networks.	"Using AXIS ThinWizard for Print Server Management" on page 88

Notes:

- The ability to set the IP address with ARP and PING will only be enabled the first 10 minutes after restarting the print server.
- You need root privileges on your UNIX, Linux and Mac OS X system, or administrator privileges on a Windows NT server to set the IP address using RARP, BOOTP, DHCP and to add an entry to the ARP table with the command 'arp -s'.
- When assigning an IP address manually, you must utilize a unique IP address that is not already in use in your network.

Automatic IP Address Assignment**Obtain an IP Address with DHCP**

If you have a DHCP server on your network, your print server will automatically obtain an IP address when you connect it physically to the network. The IP address will appear on the test page that is printed when you press the test button once.

Obtain an IP Address using BOOTP in UNIX/Linux

Below is an example of how to set the IP address of the print server using BOOTP. Append the following entry to your boot table. This is typically performed by editing the file: /etc/bootptab

```
<host name>:ht=<hardware type>:vm=<vendor magic>:\
:ha=<hardware address>:ip=<IP address>:\
:sm=<subnet mask>:gw=<gateway field>
```

Example:

```
npsname:ht=ether:vm=rfc1048:\
:ha=00408c100086:ip=192.168.3.191:\
:sm=255.255.255.0:gw=192.168.1.1
```

1. If necessary, update your host table and alias name databases as required by your system.
2. If it is not already running, start the BOOTP daemon. This is typically performed using the bootpd command.
3. Restart the print server to download the IP address, default router address, and subnet mask. The print server can automatically download a customized *config* file from a TFTP server. Just add the name of the *config* file and the TFTP server's IP address to your boot table. The *config* file is downloaded immediately after the print server receives its IP address.
4. You have now successfully set the IP address of the print server. Proceed to "Making Network Printers available for printing on your PC" on page 18.

**Obtain an IP Address
using RARP in
UNIX/Linux**

Follow the instructions below to set the IP address using RARP.

Append the following line to your Ethernet Address table. This is typically located in the `/etc/ethers` file:

```
<Ethernet address> <host name>
```

Example:

```
00:40:8c:10:00:86 npsname
```

1. Update, if necessary, your host table and alias name databases as required by your system.
2. If it is not already running, start the RARP daemon. This is typically performed using the `rarpd -a` command.
3. Restart the print server to download the IP address.
4. You have now set the IP address of the print server. Continue to *"Making Network Printers available for printing on your PC"* on page 18.

Note:

You have to restart the print server to download the IP address.

**Obtain an IP Address
using Auto-IP**

Auto-IP is a scheme where devices allocate themselves an IP address at random from the industry standard subnet of 169.254.x.x. AXIS print servers are configured to support Auto-IP by default. See also "Auto-IP Addressing" on page 117.

Manual IP Address Assignment**Set the IP Address
using ARP in
Windows 98/NT/
Me/2000/XP/2003**

1. Open a Command Prompt and enter the following commands:

Syntax	Example
<code>arp -s <IP address> <Ethernet address></code>	<code>arp -s 192.168.3.191 00-40-8c-10-00-86</code>
<code>ping <IP address></code>	<code>ping 192.168.3.191</code>

2. The host will return `reply from 192.168.3.191`, or a similar message. This indicates that the address has been set and that communication is established.
3. Log in to the print server's Web pages (see *Using a Web Browser for Print Server Management*, on page 84), select **Admin | Network Settings | Detailed View | TCP/IP Network** and define **Default Router** and **Subnet Mask**. Make sure you first set **DHCP**, **Auto-IP**, **BOOTP** and **RARP** to **No**!

You have now set the IP address of the print server. Continue to *"Making Network Printers available for printing on your PC"* on page 18.

Notes:

- When you execute the ping command for the first time, you will experience a significantly longer response time than is usual.
- The ability to set the IP address with ARP and PING will only be enabled the first 10 minutes after restarting the print server.
- By using the `arp -d` command, the static entry in the arp table is removed from the host's cache memory.

Set the IP Address using ARP in UNIX/Linux and Mac OS X

1. Open a Terminal and enter the following commands:

Syntax	Example
<code>arp -s <IP address> <Ethernet address></code>	<code>arp -s 192.168.3.191 00:40:8c:10:00:86</code>
<code>ping <IP address></code>	<code>ping 192.168.3.191</code>

2. The host will return `psname is alive`, or a similar message. This indicates that the address has been set and that communication is established.
3. Log in to the print server's Web pages (see *Using a Web Browser for Print Server Management*, on page 84), select **Admin | Network Settings | Detailed View | TCP/IP Network** and define **Default Router** and **Subnet Mask**. Make sure you first set **DHCP**, **Auto-IP**, **BOOTP** and **RARP** to **No**!

You have now successfully set the IP address of the print server. Continue to “*Making Network Printers available for printing on your PC*” on page 18.

Notes:

- If the host name has not been mapped to an IP address, simply replace the host name entry with the IP address.
- The ARP command varies between different UNIX/Linux systems. Some BSD type systems expect the host name and node address in reverse order. Furthermore IBM AIX systems will require the additional argument `ether`.
- When you execute the ping command for the first time, you may experience a significantly longer response time than is usual.
- The ability to set the IP address with ARP and PING will only be enabled the first 10 minutes after restarting the print server.

Set the IP Address using AXIS AddPrinter

AXIS AddPrinter Wizard is an application that assists in assigning an IP address to your print server and finding IP addresses already assigned to Axis servers. Download and install AXIS AddPrinter. AXIS AddPrinter is available on www.axis.com. See “*Adding printers in Windows 2000 / XP / 2003 using AXIS AddPrinter Wizard*” on page 20.

Using AXIS Thin Wizard

See *Using AXIS ThinWizard for Print Server Management*, on page 88 for instructions on setting IP addresses with AXIS ThinWizard.

Making Network Printers available for printing on your PC

Configuration Methods Once you have set the IP address of your print server, your network printer can be added to any PC on your network. The method that you choose should be dictated by your printing requirements and your supported network environments. Select the appropriate method from the table below:

Installation Methods

Installation and Integration Refer to the table below to select the appropriate installation method. All Axis client software is available on www.axis.com

<i>Environment</i>	<i>Method/ Client Software</i>	<i>Description</i>
Windows 2000, XP, 2003	Install AXIS AddPrinter software.	Used for adding network printers to your computer in Windows 2000, XP, 2003
Windows 98, Me	Install AXIS Print Monitor software, then use Windows Add Printer Wizard	Used for adding network printers to your computer in Windows 98, Me
UNIX/Linux	KDE Printtool	Used for installing network printers in Debian and others
	Printconf	Used for installing network printers in Red Hat and others
	YaST2 Printer Configuration Tool	Used for installing network printers in SuSE
	Sam	Used for installing network printers in HP UX
	axinstall	Axis script developed for installing network printers in UNIX/Linux for printing over PROS, LPR, FTP or Reverse Telnet protocols
NetWare Pure IP	NetWare Administrator	Used for installing network printers in NetWare
NetWare	AXIS Gateway Configuration Utility software	Used for installing and configuring NDPS printers in NetWare
	AXIS NetPilot software	Tool that runs on Windows platforms that use NetWare over IPX/SPX (Queue-mode)
Macintosh	Bonjour and Macintosh standard methods in native/classic mode	Used for installing network printers in Macintosh

See “*IPP (Internet Printing Protocol)*” on page 98 for information on Internet printing over Local and Wide Area Networks.

Section 4 Adding Printers in Windows

Overview of Installation Methods

This section describes how to add network printers to a computer in Windows. Refer to the table below to determine the most appropriate installation method according to your computer environment:

<i>Windows Platform</i>	<i>Protocol</i>	<i>Method</i>	<i>See...</i>
Windows 2000, XP, Server 2003	TCP/IP (LPR)	AXIS AddPrinter software	"Adding printers in Windows 2000/XP/2003 using AXIS AddPrinter Wizard" on page 20
		Windows Add Printer Wizard	"Adding printers in Windows 2000/XP/2003 using Windows Add Printer Wizard" on page 22
		Microsoft LPR Monitor	"Adding Printers in Windows 2000/XP/2003 using the Microsoft LPR Monitor" on page 25
Windows 2000	NetBIOS/NetBEUI	AXIS Print Monitor software	Adding NetBIOS/NetBEUI Printers in Windows 2000 using AXIS Print Monitor, on page 30
Windows NT	TCP/IP (LPR)	Windows Add Printer Wizard	Adding Printers in Windows NT using the Microsoft LPR Monitor, on page 26
	NetBIOS/NetBEUI	Windows Add Printer Wizard	"Adding Printers over NetBIOS/NetBEUI in Windows NT using AXIS Print Monitor" on page 31
Windows 98/Me	TCP/IP (LPR)	AXIS Print Monitor software	"Adding Printers in Windows 98 and Me over TCP/IP using AXIS Print Monitor" on page 32
	NetBIOS/NetBEUI		"Adding Printers in Windows 98 and Me over NetBIOS/NetBEUI using AXIS Print Monitor" on page 33

If you intend to use the print server in a multi-protocol environment, refer to the chapters pertaining to the respective operating systems in this manual.

Client/Server Network

For client/server printing, each computer sends print jobs through a network server computer.

The printer must first be installed on the server computer (from the AddPrinter Wizard, AXIS Print Monitor) and then shared on the network, which makes it a network printer. It will then appear as a **Network Printer** (in Windows Add Printer Wizard and in AXIS Print Monitor) on the client computers. Each client computer must install the appropriate printer drivers in order to print properly.

For Windows 98 and Me, it is only necessary to install AXIS Print Monitor on a **server** for client/server printing.

Peer-to-Peer Network

In Peer-to-Peer networks, each computer prints directly to the network printer. The network printer appears as a **Local Printer** (in Windows Add Printer Wizard and in AXIS Print Monitor), and needs to be added to each

client computer that wants to print. Each client computer must install the appropriate printer drivers in order to print properly.


In Windows 98 and Me, AXIS Print Monitor must be installed on all (printing) client computers for Peer-to-Peer printing.

SNMP Device Index When using the TCP/IP protocol (and if the printer driver permits), the print server can use **SNMP Status** to find out if the printer is ready to accept a new job. See “*SNMP Device Index*” on page 144.

Adding printers in Windows 2000 / XP / 2003 using AXIS AddPrinter Wizard

AXIS AddPrinter is a Wizard that locates your network printers and helps you install them in your Windows environment. When you have completed the Wizard, the network printer is ready for use. To install a network printer you must be logged in as an Administrator or be a member of the Administrators’ group.

1. Install AXIS AddPrinter Wizard on all Windows 2000, Windows XP and Windows Server 2003 workstations that will print via the print server.
2. Before you continue, ensure that the print server is properly connected to the printer, network and power.
3. Start AXIS AddPrinter. Click **Next**. The Wizard will perform an automatic search for all Axis network printers, which is indicated by the progress bar at the bottom of the screen.

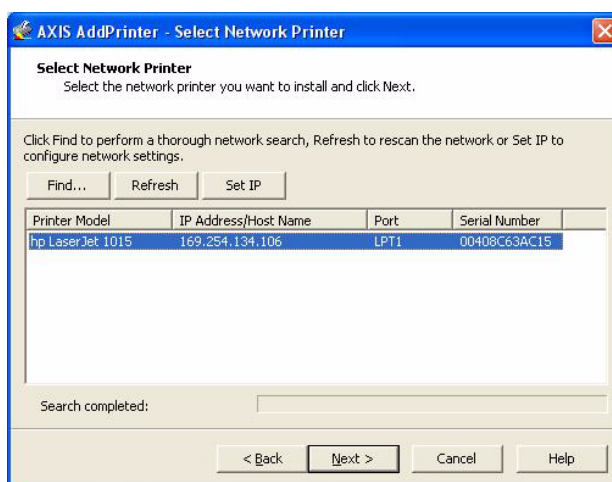


4. Select a printer from the **Select Network Printer** list and click **Next**. If the printer does not appear, see *Easy Access to All Network Printers*, below.

5. The Wizard searches for a suitable printer driver.

If a suitable driver is not found, you will be asked to select a driver, otherwise the Wizard suggests which Printer Model and Printer Driver to use.

Click **Change driver** to select another driver, or click **Finish** to accept and install the suggested driver.

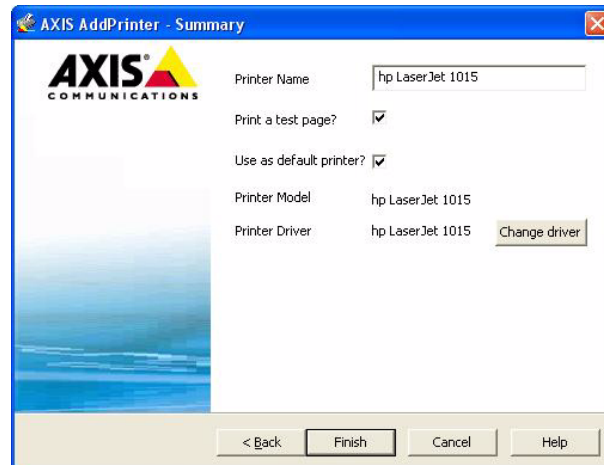

The installation is complete and you can start using the network printer.

Easy Access to All Network Printers

The Wizard's **Select Network Printer** list also provides quick and easy access to all connected and configured network printers.


Find... If the print server is located outside your local subnet it will not appear in the list. This may be the case if your router blocks SLP traffic. Click **Find**. Enter the IP address or host name displayed on the print server's Test page and click **OK**. *Example: 192.168.3.191 or AXIS181cf0*

Refresh If the print server has just been switched on, the printer has not had time to report its presence. This process can take a few minutes. In this case, **Printer Model** is stated as **No printer connected**. Click **Refresh** to rescan your local network segment for available print servers and update the status. If you still do not see the expected values, click **Help** and select **Troubleshooting**.

Set IP To set or change the IP address, select the print server and click **Set IP**. Decide whether you want to configure the IP settings manually or want the Wizard to suggest a static IP address.

Example: Select **Suggest...** and click **OK**. Confirm – or modify – the Wizard's suggested IP settings. Click **OK**.

Note: The **Suggest...** option is only available when the computer has one network card.

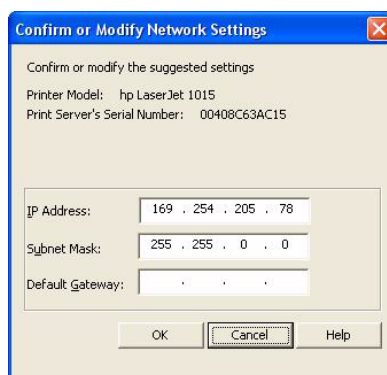

Go Straight to the
Print Server's Web
Interface

Right-click on a printer in the **Select Network Printer** list and select **Print server home page** to configure the print server from its embedded Web pages.


Adding printers in Windows 2000 / XP / 2003 using Windows Add Printer Wizard

1. **Windows XP/Windows Server 2003:**
Go to **Start | Printers and Faxes** and click the **Add a Printer** icon to start the Add Printer Wizard. Click **Next**.


Windows 2000:

Go to **Start | Settings | Printers** and click the **Add Printer** icon to start the Add Printer Wizard. Click **Next**.

2. In the Wizard, select **Local Printer attached to this computer**. Make sure the **Automatically detect and install my Plug and Play printer** check box is not checked. Click **Next**.

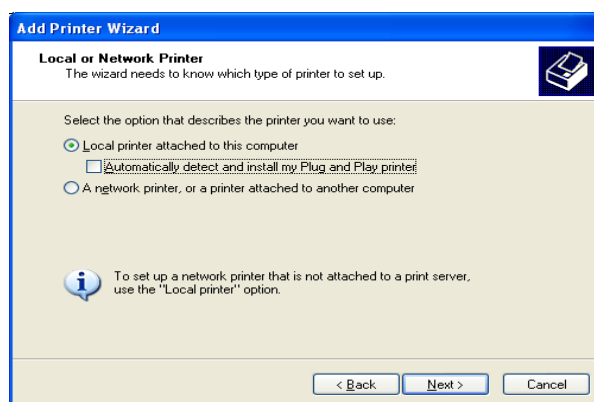

- Click the **Create a new port** radio button and select **Standard TCP/IP Port** from the list.
Click **Next** and the **Add Standard TCP/IP Printer Port Wizard** starts. Click **Next**.

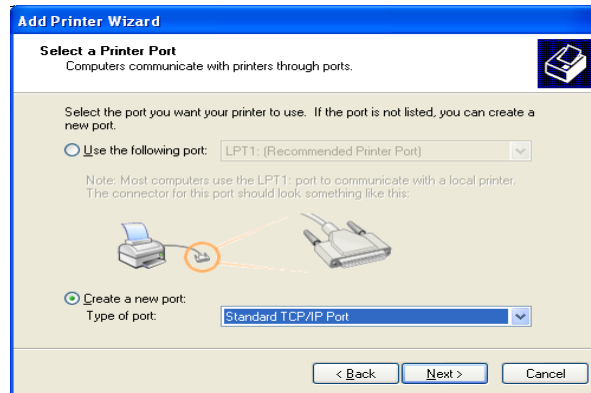


- Enter the IP address of the print server in the **Printer Name or IP Address** field
(Example: 192.168.3.191)

The **Port Name** field will be filled in automatically when you enter the IP address. Optionally, add the port you want to use as a suffix.

AXIS 540+: _LPT1

AXIS 560: _LPT1, _LPT2 or _COM1


(Example: 192.168.3.191_LPT1) Click **Next**.

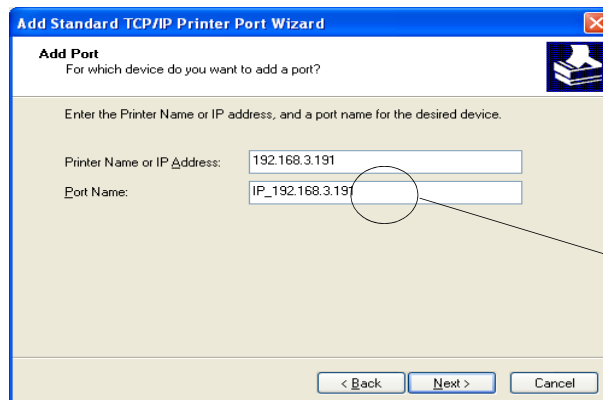

Optional:
Add _Port
as a suffix

- If you have an AXIS 560: In the **Additional Port Information Required** window, select the **Device Port** you want to use: LPT1, LPT2 or COM1

Click **Next** then **Finish**.

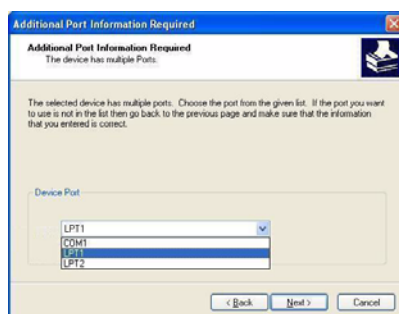

- Select **Manufacturer and Printer** from the driver list or from a directory/file. Click **Next**. If you already have the printer's driver installed, you will be asked whether to keep it or replace it.
- Click **Next**. Supply a name for the printer and choose whether you want to make it your default printer. Click **Next**.



- Choose whether you want to share the printer with other network users, print a test page, etc. Select the appropriate radio button and click **Next** and **Finish**.



- Print a test page to verify your installation.

You have now completed the installation.

Adding Printers in Windows 2000 / XP / 2003 using the Microsoft LPR Monitor

This section describes how to set up a Windows 2000/XP/2003 server for LPR printing over the TCP/IP protocol, using the built-in Microsoft LPR Monitor i.e. Print Services for UNIX.

Note:

See *"Alternative Method for LPR Printing"* on page 26 for instructions on how to set up printing over LPR without installing Print Services for Unix.

- | | |
|----------------------------|---|
| Basic Setup | If you have not already done so, you should perform the TCP/IP basic setup procedures prior to installing a printer for LPR printing. |
| Preparing for LPR Printing | <p>Follow the following steps to prepare for LPR printing:</p> <ol style="list-style-type: none"> 1. Open the Control Panel. 2. Click Add/Remove Programs. 3. Click Add/Remove Windows Components. 4. Check Other Network File and Print Services and click Details. 5. Check Print Services for Unix and click OK. 6. Click Next and Finish. 7. Close Add/Remove Programs and the Control Panel. |
| Installing an LPR printer | Follow the instructions below to use the standard Windows method for installing an LPR printer in Windows 2000/XP/2003: |
| Windows XP/2003: | <ol style="list-style-type: none"> 1. Go to Start Printers and Faxes and click the Add a Printer icon to start the Add Printer Wizard. Click Next. |
| Windows 2000: | <ol style="list-style-type: none"> 1. Go to Start Settings Printers and click the Add Printer icon to start the Add Printer Wizard. Click Next. 2. Select the appropriate radio button: Local Printer. Click Next. 3. Click the Create a new port radio button and select LPR Port from the list. Click Next. 4. Enter IP address (or host name) of the print server in the field Name and address of server providing lpr (<i>Example: 192.168.3.191</i>) and enter the port you want to use in the field Name of printer or print queue on that server (<i>Example: LPT1, LPT2, COM1</i>). Click OK. 5. End the Wizard in the usual manner: select Manufacturer and Printer, keep/replace driver, name the printer, make it default or not, share it or not and finally decide whether you want to print a test page. |

Client/Server Printing Select **Network printer** instead of **Local Printer** in Step 2 above if your print server has already been installed by the administrator on another computer. Follow the instructions in the **Add Printer Wizard** to complete the installation.

Important!

- Make sure that the **Automatically detect and install my Plug and Play printer** checkbox is not checked
- Press **F1** to access the Windows online help system if you need additional help when installing a printer/print server using this method.

Alternative Method for LPR Printing If you wish to print over LPR but do not wish to install **Print Services for Unix** you can do this by changing the printing protocol after having installed the printer using the Standard TCP/IP method, see “*Adding printers in Windows 2000 / XP / 2003 using Windows Add Printer Wizard*” on page 22 for instructions.

Once the printer is installed, follow these instructions to change the printing protocol:

1. Go to **Start | Settings | Printers**.
2. Double-click the installed printer.
3. Select **Properties** from the **Printer** menu.
4. Click the **Ports** tab.
5. Click the **Configure Port** button.
6. Click the **LPR** radio button and enter the queue name (PR1, PR2...).
7. Click **OK** to finish.

Adding Printers in Windows NT using the Microsoft LPR Monitor

If you have not already done so, you should perform the TCP/IP basic setup procedures prior to installing a printer for LPR printing.


Preparing for LPR Printing In the **Control Panel**, double-click the **Network** icon. Select the **Services** tab. If the TCP/IP Printing entry appears, then TCP/IP is already installed. Close the **Network** folder and go on to *Installing an LPR printer*, below.

First, prepare for LPR printing:


1. Open the **Control Panel** and double-click the **Network** icon.
2. Select **Protocols**.
3. Add **TCP\IP Protocol**.
4. Select **Services**.
5. Add **Microsoft TCP\IP Printing**.

Installing a Network printer


1. Go to **Start | Settings | Printers | Add Printer**. Select **My Computer** and click **Next**.
2. From the **Available Ports** list, choose the appropriate printer port, which will appear as the IP address or host name of the print server. If it doesn't appear in the list, click **Add Port**.

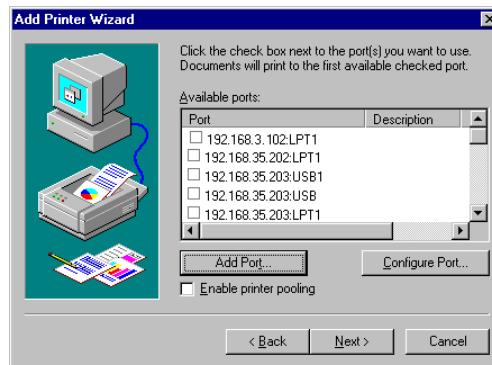

3. Choose **LPR Port** from **Available Printer Ports** and click **New Port**.

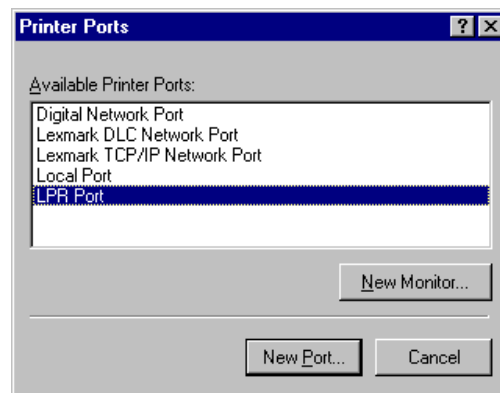

4. Type the print server's IP address (or host name) in the field **Name or address of server providing lpd** (Example: 192.168.3.191). Enter which port to use in the field **Name of printer or print queue on that server** (Example: LPT1). Click **OK** and then **Close**.

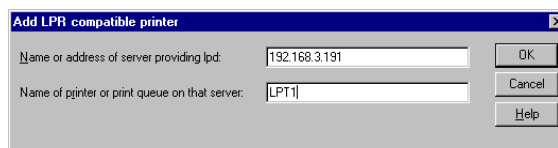

5. The added print server will now appear in the **Available Ports** list. Click **Next**, choose a driver and finish the installation as usual.

AXIS Print Monitor Software

AXIS Print Monitor is the recommended tool to use for network printing in Windows 98 and Me environments. AXIS Print Monitor is available free of charge on www.axis.com

AXIS Print Monitor Overview

AXIS Print Monitor allows the print server to be connected in the same simple fashion as connecting a local printer. Once installed, it is automatically initialized upon system startup. AXIS Print Monitor has been developed for peer-to-peer printing, allowing your print jobs to be sent directly to the print server.

Printing Environments

AXIS Print Monitor supports printing over TCP/IP (LPR and Raw TCP) and NetBIOS/NetBEUI. To enable printing in these environments, please ensure that the desired printing protocols are running on your client.

Peer-to-Peer Printing

The AXIS Print Monitor needs to be installed on each workstation to perform peer-to-peer printing. Once installed, the AXIS Print Monitor allows you to access all network printers, just as if they were connected directly to your workstation.

Client/Server Printing

AXIS Print Monitor needs only to be installed on one server to perform client/server printing. The installed printers must be configured to be shared to allow clients to use them. Pop-up messages should not be enabled on the server as they will not be displayed on the client platforms.

Note:

AXIS Print Monitor can also be used for DOS printing. Please refer to the AXIS Print Monitor's Readme file for instructions. The Readme file is located in the same folder where AXIS Print Monitor is installed on your PC.

Adding Printers over TCP/IP in Windows NT using AXIS Print Monitor

1. Install AXIS Print Monitor on all workstations that will print via the print server. AXIS Print Monitor is available free of charge on www.axis.com
2. To start the Add Printer Wizard, select **Settings | Printers** from the **Start** menu and double-click the **Add Printer** icon.
3. The Wizard asks you to select **My Computer** or **Network printer server**. Select **My Computer**, click **Next**.
4. Click **Add Port...** In the Available Ports dialog, select **AXIS Port** and click **New Port...**
5. Select **LPR (TCP/IP)** as your choice of protocol and click **OK**.
6. Enter the IP address or the host name of your print server (*Example: enter an IP address: 192.168.3.191 or a host name: AXIS181636*). In the **Logical Printer Name** field, enter the port you wish to use; **LPT1**, **LPT2** or **COM1**. Click **OK**, click **Close**.
7. Select **Manufacturer**, **Printers**, choose a printer name and if you want to use the printer as your default printer. Choose if you want to share the printer and print a test page. Click **Finish**.
8. You may now configure the port, as described below.

Configure the Port:

1. Select **Settings | Printers** from the **Start** menu and highlight the printer you wish to configure. Select **File | Properties | Ports** and click **Configure Port**.
2. Choose whether error condition pop-up messages are to be displayed by checking the box in the **Configure AXIS Ports** dialog. Define the frequency at which the error messages should be displayed after retry. Click **OK**.

Even if the desired printer is available in the Manufacturers and Printers lists, you are advised to use the print driver provided with the printer. This assures you of the latest driver software.

Adding NetBIOS/NetBEUI Printers in Windows 2000 using AXIS Print Monitor

See to it that the NetBEUI protocol is installed on your client. Follow the procedure below to install Axis Printer Ports from a Windows 2000 workstation:

1. To start the Add Printer Wizard, select **Settings | Printers** from the **Start** menu and double-click the **Add Printer** icon. Start the installation by clicking **Next**.
2. The Wizard asks you to select **Local printer** or **Network printer**. Select **Local printer**. Click **Next**.
3. Click **Create a new port**. In the Available Ports dialog, select **AXIS Port** and click **Next**.
4. Select **NetBIOS/NetBEUI** as your choice of network protocol and click **OK**.
5. Select the AXIS Port you want to add from the list of available ports. The port appears as <name>.<port> (Example: AX100086.LP1). The <port> is taken from the table below. Click **OK**.

Ports available	Parallel port 1	Parallel port 2	Serial port
AXIS 540+	LP1	—	—
AXIS 560	LP1	LP2	CM1

6. Choose the appropriate printer driver for your printer. Click **Next** and proceed directly to step 9. It is only necessary to perform steps 7 - 8 if your printer does not appear in the list.

Note:

Even if the desired printer is available in the **Manufacturers** and **Printers** lists, you are advised to use the printer driver provided with the printer. This assures you of the latest driver software.

7. Click the **Have Disk...** button. Insert the printer driver diskette/CD that was provided with your printer, select the appropriate diskette/CD drive and click **OK**.
8. Select the printer driver you want to install and click **Next**.
9. Enter an appropriate name for your printer and click **Next**.
10. Choose whether you want to share the printer with other network users and click **Next**.
11. Choose whether you want to print a test page, click **Next** and then **Finish**.

Adding Printers over NetBIOS/NetBEUI in Windows NT using AXIS Print Monitor

See to it that the NetBEUI protocol is installed on your client. Follow the procedure below to install Axis Printer Ports from a Windows NT workstation:

1. Install AXIS Print Monitor on all workstations that will print via the print server.
2. To start the Add Printer Wizard, select **Settings | Printers** from the **Start** menu and double-click the **Add Printer** icon.
3. The Wizard asks you to select **My Computer** or **Network printer server**. Select **My Computer**. Click **Next**.
4. Click **Add Port...** In the Available Ports dialog, select **AXIS Port** and click **New Port...**
5. Select **NetBIOS/NetBEUI** as your choice of network protocol and click **OK**.
6. Select the AXIS Port you want to add from the list of available ports. The port appears as <name>.<port> (Example: AX100086.LP1). The <port> is taken from the table below. Click **OK**.

Ports available	Parallel port1	Parallel port 2	Serial port
AXIS 540+	LP1	—	—
AXIS 560	LP1	LP2	CM1

7. Close the Printer Ports window.
8. Click the **Configure Port...** button. Choose whether error condition pop-up messages are to be displayed by checking the box in the Configure Axis Ports dialog. Define the frequency at which the error messages should be displayed after retry. Click **OK**. Continue the installation by clicking **Next**.
9. Choose the appropriate printer driver for your printer. Click **Next** and proceed directly to step 12. It is only necessary to perform steps 10-11 if your printer does not appear in the list.

Note:

Even if the desired printer is available in the **Manufacturers** and **Printers** lists, you are advised to use the printer driver provided with the printer. This assures you of the latest driver software.

10. Click the **Have Disk...** button. Insert the printer driver diskette/CD that was provided with your printer, select the appropriate diskette/CD drive and click **OK**.
11. Select the printer driver you want to install and click **Next**.
12. Enter an appropriate name for your printer and click **Next**.
13. Choose whether you want to share the printer with other network users and click **Next**.
14. Choose whether you want to print a test page and then click **Finish**.

Adding Printers in Windows 98 and Me over TCP/IP using AXIS Print Monitor

1. Install AXIS Print Monitor on all workstations that will print via the Axis print server.
2. Next, start the Windows Add Printer Wizard: select **Settings | Printers** from the **Start** menu and double-click the **Add Printer** icon.
3. After clicking **Next** in the first dialog, the Wizard asks you to select between **Local Printer** and **Network Printer**. You must select **Local Printer** as the print server emulates a local printer port. Click **Next**.
4. Choose the appropriate print driver for your printer. If the desired print driver already appears within the displayed **Manufacturers and printers** lists, highlight your selection, click **Next** and proceed directly to step 7. It is only necessary to perform steps 5– 6 if your printer does not feature in the model list.
5. Click the **Have Disk...** button. Insert the printer driver diskette/CD into the appropriate disk drive of your computer.
6. Select the type of printer you want to install from the diskette/CD and click **Next**. If you already have the printer's driver installed, you will be asked whether to keep it or to replace it.
7. Select the **Printers@TCP/IP Port** and click **Next**.
8. Enter an appropriate name for your printer and choose whether you want it to be the default printer. Click **Next**.
9. In the next window, do not order a Test Page to be written, just click **Finish**.
10. The printer you have defined will now be displayed in the Printers Folder. Right-click the printer object and select **Properties**.
11. Click the **Details** tab within the **Properties** page and then click **Add Port** to display the available monitors.
12. Click the radio button "other". Select **AXIS Port** and then click **OK**.
13. Select **LPR (TCP/IP)** as your choice of protocol and click **OK**.
14. Enter the IP address or the host name of your print server (*Example enter an IP address: 192.168.3.191 or a host name: AXIS181636*). In the **Logical Printer Name** field, enter the port you wish to use; **LPT1**, **LPT2** or **COM1**.
15. The TCP/IP port will then be added automatically to the list of available ports. Click **Apply** and **OK**.
16. You may now configure the port, as described below. The Axis Printer Port is now installed.

Configure the Port:

1. Select **Settings | Printers** from the **Start** menu and highlight the printer you wish to configure. Select **File | Properties | Details** and click **Port Settings**.
2. Choose whether error condition pop-up messages are to be displayed by checking the box in the **Configure AXIS Ports** dialog. Define the frequency at which the error messages should be displayed after retry. Click **OK**.

Note:

Even if the desired printer is available in the Manufacturers and Printers lists, you are advised to use the print driver provided with the printer. This assures you of the latest driver software.

Adding Printers in Windows 98 and Me over NetBIOS/NetBEUI using AXIS Print Monitor

Follow the procedures below to install Axis NetBIOS/NetBEUI printer ports on a Windows 98 workstation, using AXIS Print Monitor:

1. To start the Add Printer Wizard, select **Settings | Printers** from the **Start** menu and double-click the **Add Printer** icon.
2. After clicking **Next** in the first dialog, the Wizard asks you to select Local printer or Network printer. Select **Local printer**. Click **Next**.
3. Choose the appropriate printer driver for your printer. If the desired printer driver appears in the displayed **Manufacturers** and **Printers** lists, highlight your selection, click **Next** and proceed directly to step 6. It is only necessary to perform steps 4 – 5 if your printer does not appear in the model list.

Note:

Even if the desired printer is available in the **Manufacturers** and **Printers** lists, you are advised to use the printer driver provided with the printer. This assures you of the latest driver software.

4. Click the **Have Disk...** button. Insert the printer driver diskette/CD that was provided with your printer, select the appropriate diskette/CD drive and click **OK**.
5. Select the printer driver you want to install and click **Next**.
6. Select the AXIS Printer Port from the Available Ports list. The port names appears as <name>.<port>. Here, <name> is AX followed by the last six digits of the print server's serial number (e.g. AX100086) and <port> is taken from the table below. Click the **Configure Port** button.

Ports available	Parallel port1	Parallel port 2	Serial port
AXIS 540+	LP1	—	—
AXIS 560	LP1	LP2	CM1

Example: AX100086.LP1

7. Choose whether error condition pop-up messages are to be displayed by checking the box in the **Configure AXIS Ports** dialog. Define the frequency at which the error messages should be displayed after retry. Click **OK** and **Next**.
8. Enter an appropriate name for your printer and click **Next**.
9. Choose whether you wish to print a test page and click **Finish**.

Section 5 Adding Printers in Macintosh


Having connected the AXIS 540+/AXIS 560 to your network, this section now describes how to set up your print server for printing in Mac OS X and earlier Macintosh environments using AppleTalk.

If you intend to use the print server in a multi-protocol environment, refer to the chapters pertaining to the respective operating systems in this manual.

Bonjour Printing in Mac OS X


Bonjour is available from Mac OS X 10.2 and up. Bonjour is enabled by default in the print server. You can alter the Bonjour parameters from the print server's Web interface: select **Admin** | **Network Settings** | **Detailed View** | **TCP/IP Network**.

1. From the Apple menu, select **Go** | **Applications** | **Utilities** and start the **Print Center** or the **Printer Setup Utility**.
2. Click **Add** in the Printer List.
3. From the drop-down list, select **Bonjour**.
4. High-light the printer you want to install. The print server's default name is **AXISxxxxxx Network Print Server** (where the xs represent the last six digits of the print server's serial number) followed by the ports available. *Example: AXIS610282 Network Print Server_LPT1.*

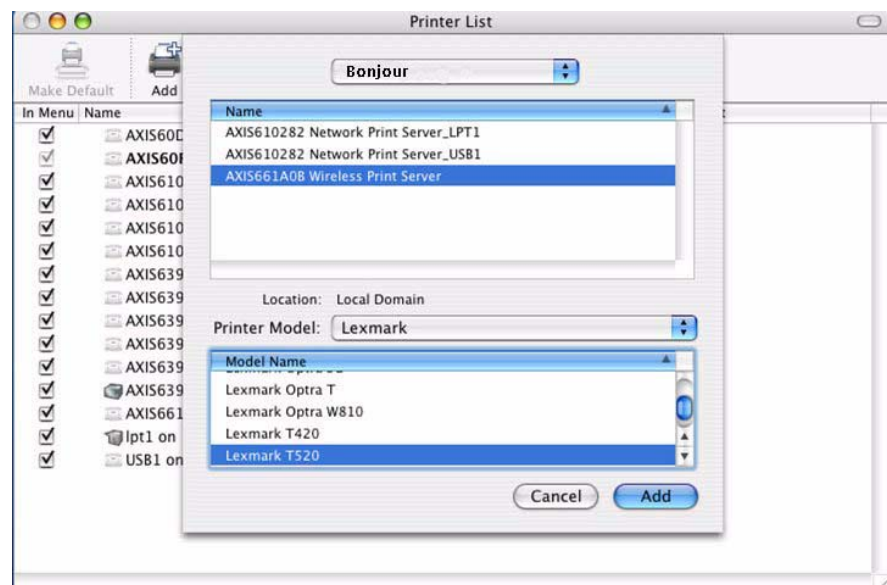


5. Select **printer manufacturer** and **model** from the drop-down list. (For some printer drivers, Printer Manufacturer and Model are selected automatically.)

- Click **Add** to finish the installation. The print server has now been added to the Printer List.

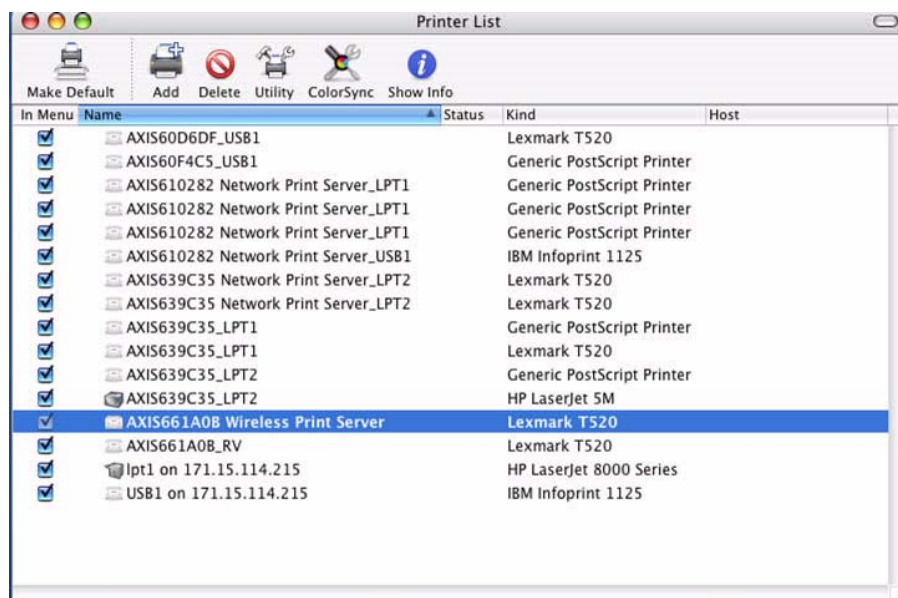

- If you wish to configure printer settings, click **Printers | Configure Printer**.

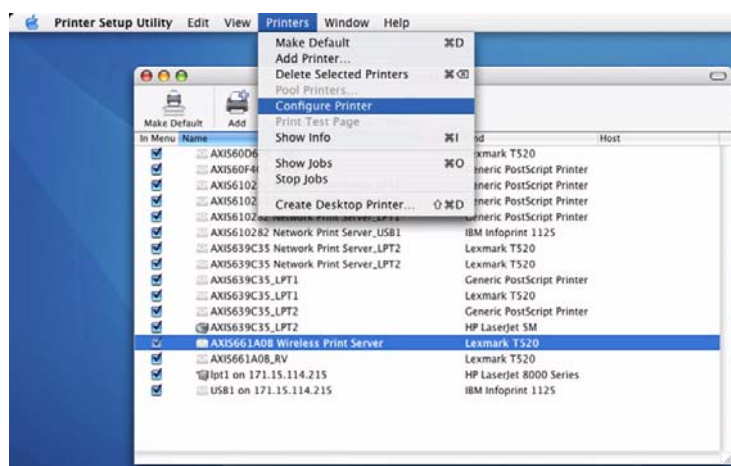

To Change the Bonjour Service Name

You can change the print server's Bonjour service name via the print server's Web interface: **Admin | Network Settings | Detailed View | TCP/IP Network** => Bonjour Service Name.

If the print server using Bonjour is already installed and the print server name or service name is changed, the print server must be removed from the Printer List and then re-installed with the new Bonjour service name.

Installation in Mac OS X using AppleTalk

This section describes setting up your print server for printing in the Mac OS X.

1. Start **Print Center** or the **Printer Setup Utility** (from **Go | Applications | Utilities**).
2. Select **Printers | Add Printer...**
3. From the **Printer List** dialog, select **AppleTalk**.
4. Now, the port of your print server will appear in the list of available printers. The port is shown as <host name>_<port>. **Example:** AXIS100086_LPT1. Select the print server port you want to use.
5. Select an appropriate printer driver for your printer from the **Printer Model** drop-down list. If the printer is not available in the list, select **Generic**. (Note: **Generic** is only used for postscript printers.)

(You can also browse for a printer driver on your computer or network by selecting **Other...** from the list.)

6. Click **Add** to complete the installation.

Installation of LPR printing in Mac OS X

If you want to print using LPR, select:

1. **Printers | Add Printer...**
2. From the **Printer List** dialog, select **LPR printers using IP**.
3. Enter the IP address or host name of the print server in the **LPR printer's Address** field. You must uncheck the **Use Default Queue on Server** check box and enter a Queue Name:

Physical ports: LPT1, LPT2, COM1

Logical printer ports: PR1, PR2, PR, PR4, PR5, PR6, PR7, PR8

Choose a printer driver from the **Printer Model** list and click **Add** to finish.

Installation on Mac OS 9.1 or older, using AppleTalk

- Basic Configuration** On Mac OS 9.1 or older, basic configuration in AppleTalk is performed simply by opening the Chooser window and selecting a printer.
- You can change the default name of your print server or any of default parameters by editing the print server's *config* file. To access the *config* file from a Macintosh, you can use:
- any Web browser with Javascript enabled
 - FTP using MacTCP, Fetch or Anarchie
- In order to use any of these methods, you must assign an IP address to the print server as described in “*Setting Parameters*” on page 40.

Choosing a Printer

- Selecting a Printer** The method for choosing a printer varies depending on which version of LaserWriter printer driver you are using.
- The LaserWriter 7.0 driver assumes that you use a standard PostScript driver, and cannot take advantage of any printer specific features.
 - The LaserWriter 8.0 driver uses PPD files that contain printer descriptions. This gives you full control over any features your printer might have.

- Autodetect Printer Type** The print server can automatically detect the type of printer you are using if you enable **Autodetect Printer Type**. The print server can then recognize Epson and Hewlett Packard InkJet printers. Most Epson and Hewlett Packard InkJet printers that have Mac OS printer drivers for network printing are supported. Without the Autodetect Printer Type function, the AppleTalk printer type has to be specified manually in the print server. For Epson InkJets it would be “EPSONLQ2” and for HP InkJets it would be “DeskWriter”. If the print server does not recognize the connected printer, the default setting “LaserWriter” will be used as printer type. “LaserWriter” is the recommended setting to be used with all PostScript printers.

To enable **Autodetect Printer Type**, log in to your print server's Web interface and select **Admin | Network Settings | Detailed View | Macintosh | Auto Detect Printer Type | Yes**.

See the **Help** pages in the print server's Web interface for details.

- LaserWriter 7.0 Printer Driver** Follow the instructions below to choose a printer:
1. Select **Chooser** from the **Apple** menu.
 2. Click the **LaserWriter** icon.
 3. If your network has more than one zone, click on the zone you want. (If your network does not have any zones, this box will not appear.)

4. Click the name of the printer you want – the ports are shown as <host name>_<port>. **Example:** AXIS100086_LPT1.
5. Click the **Close** box. This completes the configuration and closes the Chooser.

Repeat this procedure for each Macintosh computer on the network using the print server.

LaserWriter 8.0 Printer Driver

Follow the instructions below to choose a printer:

1. Select **Chooser** from the **Apple** menu.
2. Click the **LaserWriter 8.0** icon.
3. If your network has more than one zone click on the zone you want. (If your network does not have any zones, this box will not appear.)
4. Click the name of the printer you want – the ports are shown as <host name>_<port>. **Example:** AXIS100086_LPT1.
5. Click **Setup...** and then **Auto Setup**. If the selected printer supports bi-directional printing and the appropriate PPD file is available, the installation is performed automatically and you can therefore proceed directly to step 7 (if this is not the case, the PPD file must be selected manually, as described in step 6).
6. Choose the PPD file matching your printer, and click **OK**.
If your printer does not appear in the PPD file list, please contact your printer vendor. Use the Generic PPD if you do not need any printer specific features.
7. Click **OK**, and then click the **Close** box. This completes the configuration and closes the Chooser.

Repeat this procedure for each Macintosh computer on the network using the print server.

Bi-directional Support

The AXIS 540+/AXIS 560 allows the printer driver to communicate directly with the printer and consequently facilitates complete functional control over print jobs, e.g. automatic downloading of fonts not resident in the printer.

This functionality has backward compatibility with older printers and Macintosh computers, which means that the AXIS 540+/AXIS 560 can generate appropriate responses to Macintosh printer queries when the connected printer does not support bi-directional communication.

Verifying the Setup

You simply need to print a document from the Macintosh computer to verify communication to the chosen printer. The basic installation can be considered complete if the print test is satisfactory. The AXIS 540+/AXIS 560 is now ready for use.

BCP and TBCP You should specify if you want to enable or disable binary transfer of print data in the print server's Web interface (**Admin | Network Settings | Detailed View | Macintosh | Binary Protocol for Printer *n***). By enabling binary transfer you reduce printing time, provided that the print job is sent as binary data to the print server. This is particular true when you are printing large bitmaps.

- TBCP enables the print server to use the TBCP (Tagged Binary Communication Protocol) to transfer print data to the printer. Select this alternative when using Postscript printers.
- BCP enables the print server to use the BCP (Binary Communications Protocol) to transfer print data to the printer. Select this alternative when using Postscript printers.
- None disables all binary transfers, select this alternative for all non-PostScript printers and for ASCII PostScript printing.

Notes:

- If you have have set the Autodetect Printer Type parameter to YES, the text output format will be chosen automatically (Admin | Network Settings | Detailed View | Macintosh | Auto Detect Printer *n* Type | Yes).
 - Some printers, e.g. Epson InkJet printers, can not be used when TBCP is enabled.

Setting Parameters In AppleTalk, you can change a limited number of the parameters of the AXIS 540+/AXIS 560, such as:

- enable and disable binary data transfers for your printing
- select the type of binary transfer protocol to use
- specify the AppleTalk printer type
- set the IP address

However, by assigning an IP address to your print server, you have access to all of the print server parameters via any standard Web browser or via FTP. Refer to *Section 10 Management and Configuration*, on page 84 for more information.

Follow the instructions below to set the print server parameters in AppleTalk:

Important:

DO NOT use the parameter values from this example when configuring your print server. You should select values that are appropriate for your printers and network settings.

1. Open the **Chooser** from the Apple menu.
2. Select a network printer driver — any LaserWriter will do.
3. Select the printer port ending with **_CFG**.
4. Close the Chooser.
5. Open a text editor, e.g. SimpleText.

6. Write a text file containing the parameters you want to set:

BINARY_TYPE_1.	:BCP
INT_ADDR.	:192.168.3.191
ATYPE_1.	:EPSONLQ2

Note:

Parameters that you do not want to set should be excluded from the text file. Refer to the Parameter list in this manual for information about which values that are valid for each parameter.
--

7. Print the text file. The settings will be stored in the print server.
8. Open the Chooser and select the printer port you wish to use for printing documents.
9. Close the Chooser.

Note:

The _CFG port disappears 60 minutes after the AXIS 540+/AXIS 560 has been powered on. If you want it to reappear, you must restart your print server.

Section 6 Adding Printers in NetWare



This section describes how to continue the installation of the AXIS 540+/AXIS 560 in the NetWare environment. Identify which transport protocol you are running on your network and which installation method you should use. Continue the installation by selecting the appropriate installing instructions from the table below:

<i>Installation method</i>	<i>Transport protocol</i>	<i>Action</i>
NDPS	TCP/IP IPX/SPX	See "Setup using NDPS" on page 43 and - "Public Access Printers" on page 44 - "Controlled Access Printers" on page 48
iPrint	iPrint over LPR	See "Setup using iPrint" on page 57 and "Install a printer using AXIS LPR Gateway Configuration Snap-in" on page 59
	iPrint over IPP	See "Setup using iPrint" on page 57 and "Install a printer with AXIS IPP Gateway Configuration Snap-in" on page 59
Queue-based printing	IPX/SPX Basic Configuration	To install using the AXIS NetPilot Installation Wizard, see "Basic Setup with AXIS NetPilot" on page 61.
	IPX/SPX Advanced configuration	If you need a more advanced installation that is not covered by the AXIS NetPilot Installation Wizard, see "Advanced Installation using AXIS NetPilot" on page 62.

See "NetWare Administration" on page 66 for information on Novell's administration tools.

If you intend to operate your AXIS 540+/AXIS 560 in a multi-protocol, mixed environment, you should also proceed to the other relevant sections in this manual.

Setup using NDPS

The AXIS 540+/AXIS 560 supports Novell Distributed Print Services (NDPS). You can run NDPS over Pure IP (TCP/IP) or IPX/SPX.

Before the AXIS 540+/AXIS 560 can be installed, make sure that NDPS is installed and a Broker is loaded on your NetWare file server.

The Axis Network Print Server uses the AXIS NDPS Gateway for printing in networks using either IP or IPX as transport protocols. The printer gateways are included with the NDPS software (from version 5.1 and up) and are automatically installed together with NDPS.

Installing the Axis Network Print Server in the NDPS environments


Having assigned an IP address to the AXIS 540+/AXIS 560 as described in *Assign an IP Address to the Print Server*, on page 14, you are now ready to install the Axis Network Print Server for NDPS printing. You can select to install the connected printers as public or controlled access printers. Follow the instructions below to install the Axis Network Print Server using NDPS:

Important:


- The NDPS Enabled parameter of the Axis Network Print Server is by default enabled. It must be set to Yes in order for the communication between the print server and the NDPS gateway to be enabled. To change this parameter, log in to the print server's Web pages and choose: Admin | Network Settings | Detailed View | NetWare => NDPS Enabled => Yes.
- If you do not have an NDPS Manager object available, start out with creating one in the NetWare Administrator.

Public Access Printers Follow these instructions to create a public access printer using the NDPS Manager object in your NetWare administrator utility:

1. Double-click on the NDPS Manager object you will be using to control the Printer Agents.
2. On the **Identification** page for the NDPS Manager, click the printer **Agent List** button. The **Printer Agent List** dialog will appear.
3. Click **New**. The **Create Printer Agent** dialog will appear.
4. Type a name of your choice in the **NDPS Printer Agent** field

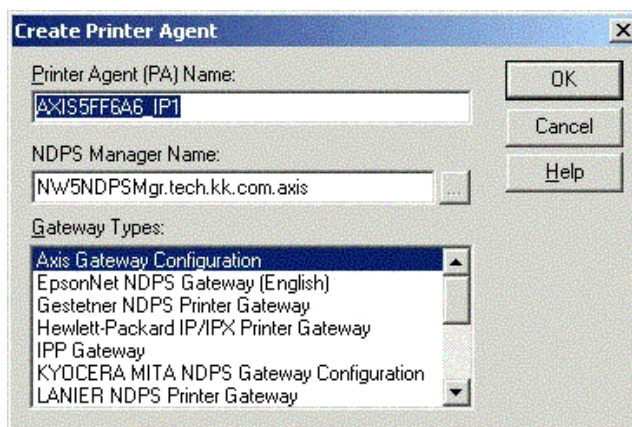

5. Select the **Axis Gateway** configuration in the **Gateway Type** window.
6. Click **OK**
7. In the **Select the printer's type** window, choose your printer. If you cannot find the printer, select an appropriate Generic one (PCL, PS, etc)

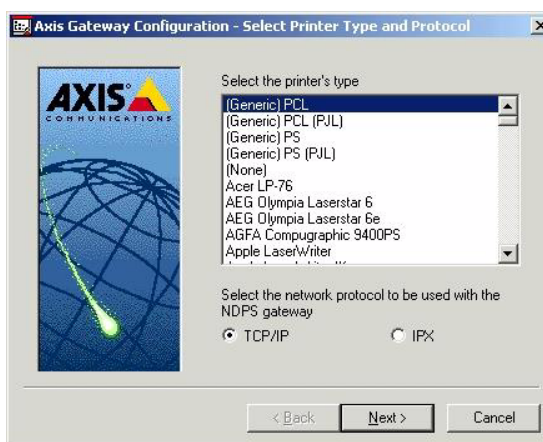


8. Select **TCP/IP (default)** or **IPX** as network protocol. Click **Next**.

9. You will find the print server in the next window with the printer attached on the connected port. Depending on the transport protocol you used when you start the installation, the print server should appear as following:

- **TCP/IP Network protocol:**

IP Address and Port, e.g: *192.168.70.243* and *LPT1*

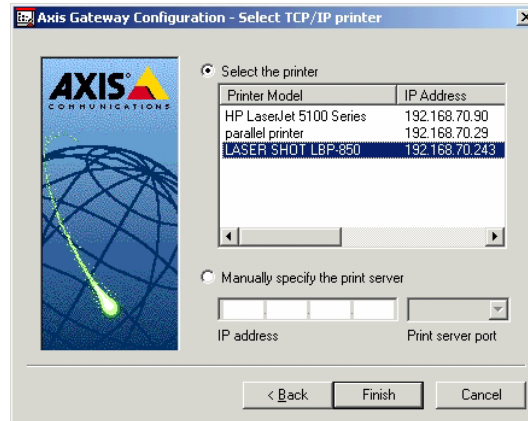


Only the ports with a connected printer show up in this window. If the printer is not in the displayed print list, click **Manually specify the print server** and do the following: Enter the print server's IP address in the **IP Address** field and choose a port in the **Print server port** field:

e.g., *192.168.70.243* and *LPT1*

The available ports are:

Ports available	Parallel port 1	Parallel port 2	Serial port
AXIS 540+	LPT1	—	—
AXIS 560	LPT1	LPT2	COM1

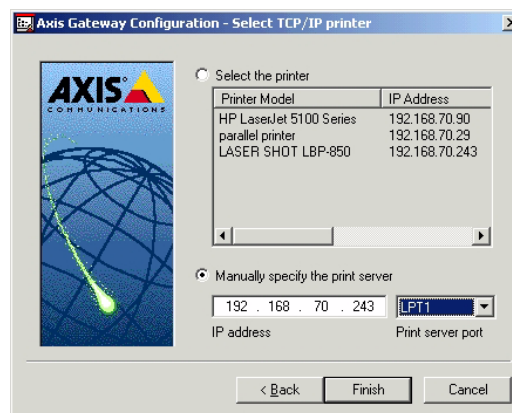

IPX Network protocol:

All the available ports will be presented, regardless if the printers are or not connected to those ports, e.g.


LPT1	AXIS5FF66A_P1
LPT2	AXIS5FF66A_P2
COM1	AXIS5FF66A_P3

The IPX Addresses for the above printers will appear as:
<IPX External Network Number>:<Print server's HW address>:<Socket Number>

i.e.: 01d7e1c2:00408c5ff6a6:400c

where 400c, 401c, and 402c are the socket numbers corresponding to the LPT1, LPT2 and COM1 physical ports:

LPT1	400c
LPT2	401c
COM1	402c

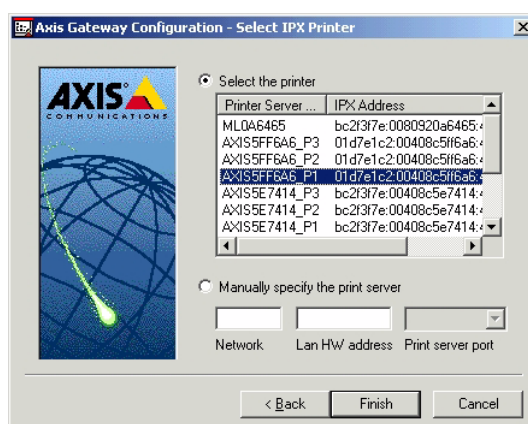


If the printer is not in the displayed print list, click **Manually specify the print server** and do the following:


1. Enter the <IPX External Network Number> in the **Network** field.
2. Enter the <Print server's HW address> in the **LAN HW address** field.

- Choose a port in the **Print server port** field, e.g. 01d7e1c2:00408c5ff6a6 and LPT1


Ports available	Parallel port 1	Parallel port 2	Serial port
AXIS 540+	LPT1	—	—
AXIS 560	LPT1	LPT2	COM1

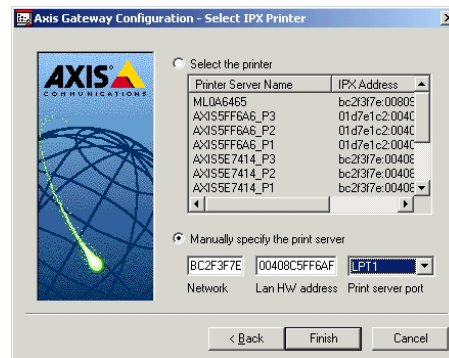

- When done, select your printer and click **Finish**.
- Next, select the printer drivers for each client operating system. (Windows 2000, Windows NT and Windows 95/98). These drivers will be automatically downloaded to users' workstations when they install this printer in the future.

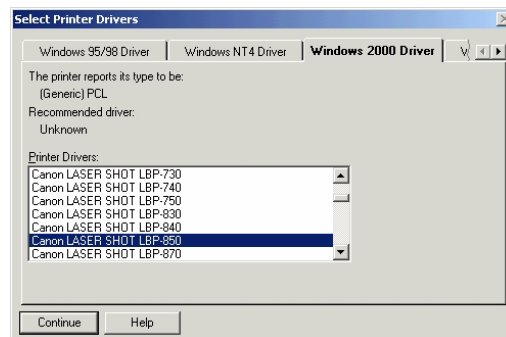

- Click **Continue** and **OK** in the next NDPS window. The new Printer Agent appears in the Printer Agent List window.

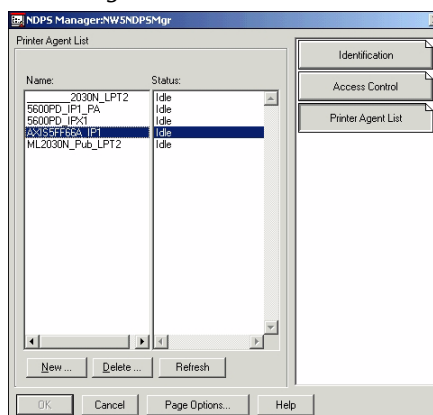


Check the Status: it should be **Idle**.

- Press **Cancel** to close the NDPS Manager


To install the printer on the workstation, see “*Installing an NDPS Printer on a Workstation*” on page 53.

Controlled Access Printers Follow these steps to create a controlled access printer as an object in the Directory Tree, using the NetWare administrator utility:


- Log in as Admin.
- Start the NW Admin utility on any Workstation (SYS:PUBLIC\WIN32\nwadmin32.exe).
- Browse the context your NDPS Manager resides in.
- From the **Object** menu, select **Create**. The New Object dialog appears.

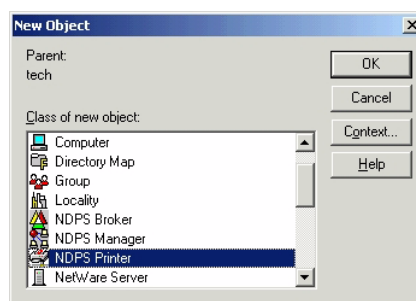


- Select **NDPS Printer**. The Create NDPS Printer dialog appears.

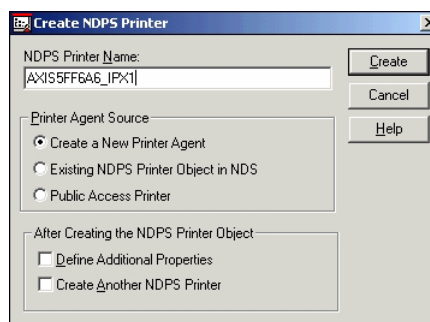


6. Type a name of your choice in the NDPS Printer Name field, e.g. **AXIS5FF66A_IPX1**
In the Printer Agent Source field, select the source of the Printer Agent. The following options are available:
 - **Create a New Printer Agent.** If you select this option, you are asked to select either the Novell Gateway or a third party Gateway.
 - **Printer Agent on Existing NDS Object.** Use a Printer already configured as a controlled access printer (NDPS Printer Object).
If you select this option, a list of current NDPS Printer Objects in this container will be displayed from which you can select the one you want to use.
 - **Public Access Printer Agent.** Use an existing Printer Agent representing a Public Access Printer.
7. Select **Create a New Printer Agent** and click **Create** to display the Create Printer Agent dialog.
8. Confirm the Printer Agent name (default is the name of the new printer you are creating) and browse to select the NDPS Manager to which you want to assign it

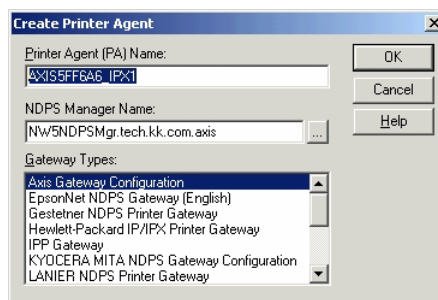

9. Select **AXIS Gateway Configuration** in the Gateway Type field.
10. Click **OK**.
11. In the **Select the printer's type** window choose your printer. If you cannot find the printer, select an appropriate Generic one (PCL, PS, etc)

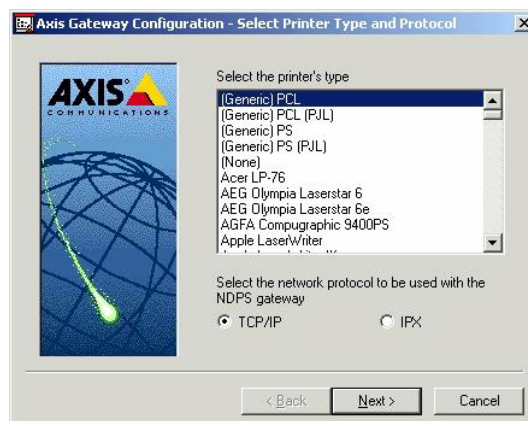


12. Select TCP/IP (default) or IPX as network protocol.
13. Click **Next**.
14. You will find the print server in the next window with the printer attached on the connected port.
Depending on the transport protocol you used when you start the installation, the print server will appear as:
 - **TCP/IP Network protocol:**
IP Address and Port, e.g: *192.168.70.243* and *LPT1*

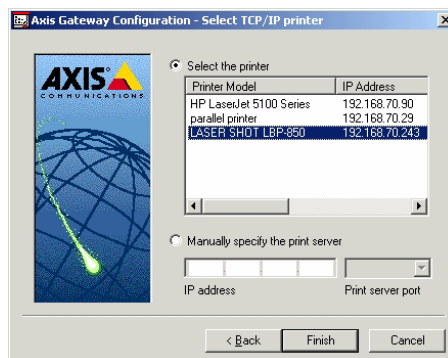

Only the ports with a connected printer will show up in this window.
If the printer is not in the displayed print list:

1. Click **Manually specify the print server** enter the print server's IP address in the **IP Address** field and choose a port in the **Print server port** field e.g., *192.168.70.243* and *LPT1*

Ports available	Parallel port 1	Parallel port 2	Serial port
AXIS 540+	LPT1	—	—
AXIS 560	LPT1	LPT2	COM1

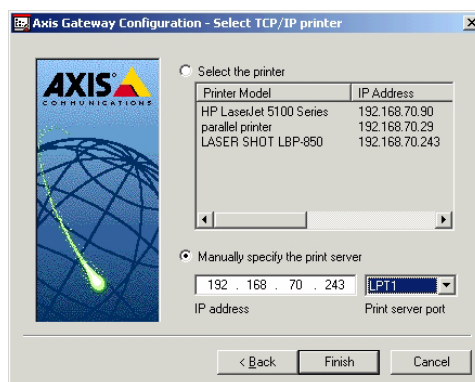

IPX Network protocol:

All the available ports will be presented, regardless if the printers are or not connected to those ports.


LPT1	AXIS5FF66A_P1
LPT2	AXIS5FF66A_P2
COM1	AXIS5FF66A_P3

The IPX Addresses for the above printers will appear as:
 <IPX External Network Number>:<Print Server's HW
 address>:<Socket Number>

i.e.: 01d7e1c2:00408c5ff6a6:400c

where 400c, 401c, and 402c are the socket numbers corresponding to the LPT1, LPT2 and COM1 physical ports:


LPT1	400c
LPT2	401c
COM1	402c

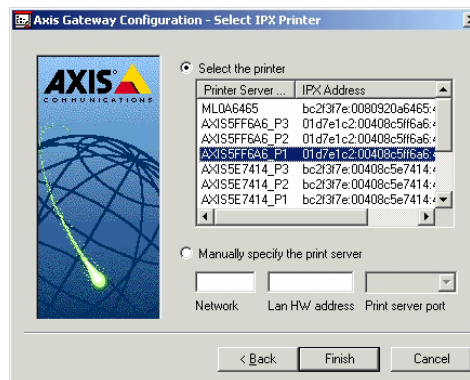


If the printer is not in the displayed print list:

1. Click **Manually specify the print server** and enter the <IPX External Network Number> in the **Network** field.
2. Enter the <Print server's HW address> in the **LAN HW address** field and choose a port in the **Print server port** field:
e.g.: 01d7e1c2:00408c5ff6a6 and LPT1.

Ports available	Parallel port 1	Parallel port 2	Serial port
AXIS 540+	LPT1	—	—
AXIS 560	LPT1	LPT2	COM1

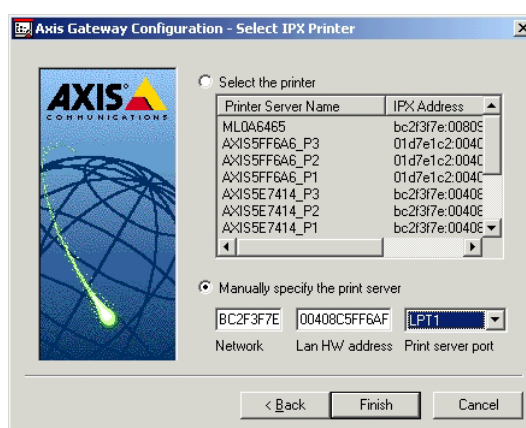

3. When done, select your printer and click **Finish**.
4. Next, select the printer drivers for each client operating system. (Windows 2000, Windows NT and Windows 95/98). These drivers will be automatically downloaded to users' workstations when they install this printer in the future.

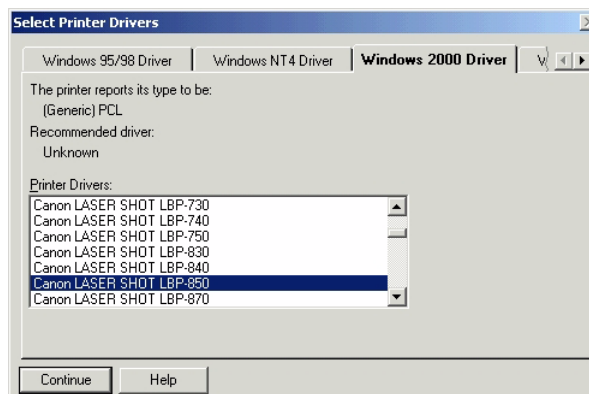

- Click **Continue** and **OK** in the next NDPS window. Your printer will appear as an NDS object in the Directory Tree and will offer a full range of network security options.




To install the printer on the workstation, see “*Installing an NDPS Printer on a Workstation*” on page 53.

Installing an NDPS Printer on a Workstation

To install the printer on a workstation, use either Novell Printer Manager (NetWare 5.1 only) or the Add Printer Wizard on the local workstation.


Using Novell Printer Manager

- Log in as Admin.
- On the any workstation, browse to <NW 5.1 File Server>\SYS:PUBLIC\Win32 and start Nwpmw32.exe (Novell Printer Manager). The Novell Printers dialog appears, displaying a list of installed Public or Controlled printers (if any printers have previously been installed on the workstation).

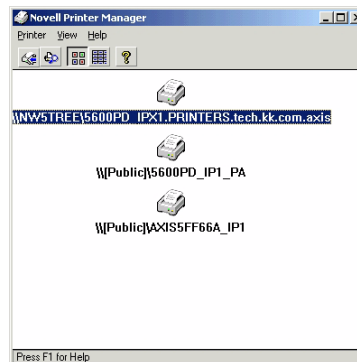


- From the Printer Manager's Printer pull down menu, select **New**.


4. Click **Add**. A list of available printers appears.

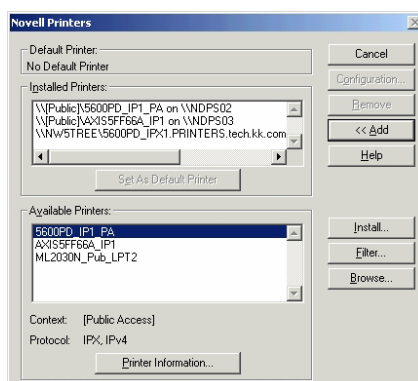

5. The list of available printers shows the NDPS Public Access Printers on the network and the NDPS Controlled Access Printers in your current NDS context. To see the Controlled Access Printers in other context that you have rights to, click the **Browse** button and select your choice. Click **OK**.

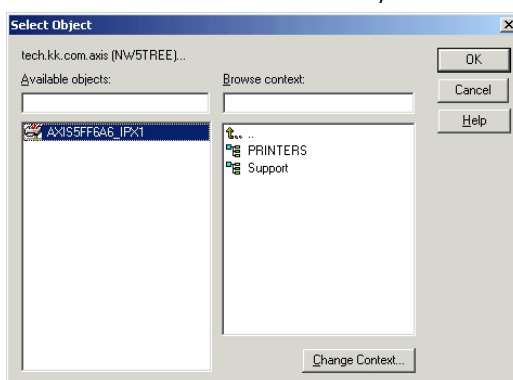


6. Once selected, click **Install**. The Novell Printers – Install dialog appears.

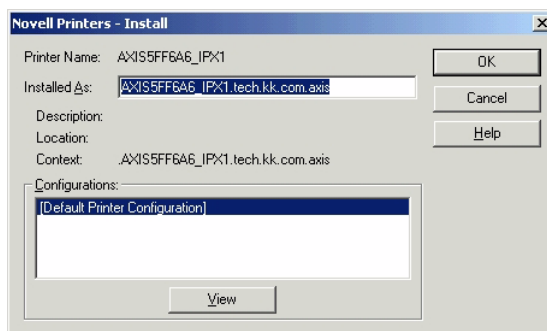

7. Click **OK**. The default driver for that printer is then automatically downloaded.


If the printer object does not have a printer driver associated with it, or a driver was not found, you will be prompted to either to choose from a list of printer drivers provided by NDPS or to provide a disk with the appropriate driver.

The Novell Printers dialog appears with the new printer, e.g. *AXIS5FF6A6_IPX1* in the installed list.

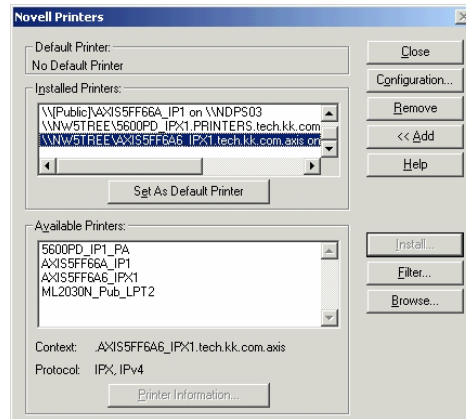


8. Click **Close**.

In the Novell Printer Manager window the new installed NDPS printer appears with the name e.g. *AXIS5FF6A6_IPX1* and is available for print jobs.

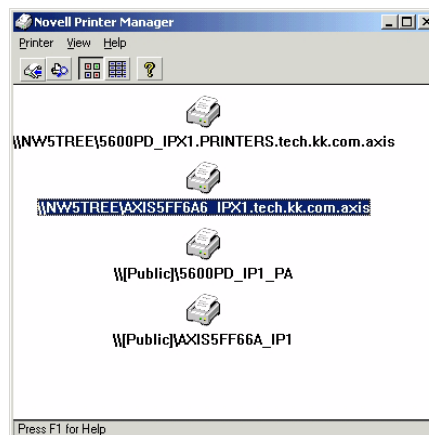


- Verify by clicking **Start - Settings - Printers** on the workstation.

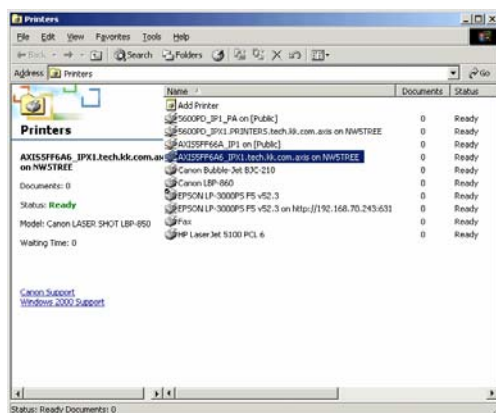


Using the Add Printer Wizard

- Click **Start** on your workstation, select **Settings => Printers**. There might be some differences regarding this menu depending of MS Operating System you are running.
- Start the Add Printer Wizard on the workstation. The Add Printer Wizard dialog will appear. Click **Next**.
- Select **Network printer** and click **Next**.

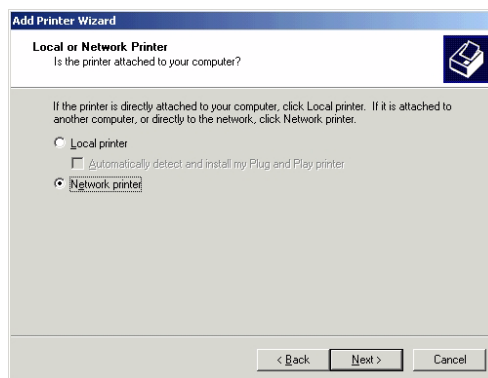

- Click **Next** again in the **Locate Your Printer** dialog (Win2000/XP) or press the **Browse** button (Win9X)
- Browse to the **NDPS Printers**. Expand either the **NDPS Controlled Access Printers** or the **NDPS Public Access Printers** folder, select your newly installed NDPS printer and follow the instructions.

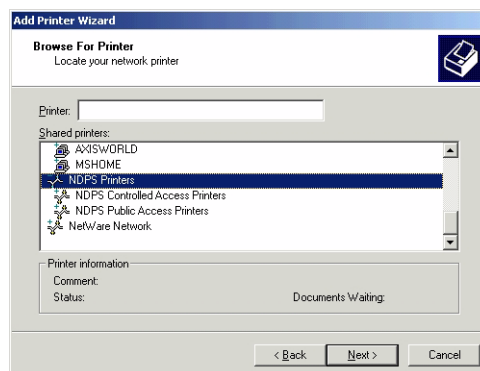

When you have completed these steps, you are ready to start printing.

Notes:

- The Public Access print servers are immediately available for everyone on the network
- The Axis Gateway Configuration Utility is an installation and configuration tool for NDPS printers in the NetWare environment.
The Axis Gateway will appear in NetWare 5.1 and later releases. You can download the Axis Gateway Configuration Utility for use with earlier versions of NetWare from www.axis.com.
- To print using TCP/IP, Axis print server firmware 6.1 or later is required. In order to print using IPX/SPX, Axis print server firmware 5.51 or later is needed.

Setup using iPrint

iPrint is Novell's next generation of printing software that lets users print to and from all destinations.

A standard Web page displays available printers to the user. By clicking a printer, the iPrint client is installed (if not installed previously), the printer's driver is downloaded, and a printer is created in the user's Printer folder, enabling the user to send documents to the printer from any application on the desktop.

Before setting up iPrint printers, make sure that you meet all the iPrint Setup requirements. See the Novell iPrint Administration Guide for instructions on installing, configuring, and customizing iPrint.

AXIS Print servers can be installed as iPrint printers, either by using the Novell LPR gateway (LPR on IP) or the AXIS Gateway Configuration Snap-in for iPrint.

Axis provides two free Snap-ins for iPrint:

- **AXIS LPR Gateway Configuration**
- **AXIS IPP Gateway Configuration**

When you install Service Pack 6 (16 April 2003) for NetWare 5.1 or later and Service Pack 3 (16 April 2003) for NetWare 6.0 or later, the AXIS LPR Gateway Configuration will automatically be installed and configured on the NetWare Servers and ready for use.

The AXIS IPP Gateway Configuration Snap-in for NetWare 6.0 can be downloaded for free from www.axis.com. Follow the instructions below to install the AXIS IPP Gateway Configuration Snap-in for NetWare 6.0, if you want to add it in your iPrint environment.

Installing AXIS IPP Gateway Configuration Snap-in for NetWare 6.0

1. Download the free **axisIPP-snap-in.zip** file from www.axis.com and unzip it in a temporary directory.
2. Make sure the the NetWare Enterprise Web Server was previously installed on the server. Otherwise, install it.

3. Novell iPrint uses the NDPS infrastructure, so make sure that all the NDPS requirements have been met:
 - Make sure that the BROKER.NLM is loaded. If it isn't, type `LOAD BROKER` in the server console prompt and select the name of the Broker.
 - Make sure that the NDPS Manager object is created in the Novell Directory Services (NDS) tree. Refer to your Novell documentation for creating this object.
 - Make sure that the NDPSM.NLM is loaded. If it isn't, type `LOAD NDPSM` in the server console prompt and select the appropriate NDPS Manager.
4. Shutdown Tomcat and the NetWare Enterprise Web Server on the NetWare file server by executing the following commands:

Type `"NSWEBDN" <Enter>`
Type `"TOMCAT33 -STOP" <Enter>`
Type `"NVXADM DN" <Enter>`
5. Map the next available drive (e.g. G:) to the root of volume SYS on your NetWare server.
From the temporary directory where **axisIPP-snap-in.zip** has been unzipped, run the batch file **AxisIPP.bat** (default G:).
If the drive G: is not available, you have to edit the batch file and change the drive to next available one.
Check that each line in the batch file is executed without failure.
6. Restart Tomcat and the NetWare Enterprise Web Server on the file server by executing the following commands:
Type `"TOMCAT33" <Enter>`
Type `"NVXADMUP" <Enter>`
Type `"NSWEB" <Enter>`.
7. Access the iManager Web page on the NetWare server by opening the following URL:
`https://<IP address of NW server>:2200/eMFrame/iManager.html`
You have to authenticate.
8. Click on **iPrint Management** on the left pane and select **Create Printer**.
9. On the right pane, verify that the newly installed **AXIS IPP Gateway Configuration** is under the **Gateway type** drop-down menu.
If not, it may be necessary to restart the NetWare server.

Now you are ready to use the AXIS IPP Gateway Configuration for installing iPrint printers. You have to have **Administrator rights** to install the printers through iPrint.

**Install a printer with
AXIS IPP Gateway
Configuration Snap-
in**

1. Use an AXIS 540+/AXIS 560 and connect a printer to any port.
2. Connect the print server to the network.
3. Connect the power adapter.
4. Start the printer and the print server.
5. Log in as Admin.
6. Use a Web browser and the local host URL to login into iManager on your NetWare server.
7. Open your browser to the following URL:
`https://<IP address of NW server>:2200/eMFrame/iManager.html`
You have to authenticate.
8. Click on **iPrint Management** on the left pane.
9. Click on **Create Printer**.
10. Choose a name of your choice for the printer
11. Choose the context where the printer will be installed.
12. Browse for the NDPS Manager and select it.
13. In the **Gateway Type** drop-down list, choose the **Axis IPP Gateway Configuration**. Press **Next**.
14. In the Printer URL, you may choose either the IPP version 1.0 format:
`http://<IP address of your print server>:631/lptx`
or the IPP version 1.1:
`ipp://<IP address of your print server>/lptx`
where x is the port number. Click **Next**.
15. Select default drivers for your printer. Click **Next** and **OK**.

**Install a printer using
AXIS LPR Gateway
Configuration Snap-
in**

1. Use an AXIS 540+/AXIS 560 and connect a printer to whatever port you want.
2. Connect the print server to the network.
3. Connect the power adapter.
4. Start the printer and the print server.
5. Log in as Admin.
6. Use a Web browser and the local host URL to login into iManager on your NetWare server.
7. Open your browser to the following URL:
`https://<IP address of NW server>:2200/eMFrame/iManager.html` You have to authenticate.
8. Click on **iPrint Management** on the left pane.

9. Click on **Create Printer**.
10. Choose a name for the printer.
11. Choose the context where the printer will be installed.
12. Browse for the NDPS Manager and select it.
13. In the **Gateway Type** drop-down list, choose the **Axis LPR Gateway Configuration**. Click **Next**.
14. Choose either the IP address or the DNS Name for your print server.
15. Under **Printer name**, select the physical printer port, e.g. LPT1, or logical printer port pr1-pr8 using the drop-down list. Click **Next**.
16. Select default drivers for your printer. Click **Next** and **OK**.

Installing the iPrint Printer on the Workstation

An iPrint printer can be locally installed on the workstation in two ways:

- Using the iPrint Client
- Using the MS Add Printer Wizard at the workstation.
See "Using the Add Printer Wizard" on page 56.

Installing the iPrint Printer using the iPrint Client.

In order for users to use iPrint, they need to install the Novell iPrint Client software and a printer. When a user selects a printer to be installed by iPrint, iPrint checks to see if the Novell iPrint Client software is installed and then installs it if necessary. Then the printer driver is downloaded and the printer is installed in the user's Printer folder.

In order for iPrint to work properly, the workstation should have the following:

- Windows 95/98/Me or Windows NT/2000/XP
- Web browser with JavaScript enabled:
 - Microsoft Internet Explorer 5.0 or later
 - Netscape 4.76 (iPrint is not supported on Netscape 6)

The user should use the following iPrint url:

http://<IP address of your NW server>:631/IPP

1. From a Netscape or Internet Explorer browser, enter the provided URL. A Web page displays a listing of available printers to install and a link to install the client software.
2. Select **Install iPrint client software** to locally install the iPrint printers. If you try to install a printer before installing the iPrint client software, you will be prompted to install the client software first.
If you associate a printer driver with a printer being installed, the driver is automatically installed on the user's workstation. If the driver already exists, that driver is overwritten even if it is a newer driver.
3. After installing a printer, it is added to the user's **Printer folder**. Users can print to the printer by selecting it from any application.

Basic Setup with AXIS NetPilot

Install the AXIS NetPilot software on your computer. AXIS NetPilot runs on Windows 98 and Windows NT.

- Starting the Installation** Follow the instructions below to install the AXIS 540+/AXIS 560 with AXIS NetPilot:
1. Start AXIS NetPilot by double-clicking the NetPilot icon, which is located in the folder where you installed AXIS NetPilot.
 2. Locate the Axis Network Print Server in the 'New Axis Units' folder. Select it and click the **Install** button on the AXIS NetPilot toolbar. If your network is large, it could take a few seconds before the print server appears in the folder.
 3. Choose the **with Installation Wizard** option.

The AXIS NetPilot Installation Wizard guides you through the installation process. The following options are available:

Note:

The number of options varies according to the number of environments you enable.

- | | |
|-------------------|--|
| Print Server Name | The default print server name consists of the characters 'AXIS' followed by the last six digits of the serial number. If you want to change the print server name, just type the new name in the available text field. |
| Environments | Choose which networking environments you want to configure the Axis Network Print Server for, e.g. NetWare, TCP/IP, Windows & OS/2 or Macintosh. If your network comprises various different platforms, you can enable any combination of environments. |
| NetWare NDS | Place NetWare Print Queues on a specific bindery server, or alternatively into an NDS Tree. |
| The IP address | Choose the method the Axis Network Print Server should employ for obtaining an IP address. DHCP, ARP, RARP, BOOTP and Auto-IP are supported. You can also select to set the IP address manually. Refer to <i>"Assign an IP Address to the Print Server"</i> on page 14 for further information about setting the IP address. |

Print Queues The Axis Network Print Server uses the print server name followed by the printer port as the default Print Queue names and print server port names. If you want to change the default printer queue names, just type the new names in the available text fields.

AXIS 540+

Environment	Default Names
NetWare	AXIS1A0003_LPT1_Q
Windows & OS/2	AX1A0003.LP1
AppleTalk	AXIS1A0003_LPT1

Default Print Queue Names and Print Server Port Names
for each of the operating environments.

AXIS 560

Environment	Default Names
NetWare	AXIS1A0003_LPT1_Q AXIS1A0003_LPT2_Q AXIS1A0003_COM1_Q
Windows & OS/2	AX1A0003.LP1 AX1A0003.LP2 AX1A0003.CM1
AppleTalk	AXIS1A0003_LPT1 AXIS1A0003_LPT2 AXIS1A0003_COM1

Default Print Queue Names and Print Server Port Names
for each of the operating environments.

Test Page The final user prompt in the Installation Wizard allows you to print a test page through NetWare. The test page displays the name of all the NetWare servers the Axis Network Print Server is connected to and shows the status of each connection.

Unless you want to connect or create additional printing queues, the installation for the NetWare environment is now completed.

Notes:

- The parameters entered during installation are not permanent; they can be altered at any time according to your network printing requirements.
- No serious or permanent damage will be caused if you make a mistake during installation. If you find, at any time, that printing is not satisfactory, the parameters can easily be changed to tune the system to your requirements.
- For information on advanced functions, please refer to the AXIS Network Print Server Technical Reference. You can download this or other technical information over the Internet by accessing www.axis.com

Advanced Installation using AXIS NetPilot

Having installed your Axis Network Print Server print server in accordance with the basic installation procedures described in *Basic Setup with AXIS NetPilot*, on page 61, your Axis Network Print Server

print server should now feature in the 'Network Print Servers' folder located in the AXIS NetPilot main window.

NetWare Network Environment Window

The NetWare Network Environment window allows you to connect additional print queues to your Axis Network Print Server as well as create new ones.

Follow the steps below to gain access to the NetWare Network Environment window:


1. Select the required Network print server from the 'Network Print Server' folder.
2. Choose **Network** from the Setup menu or click on the **Network** icon on the AXIS NetPilot's toolbar.
3. If you are not logged on to your NetWare file server, a dialog box will ask you to log on.

The Axis Network Print Server periodically updates the configuration by scanning the NDS tree or, in the case of NetWare versions 3.x, the designated file servers.

Connecting Print Queues

Follow the steps below to connect a print queue to the print server port:

1. Open the NetWare 'Network Environments' window.
2. Select the print server port you want to connect.
3. Click the **Connect...** button. The **Connect NetWare Print Queues** window appears.

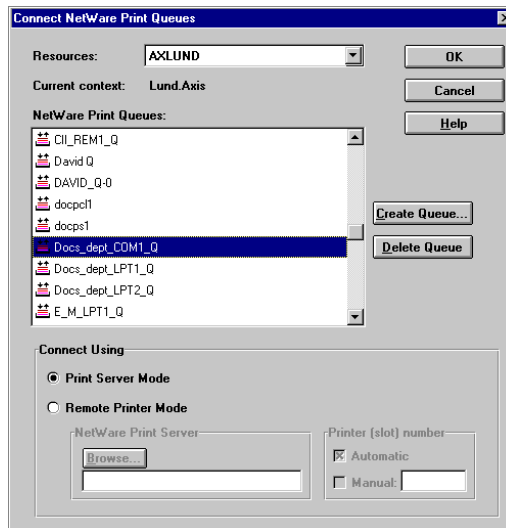

The AXIS NetPilot Connect NetWare Print Queues window

4. Select the tree or server location of the print queue from the **Resources** box.
5. Select an existing print queue to connect to the server port, or create a new print queue by clicking on **Create Queue...** If you have selected an existing queue, advance to step 8. Continue with step 6 only if you want to create a new queue.

6. Type the queue name in the **Create Queue** dialog window. If you want to create a queue in the NDS tree you must also enter the name of the volume where the queue will be located. Click **OK**.
7. Select the newly created queue from the queue list.
8. Select **Print Server Mode** or **Remote Printer Mode**. If you selected **Print Server Mode**, advance directly to step 11, otherwise continue with step 9.
9. Select an appropriate NetWare Print Server name, that will be associated with the Axis Network Print Server, by using the **Browse...** button.

Notes:

- You cannot type or edit the name manually.
- Make sure that you have PSERVER.NLM running if you selected Remote Printer Mode in step 8.

10. If you want to define a remote printer number slot manually, check the **Manual** box and type the desired number in the box.
11. Click the **OK** button to return to the Network Environments window.

Basic Queue-based printing over IP

Axis print servers with software version 6.0 or later allow users to print in a Pure IP environment using traditional queue-based printing (which usually uses the IPX transport protocol). Note that only NDS queue-based printing is supported.

In the NetWare Pure IP environment, you must use the NetWare Administrator to create the printer, print server and queue objects.


Installing the Axis Network Print Server

Follow the instructions below to install the Axis Network Print Server in the NetWare Pure IP environment:

1. Start the Configuration Wizard from the **User mode** in the Axis Network Print Server Web interface.
2. Click your way through the Wizard until reaching the **NetWare** page.
3. Set the parameters on the NetWare page:
 - PSERVER NDS Tree (example: NW5TREE)

or

- PSERVER NDS File Server: (example: FILESERVERNAME)
- PSERVER NDS Distinguished Name:
(example: AXISXXXXXX.<context>, where <context> is the container where you want to create your print server)

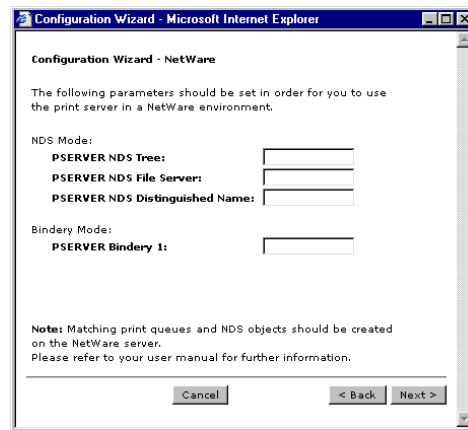

Setting the PSERVER parameters in the Axis Network Print Server Web interface.

4. Use the NetWare Administrator to create the printer, print server and queue objects in the NDS tree and then link them together. The **Print Services Quick Setup (Non-NDPS)** utility can be used for this. Go to **Tools** in the **NetWare Administrator**.
5. Use the Add Printer Wizard on your work station to install the printer on your client. Note that only NDS queue based PSERVER printing is supported. When installing, choose **Network Printer** and browse to the queue you have just created. Alternatively, choose **Local Printer** and select the queue you have just captured.

Any configuration and management of the Axis Network Print Server can be performed from any standard Web browser. Please refer to “*Using a Web Browser for Print Server Management*” on page 84.

If both the IPX and IP protocols are enabled in your network and the print server uses DUAL_STACK (enabled by default) as its network transport protocol, then IPX will be chosen. To force the print server to use the IP transport protocol, go to your print server’s Web interface and choose **Admin | Detailed View | NetWare** and change the NetWare Transport Protocol from DUAL_STACK to IP_ONLY. Save and exit when finished.

Note:

Pure IP requires that you run NetWare 5 or higher.

Queue-based Printing Methods

The following overview explains the advantages and limitations of the two supported queue-based printing methods.

Print Server Mode

The Axis Network Print Server logs in to a file server(s) and repeatedly polls the print queues for print jobs. In this fashion, the Axis Network Print Server emulates a NetWare print server, which is a workstation running PSERVER. It provides high printing speed with low network load and is the recommended mode for medium to large sized networks. Each print server in PSERVER mode takes one NetWare user license.

Advantages • High performance: up to 1 Mbyte/s

Limitations • In bindery mode, this printing method requires a NetWare user licence for each Axis Network Print Server to file server link.


Remote Printer Mode The Axis Network Print Server acts as Remote Printer for PSERVER.NLM running on the NetWare file server, or to a dedicated workstation running PSERVER.EXE. In this fashion, the Axis Network Print Server emulates a workstation running the NetWare remote printer software RPRINTER, or NPRINTER. This mode is only recommended for small networks where the number of NetWare user licences is a major issue.

Advantages • NetWare user licences are not required.

Limitations • Lower performance, typically 20 - 70 kbytes/s for NLM and higher network load.

Using Novell Utilities After installing the Axis Network Print Server into the NetWare environment, you can manage your Axis Network Print Server, using either Novell's NetWare Administrator, or PCONSOLE.

NetWare Administration Some useful features provided by the NetWare Administrator are described in more detail below:
Printer Status: The Printer Status menu, detailed below, shows the status of an active print job serviced by an Axis Network Print Server. It displays detailed information concerning the active job including, Print Queue, print job description, size of print file, percentage of job completed, etc. You can also abort or pause the print job from this menu.

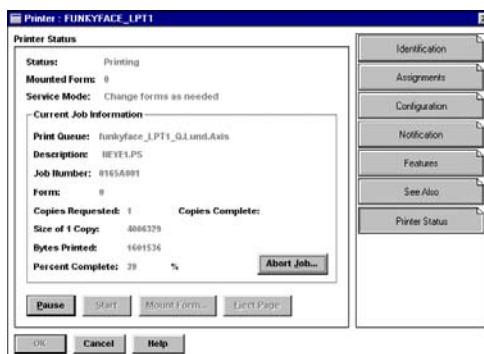

Notification: You can use the NetWare Administrator to enable or disable status notification messages for printers connected to the AXIS 540+/AXIS 560, e.g. Busy, Off-line, Out of paper, Paper jam, etc. You can also add or remove print job owners and administrators from the list of persons to be notified.

Print Layout: You can view installed AXIS 540+/AXIS 560 and their relative print queues for any NetWare Organizational Unit. You can also display summary information by right-clicking on the printer object you want to examine.

Section 7 Adding Printers in UNIX/Linux

Print Tools

For printer configuration, *printtool* and *printconf* are the most common. How they are invoked depends on which distribution and window manager you use.

AIX *SMIT* is the recommended printing tool. It contains an integrated printer driver list, but does not have printer detection functionality.

Instructions:

Type the command `smi` in a Terminal window, then click **Print Spooling**.

Debian *printtool* is the recommended printing tool. The program contains an integrated printer driver list, but does not have printer detection functionality.

Instructions:

Type the command `printtool` in a Terminal window to start the graphical version.

HP UX *Sam* is the recommended printing tool. It doesn't provide an integrated printer driver list, nor printer detection functionality.

Instructions:

Type the command `sam` in a Terminal window, click **Printers and Plotters** and then click **Actions** and **Add_Remote Printer/Plotter**.

Mandrake *printerdrake* is the recommended printing tool. It contains an integrated printer driver list, but does not have printer detection ability.

Red Hat *printconf* is the recommended printing tool. The program contains an integrated printer driver list, but does not have printer detection functionality.

Instructions:

Type the command `printconf-gui` in a Terminal window to start the graphical version.

You can also run `printconf` as a text-based application if you do not have the X Window System installed, or if you prefer the text-based interface. Log in as `root` (or use the command `su` to temporarily change to the root user), and type the command `/usr/sbin/printconf-tui` from a shell prompt.

Solaris 9 The printing tool is called *Printer Administrator*. This operating environment has an integrated printer driver list, but does not have printer detection functionality.

Instructions:

Type the command `/usr/sadm/admin/bin/printmgr` in a Terminal window.

SuSE *YaST2* is the recommended printing tool. It contains a printer driver list as well as printer detection capability.

Instructions:

To start the Printer Configuration tool, select this from the Desktop:

YaST2 menu button (on the panel) | In Yast Control Center | Hardware
| Edit Printers

Notes:

- A versatile IPP client for UNIX/Linux is CUPS. It can be downloaded from the Common Unix Printing System's Web site at www.cups.org
- If you don't find your specific printer in your distribution, have a look at <http://www.linuxprinting.org/database.html>

Typical Invocation via a Windows Manager

Using the Mandrake 8.2 distribution (with CUPS installed) and the KDE windows manger as an example, a typical set-up begins with starting Mandrake Control Center.

1. Click **Hardware | Printer** and the *Printerdrake* application will be invoked.
2. Click **Expert Mode** to be able to add a network printer.
3. Click the **Add a new printer** button.

Print Queues Five types of print queues can be configured in the Mandrake distribution:

- Local Printer
 - Printer on remote lpd server
 - Network printer (TCP/Socket)
 - Printer on SMB/Windows 95/98/NT server
 - A printer device URI
4. Select the **Network printer** radio button and click **Next**.
 5. Enter the IP address or host name of the print server as well as the port you want to use. Port numbers available for TCP/IP are:

Port number	LPT1	LPT2	COM1
AXIS 540+	9900		
AXIS 560	9900	9902	9901

6. Click **Next**.
7. Fill in data to help users identify the printer, i.e. name, description and location. Click **Next**.
8. Select printer model and click **Next**.
9. Configure the printer and click **Next**. The printer is set up. Click **Finish** and the printer is accessible.

Typical Invocation from a Terminal Window

Still using Mandrake as an example, open a Terminal Window and type the command `printtool`. If you are in a terminal window, the graphic version will start (as described above). If you do not have the X Window System installed, the command will start a text based version. The same information as was described above will be needed.

Note: In Mandrake, even if you type `printtool` at a shell prompt, `printerdrake` will automatically start.

Debian 3.0

Debian offers a choice between plain LPD, LPRng and CUPS. There are several printer configuration tools in this distribution, e.g. the *apsfilter* (version 5 or later), which adds support for LPRng and Ghostscript's uniprint driver scheme. Red Hat's *printtool* is also supported, for those who prefer GUI administration tools.

For LPRng, LPD and CUPS use the **Printtool**.

- | | |
|------------------------------|--|
| Invocation | <ol style="list-style-type: none">1. From the Gnome desktop, select Main Menu (on the panel) => Debian menus => Apps => System => Printtool.2. On the KDE desktop, select the Main Menu (on the Panel) => System => Debian => Printtool.3. Open a terminal window and type the command <code>printtool</code> (in XTERM or Gnome). |
| Print Queues | <p>Five types of print queues can be configured with <i>printconf</i> in the Debian distribution:</p> <ul style="list-style-type: none">• Local Printer• Unix Printer (lpd Spool)• Windows Printer (SMB)• Novell Printer (NCP Queue)• JetDirect Printer |
| Adding a Remote Unix Printer | <ol style="list-style-type: none">1. Start <i>printtool</i> and click Add.2. Select Remote Unix (lpd) Queue from the Printer Type menu, and click OK. Text fields for the following options appears:<ul style="list-style-type: none">• Printer name – Enter a unique name for the printer. (The name cannot contain spaces and must begin with a letter. Valid characters are a - z, A - Z, 0 - 9, -, and _.• Remote Host – The hostname or IP address of the remote machine to which the printer is attached.• Remote Queue and input filter – The remote printer queue and input filter.3. Click Next to continue. Click Select to choose a printer driver and to set it up.4. Click OK. Finally, click Test and print a test page. |

Red Hat 7.3

Printtool has been replaced by **Printconf**. The utility maintains the `/etc/printcap` configuration file, print spool directories, and print filters.

Note: If you type `printtool` at a shell prompt, `printconf` will automatically start.

- Invocation
1. On the Gnome desktop, select the Main Menu button (on the Panel) => Programs => System => Printer Configuration to start the graphical version.
 2. On the KDE desktop, select the Main Menu button (on the Panel) => Red Hat => System => Printer Configuration to start the graphical version.
 3. Type the command `printconf -gui` at a shell prompt (for example, in an XTerm or a Gnome terminal) to start the graphical version.
 4. You can also run `printconf` as a text based application if you do not have the X Window System installed, or you just prefer the text based interface. To run it, log in as root (or use the command `su` to temporarily change to the root user), and type the command `/usr/sbin/printconf -tui` from a shell prompt.

Print Queues Five types of print queues can be configured with `printconf` in the Red Hat distribution:

- Local Printer
- Unix Printer (lpd Spool)
- Windows Printer (SMB)
- Novell Printer (NCP Queue)
- JetDirect Printer

Important!

- Do not edit the `/etc/printcap` file. Each time the printer daemon (lpd) is started /restarted, a new `/etc/printcap` file is dynamically created.
- If you want to add a printer without using `printconf`, edit the `/etc/printcap.local` file. The entries in `/etc/printcap.local` are not displayed in `printconf` but are read by the printer daemon.
- If you upgrade your system from a previous version of Red Hat Linux, your existing configuration file is converted to the new format used by `printconf`. Each time a new configuration file is generated by `printconf`, the old file is saved as `/etc/printcap.old`.
- If you add a new print queue or modify an existing one, you need to restart the printer daemon (lpd) for the changes to take effect.
- Clicking the Apply button saves any changes that you have made and restarts the printer daemon. The changes are not written to the `/etc/printcap` configuration file until the printer daemon (lpd) is restarted. Alternatively, you can choose File => Save Changes and then choose File => Restart lpd to save your changes and then restart the printer daemon.
- If a printer appears in the main printer list with the Queue Type set to INVALID, the printer configuration is missing options that are required for the printer to function properly. To remove this printer from the list, select it from the list and click the Delete button.

Adding a Remote Unix Printer

1. To add a remote UNIX printer, such as one attached to a different UNIX/Linux system on the same network, click the **New** button in the main `printconf` window.
2. Select **Unix Printer** from the **Queue Type** menu, and click **Next**.
3. Enter a unique name for the printer in the **Queue Name** text field. The printer name cannot contain spaces and must begin with a letter a through z or A through Z. The valid characters are a through z, A through Z, 0 through 9, -, and _. Click **Next**.
Text fields for the following options appear:

 Server – The hostname or IP address of the remote machine to which the printer is attached.

 Queue – The remote printer queue. The default printer queue is usually `lp`.

 By default, the Strict RFC1179 Compliance option is not chosen. If you are having problems printing to a non-Linux `lpd` queue, choose this option to disable enhanced LPRng printing features.
4. Click **Next** to continue. The next step is to select the type of printer that is connected to the remote system.

Important!

The remote machine must be configured to allow the local machine to print on the desired queue. As root, create the file `/etc/hosts.lpd` on the remote machine to which the printer is attached. On separate lines in the file, add the IP address or hostname of each machine which should have printing privileges.

Selecting the Print Driver

If you are configuring a local printer, select the print driver from the list. The printers are divided by manufacturers. Click the arrow beside the manufacturer for your printer. Find your printer from the expanded list, and click the arrow beside the printer name. A list of drivers for your printer will appear. Select one. Then finish the Wizard in the usual manner.

SuSE 8.0

The printing system on SuSE Linux is based on an `apsfilter`, with some enhancements; SuSE's `apsfilter` will recognize all common file formats (including HTML, if `html2ps` is installed).

There are two ways to setup printers on SuSE systems:

- YaST2 will let you configure "PostScript", "DeskJet" and "Other printers", supported by Ghostscript drivers; it's also possible to setup HP's GDI printers (DeskJet 710/720, 820, 1000, via the "ppa" package). YaST2 will provide `/etc/printcap` entries for every printer ("raw", "ascii", "auto" and "color", if the printer to configure is a color printer). YaST2 will create spool directories and it will arrange `apsfilterrc` files, where you're able to fine tune some settings (Ghostscript preloads, paper size, paper orientation, resolution, printer escape sequences, etc.). With YaST2 it's also possible to setup network printers (TCP/IP, Samba, or Novell NetWare Printer).
- SuSE includes the regular `SETUP` program from the original `apsfilter` package (with some enhancements); run `lprsetup` to invoke this configuration script. Once you get accustomed to its GUI, you'll be able to configure local and network printers.

Invocation of YaST2 On the Gnome desktop select **YaST2 Menu Button (on the panel) => Yast Control Center => Hardware => Edit Printers** to start the Printer Configuration tool. On the KDE desktop select **YaST Menu Button (on the panel) => Yast2 modules => Hardware => Edit printers** to start the graphic version.

Print Queues SuSE and YaST2 differ between these printer connections:

- Local printers (Parallel, Serial and Disk File)
- LPD protocol network printing (Forward queue to a remote LPD and Prefiltered queue for an LPD forwarding queue)
- Other network printing (Samba/Windows, Novell)

The SuSE installation manual explains the setup procedures in detail.

AXIS axinstall Script

Having performed the basic TCP/IP setup procedures as defined earlier in this manual, you are now able to print in interactive mode using PROS, LPR, FTP or Reverse Telnet protocols. However, if you want to integrate the AXIS 540+/AXIS 560 with your host spooler, you can use the Axis automatic installation script *axinstall*. The *axinstall* script is available from ftp://ftp.axis.com/pub_soft/prt_srv/utility/axinstall/latest/

After executing this script, the printer connected to the print server will appear as though it is directly connected to the host printer spooler.

If you intend to use the print server in a multi-protocol environment, refer to the chapters pertaining to the respective operating systems in this manual.

When the *axinstall* script has been downloaded to your host, execute the script with this command:

```
sh axinstall or sh ./axinstall (depending on your system).
```

You will be guided through the installation by a step-by-step procedure. During the installation you will be asked to select a print method; we suggest you choose LPD or, for more functionality, use the PROS filter or named pipe methods. Please refer to the following pages if you need guidance on the choice of print methods.

Note: NLPReq is not supported by axinstall.

The *axinstall* script will suggest one of the systems listed below when started. If you do not find the suggestion appropriate, then manually select any of the systems listed.

```
1....SunOS 4 (SUN BSD, Solaris 1.x)
2....SunOS 5 (SUN SYS V, Solaris 2.x)
3....AIX (IBM RS/6000, BULL DPX 20)
4....HP-UX (HP 9000)
5....BOS (BULL DPX 2)
6....DEC OSF/1 (Digital Equipment, Alpha)
7....ULTRIX (Digital Equipment, DEC)
8....IRIX (Silicon Graphics, SGI)
9....SCO UNIX (Santa Cruz Operation)
10...SCO UnixWare 2.x
11...SCO UnixWare 7
12...SCO OpenServer
13...FreeBSD (Berkeley UNIX)
14...Linux

15...Generic BSD (Berkeley UNIX)
16...Generic SYS V R3 (UNIX System V Release 3)
17...Generic SYS V R4 (UNIX System V Release 4)
```

Systems supported by axinstall

Print Methods on TCP/IP Networks

The AXIS 540+/AXIS 560 supports several different print methods in the TCP/IP environment. *axinstall* will suggest a print method suitable for your particular UNIX/Linux system, but you might want to use another method depending on your printing requirements (banner pages, status logging, etc).

The diagram below shows the alternative data paths taken by some of the UNIX/Linux print methods. This illustrates some of the advantages and limitations of the different methods. Use the following information to determine which method to adopt.

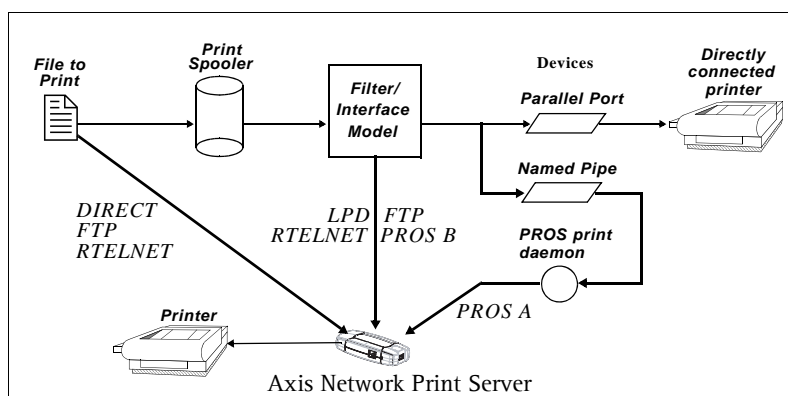


Illustration of different UNIX/Linux print methods

LPD The Line Printer Daemon is a protocol for transferring print jobs between hosts. This is the recommended method for UNIX/Linux systems, but some System V versions do not support LPD.

Advantages:

Easy to set up — install the AXIS 540+/AXIS 560 as a remote queue in System V, or add a remote printer to `/etc/printcap` using the `rm` and `rp` fields (BSD).

Limitations:

Spooler features, and `printcap` or `lpr` options (BSD) such as multiple copies, are not available.

FTP The File Transfer Protocol is used for transferring files between hosts.

Advantages:

Uses industry standard network software on the host.

Limitations:

No printer status logging. In the case of BSD it may conflict with other input or output filters and does not allow both input and output filters. In System V no filters or interface programs can be used.

PROS A protocol developed at Axis. Comes in two versions; *named pipe* (PROS A) and *filter* (PROS B).

PROS A Advantages The AXIS 540+/AXIS 560 appears as a device to the system. This makes all filter and model options available. It provides accounting and status logging. Supports bi-directional printing. The printer information read back can be viewed in a log file.

PROS A Limitations A 'C' compiler is required to build the PROS A drivers.

Note:

You can download a 'C' compiler from <http://www.gnu.org/>

PROS B Advantages It provides accounting and status logging. Supports bi-directional printing. The printer information read back can be viewed in a log file.

PROS B Limitations A 'C' compiler is required to build the PROS B drivers and in the case of BSD, it may conflict with other input or output filters. It does not allow both input and output filters. Interface programs can not be used in System V.

Reverse Telnet Often used for printing via a terminal server printer port. Only recommended if you already have a Reverse Telnet driver installed.

Advantages: Easy to set up with previously installed Reverse Telnet drivers.

Limitations: No status logging. Drivers are not supplied with the print server. Existing drivers may be slow.

Other UNIX/Linux Systems Most UNIX/Linux systems resemble either BSD or System V and so with some ingenuity, a solution can also be devised for other variants.

If the system has BSD socket type networking support, then `prosbbsd` (in the `bsd` directory of the AXIS 540+/AXIS 560) can be used as a starting point. It receives print data from `stdin`, and writes a log file to `stderr`. Nothing is written to `stdout`.

Alternatively, FTP may be used. It is a good idea to use `bsd/ftp_bsd` or `sysv/ftp_sysv` as a starting point.

IBM MVS Systems A sample JCL script, `jcllex`, is available in the `mvs` directory of the print server. It gives an example of how to print a file from an MVS mainframe to an AXIS 540+/AXIS 560 using FTP.

Section 8 Adding Printers in OS/2

This section describes how to set up your print server for printing in the OS/2 environment.

Continue with the instructions presented in the table below:

Protocol	See ...
TCP/IP	"TCP/IP Printing" on page 78
NetBIOS/NetBEUI	"NetBIOS/NetBEUI Printing in OS/2" on page 79

TCP/IP Printing

Having assigned an IP address to the print server, you are now ready to install it for TCP/IP printing in the OS/2 environment. The print server supports LPR Printing using the `lprportd` service method.

Installing the Axis Network Print Server

Follow the instructions below to install the print server using the `lprportd` service method:

1. Open the **OS/2 System** window, select **TCP/IP** and **TCP/IP Configuration**.
2. Select **Printing**, type a number, e.g. 1, in the **Maximum number of LPD ports** field. The Remote print server and Remote print server's printer fields should remain empty.
3. Select **Autostart**, select **lprportd**, click the **Autostart** check box and select **Detached**.
4. Exit and Save.
5. Restart your OS/2 client.

Creating a print queue

Continue with the instructions below to create a print queue:

1. Open the **Template** group. Create an new printer from Templates by dragging the **Printer** icon to the desktop with the right mouse button.
2. Select a printer driver and double-click a free **Output port**, for instance `\PIPE\LPD0`.
3. Enter the host name or the IP address of the print server in the **LPD server** field.
4. Enter one of the print server's logical printer names, for example `pr1`, in the **LPD printer** field.

NetBIOS/NetBEUI Printing in OS/2

AXIS Print Utility for OS/2 is the tool to use for NetBIOS/NetBEUI printing in OS/2 environments. This tool can be fetched from www.axis.com => **Software** => **Discontinued products**. Install it if you have not already done so.

If you want to change the default name or any of the print server's default parameters, you can do so using any standard Web browser or WinOS/2 window under OS/2.

Refer to *Section 10 Management and Configuration*, on page 84, for more information.

The AXIS Print Utility for OS/2 is not needed on the client platforms when using a client-server configuration.

About AXIS Print Utility for OS/2

AXIS Print Utility for OS/2 is an application for NetBIOS/NetBEUI printing in the OS/2 environment. It allows you to:

- Install and maintain the print server's printer port as an OS/2 printer port.
- Capture and monitor print jobs directed to the print server's ports.

Print jobs are directed through a spool directory located on your local hard disk (peer-to-peer mode), or on the file server (client-server mode). The printer port status of your print server can be monitored and pop-up notification messages can be generated, keeping you informed of completed print jobs or any problem condition.

Notes:

- The NetBEUI protocol must be active. If not, use MPTS/LAPS (LAN Server) or SETUP (LAN Manager) to activate it.
- If you are using OS/2 version 2.x and wish to print through TCP/IP, we recommend that you use the IBM TCP/IP for OS/2 product. It supports the LPD and interactive FTP print methods.

Installing the Axis Network Print Server

1. When AXIS Print Utility for OS/2 is running, click **Install** to install your Axis Network Print Server. The port appears in the list as <name>.LP1, where <name> is AX followed by the last six digits of your print server serial number. e.g. AX100086.LP1.
2. Select the LP1 port, then click **Install**.

Repeat this procedure for each server using the print server.

Note:

The AXIS Print Utility for OS/2 must be running in order to print through your Axis Network Print Server. It is strongly recommended that you modify the startup.cmd file, enabling AXIS Print Utility for OS/2 to automatically start when your client is re-booted. Instructions are available in the AXIS Print Utility for OS/2 Readme file.

**Creating
a Print Queue
(OS/2 version 2.x
and OS/2 Warp)**

1. Double-click the **Templates** folder, then drag the **Printer** icon out to the Workplace Shell (or into a folder) while holding the right mouse button down.
2. Type a name of your choice in the Name field.
3. Select **\PIPE\<name>.LPT1**, from the Port list, and select a printer driver suitable for your printer from the Standard Printer list.
4. Click **OK** to confirm the printer definition.

**Sharing the
Print Queue**

A print queue must be made a shared resource before it can be accessed from other clients or servers. The following three examples show how you can share your printer resources:

Open an OS/2 window and issue the following command:

```
NET SHARE <queue_name> /PRINT
```

Where <queue_name> is the name of the queue created on the previous side.

To share a printer resource when using OS/2 Warp with IBM Peer service, follow the steps below:

1. Click the right mouse button on the printer object.
2. Select **Share** and then **Start sharing**. In the dialog box, enter a Description.
3. Select the check-box **Start sharing at LAN workstation start-up**.
4. Click **OK**.

To share a printer resource when using LAN server 4.0, follow the steps below:

1. Open **LAN Server Administration**.
2. Open your domain and then **Resource Definition**.
3. Drag and drop a printer from the template.
4. Enter the Alias name, select a Server name and the previously created Spooler Queue Name.
5. Click **OK**.

The setup is completed and you can now print through your print server.

Section 9 Updating the Firmware

Upgrading the Firmware

You can upgrade the AXIS 540+/AXIS 560 firmware using one of the following methods:

- AXIS ThinWizard (TCP/IP)
- From the print server's internal Web pages (TCP/IP)
- FTP (TCP/IP)

Note:

Updating instructions are supplied with the firmware release notes.

Upgrading from the Print Server's Internal Web Pages

Follow these instructions to upgrade the firmware of your print server from its internal Web pages (flash loading over the Web):

1. Open your Web browser, enter the IP address of your print server and press **Enter**. (See *"Using a Web Browser for Print Server Management"* on page 84 for detailed instructions on accessing your Axis print server on the Web).
2. From the **Admin** mode, click the **Firmware Upgrade** button. From here you can upgrade your print server with the latest available firmware.


Upgrading using AXIS ThinWizard

AXIS ThinWizard 3.0 is a tool that enables batch upgrading of several print servers and can be used for upgrading the print server's firmware in TCP/IP networks.

Follow the instructions below to upgrade your print servers using AXIS ThinWizard:

1. Log in to AXIS Thin Wizard.
2. Open the Network Group that contains the print server to be upgraded.
3. Click the **Firmware** button. The Firmware Wizard starts.
4. Browse through the upgrading tips and click **Next >** when you are done. Select **Latest Available Version**. Click **Next >**.
5. Select the servers you want to upgrade, by checking the correct upgrade boxes. Click **Next >**.
6. Enter the default User ID and Password of the servers you selected in the previous step. Select whether you want AXIS ThinWizard to verify the password immediately or when the upgrading job has started, by checking the appropriate box. Click **Next >**.

7. If you do not have a default password, just click **Next >**. If some of your servers use a different User ID or Password than the default entries, they will be displayed in the **Remaining servers** list. Enter the User ID and Password for each individual server. Click **Next >**.
8. Name the upgrade job. This is optional, so you can leave the field blank if you want. Click the **Start** button to start the upgrading job.

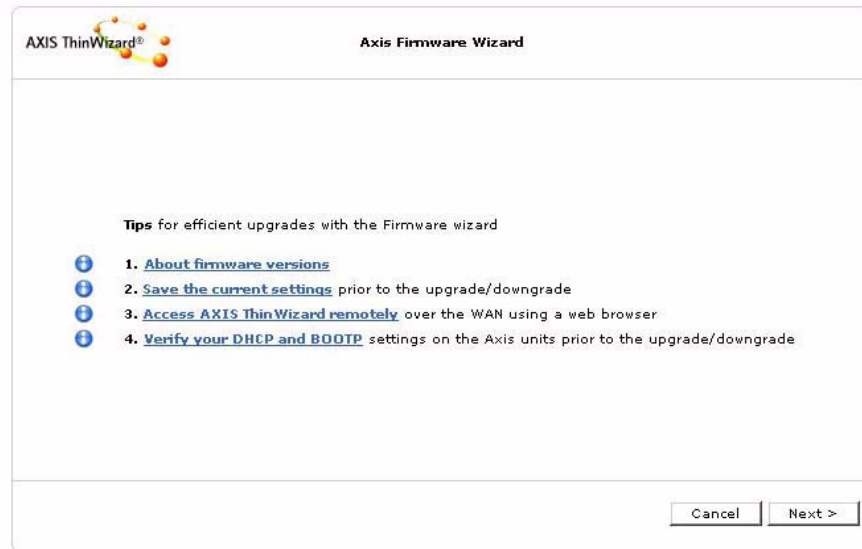

9. You can view the progress of the job in the Event Log.

Refer to “*Using AXIS ThinWizard for Print Server Management*” on page 88, for more information about AXIS ThinWizard.

Upgrading using FTP

To upgrade over the network using FTP you will need a file with the new print server firmware. The name of this file is in the form `product_version.bin`.

Be careful not to interrupt the file transfer. If the transfer is interrupted, the print server may have to be re-initialized by your dealer.

Ensure that **FTP Enabled** is set to yes. To check this parameter, browse to the print server and select **Admin | Network Settings | Detailed View | TCP/IP Network**.

The objective of this example is to upgrade a print server to firmware version 7.00.

The description below from a typical Windows session uses the following *examples*:

- Print server model: AXIS 540+
- IP address of print server: 10.13.4.105
- New firmware version name: 540p_v2_7_00.bin
- Location of firmware and upgrade procedure: c:\Axis

1. From www.axis.com, download the firmware and save it to a new directory on your computer, e.g. `c:\Axis` (if the directory does not exist, create it).
2. Open a command prompt from **Start => Run**. The Run window will appear. Type **cmd** and click **OK**. (Windows 98: Type **command** and click **OK**.) The DOS Command Prompt window will open.
3. Make sure you are working from the correct directory:
type **cd c:\Axis** and press **Enter**.
4. Connect to the print server using ftp:
type **ftp 10.13.4.105** followed by **Enter**.
(Example using print server IP address 10.13.4.105)
5. Enter the user name, the default user is *root*. Press **Enter**. If the default password has been changed then it must also be entered. When you enter the password, it will not be echoed to the screen, nor will the cursor move.
6. Change to binary mode transfer.
Type **bin hash** (or **binary hash**) and press **Enter**.
7. Use the **put** command to upload the upgrade file to the flash location:
(Example using firmware named *540p_v2_7_00.bin*):
Type **put 540p_v2_7_00.bin FLASH** followed by **Enter**. (Note that FLASH is written in capital letters!) A stream of hash (#) marks will appear.

Wait 30 seconds... You will receive a message stating *Transfer complete. Flash programming finished OK*. The print server will restart in five seconds running the new software.

When you see a new **ftp prompt** the procedure has been completed successfully.

8. Type **bye** followed by **Enter** to end the ftp session.

Obtaining the Software

You can obtain all the print server firmware as well as the latest utility software from the following locations:

- <http://www.axis.com>
- your local dealer

Section 10 Management and Configuration

The management and configuration tools that are supported by the Axis Network Print Server allow you to:

- Change the print server parameters, i.e. editing the *config* file
- Receive extended information about the print jobs
- Receive printer port status
- Monitor your printers
- Reset the Axis Network Print Server

Configuration Overview

The method you should use to manage and configure your Axis Network Print Server depends on the operating system protocols of your network. The table below displays which method to use for each supported environment.

Environments	Configuration/Management methods
TCP/IP (UNIX/Linux, Windows, Mac OS)	Web Browser – See page 84 AXIS ThinWizard – See page 88 FTP – See page 90 Telnet – See page 92 SNMP – See page 94
IPX/SPX (NetWare)	Novell Utilities – See page 95
Windows	Web Browser – See page 84
AppleTalk	Web Browser – See page 84 AppleTalk_cfg method – See page 38 Mac-FTP – See page 90

Using a Web Browser for Print Server Management

Once you have established the Axis Network Print Server in the TCP/IP environment, as described in “*Assign an IP Address to the Print Server*” on page 14, you are free to access the Axis Network Print Server Web pages from any standard Web browser.

The Web interface of the Axis Network Print Server is divided into two modes of operation, User mode and Admin mode:

User In User mode you can change language, but you have no rights to change any other parameters. However, if you have access rights to the Admin mode, you can change some of the basic parameters from User mode via the Configuration Wizard. This mode is intended for regular users who are only interested in using the print server’s interface for checking print jobs or viewing printer properties. If you want to change any other of the print server’s settings, you must enter the Admin mode.

Admin When in Admin mode, you have access to all the print server's parameters and you can change them to your liking. This mode is intended for network administrators and can be password protected to prevent unauthorized changing of the print server parameters.


Note:

To protect the Admin pages from unauthorized use, it is highly recommended that you change the default password.

This is done from the **Admin | General Settings | General** tab. Enter the password in the **Root Password** field.

Accessing the Web Pages Follow the steps below to access the internal Web pages of the Axis Network Print Server:

1. Enter the print server's IP address (or host name) in the **Location/Address** field of your Web browser. Press **Enter**
2. The **Printer Overview** page will appear. Click **Admin** to access the Administration Web pages.
3. If you have not changed the default password you will be prompted for a password. Enter user name and password. Click **OK**.

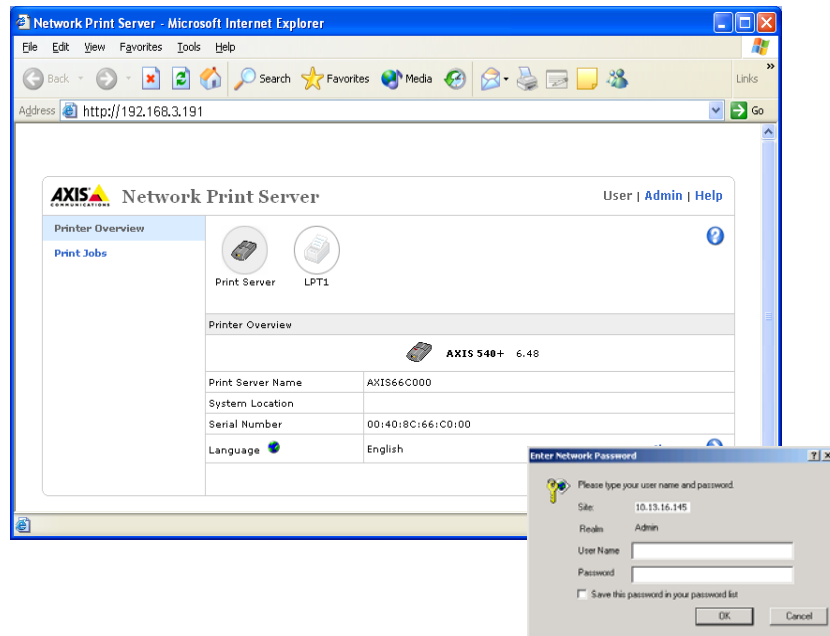

Services Available from the User Mode The following services are available from the User mode. A link to the Axis home page is available from this mode.

Printer Overview The Printer Overview page contains a section that allows you to view the general parameter setting of the Axis Network Print Server, including the print server name and the location of the print server in your organization, if defined.

By clicking the printer icon a printer page opens, allowing you to view the status and the supported capabilities of the connected printer. The extent of this information depends on the printer model. From the printer page, you can also print a test page to the printer.

Print Jobs From the Print Jobs page you can view the status of the current print jobs, including the number of printed bytes and the origin of the print job. You can also view a log of the 20 latest print jobs that includes the user, the printing protocol and the file size. A log that displays the accumulated usage of the connected printers allows you to control the usage of the connected printers.

Help The Help page presents you with basic information about the Axis Network Print Server and the Web user interface. A short description of the Axis installation tools you should use when installing a printer on your PC is also included.

Available Services from the Admin Mode The following services are available from the Admin mode. An additional link to www.axis.com is available from this mode.

This Print Server The This Print Server page contains a section that allows you to view and modify the general parameter setting of the Axis Network Print Server, including the print server name, the node address, the password and the base URL. You can also configure any of the eight logical printers of the Axis Network Print Server. Management operations, like restarting the print server and resetting its parameters to the factory default settings, are also available.

Caution!

Any network configuration should involve the Network Administrator.

By clicking on the printer icon, a printer page opens, allowing you to view the status and the supported capabilities of connected printer. The extent of this information is depending on the printer model. From the printer page, you can also print a test page to the printer.

Print Jobs From the Print Jobs page you can view the status of the current print jobs, including the number of printed bytes and the origin of the print job. You can also view a log of the 20 latest print jobs that includes the user, the printing protocol and the file size. A log that displays the accumulated usage of the connected printers allows you to control the usage of the connected printers. To delete an ongoing print job, use the delete button next to the job.

Network Settings	From the Network Settings page you can set all parameters that control the network traffic to and from the Axis Network Print Server. You can enable or disable any of the supported network protocols and fine-tune the parameter settings. For additional information, see the Online Help pages.
Support	From the Support page you can receive help to resolve any installation or print problems that might occur. If your problems persist, the Support page allows you to produce a Server Report. The Server Report includes the settings of the Axis Network Print Server, information about your connected printers as well as the current network settings. The Server Report is of great value for support assistance, so please mail, email or fax it to your support channel together with a detailed problem description.
Statistics	The Statistics page displays information about the network traffic to and from the Axis Network Print Server as well as information about servers and services that are connected or associated with the Axis Network Print Server.
Help	The Help page displays a comprehensive description of the configuration and management activities that can be performed from the internal Web pages of the Axis Network Print Server. These activities include instructions on how to install the Axis Network Print Server in various environments and how to upgrade it with new firmware. A detailed index is also available.
Parameter List	Shows all print server parameters and their current settings.
Restart	Restarts the print server.
Software Default	<p>A Software Default will reset all print server parameters and settings to their default values except:</p> <ul style="list-style-type: none">• Node address (NODE_ADDR.)• IP Address (INT_ADDR.)• DHCP enabled (DHCP_ENB) <p>Also see <i>The Test Button</i>, on page 119 for instructions on performing a Factory Default.</p>
Firmware Upgrade	Upgrades the print server's internal software.

Using AXIS ThinWizard for Print Server Management

AXIS ThinWizard software allows you to manage and upgrade **multiple** Axis products. Using a standard Web browser, you can find, install, monitor, configure and upgrade your Axis print servers remotely in any TCP/IP network. AXIS Thin Wizard 3.0 is Windows 2000 and Windows XP compatible.

Installing AXIS ThinWizard


AXIS ThinWizard software is available on www.axis.com. You should only install AXIS ThinWizard on a designated computer on your network.

To install, follow the instructions given by the Installation Wizard. During the installation, you will be asked to enter a user id and a password – these will be used when logging in to AXIS ThinWizard, so please take a note of them.

Starting AXIS ThinWizard

If AXIS ThinWizard is installed on the workstation you can access its Web interface via **Start | All Programs** (using Windows XP; on Windows 2000: **Start | Programs**). If it is installed on another computer, follow the instructions below:

1. Make sure that the computer where you installed the AXIS ThinWizard is up and running on your network.
2. Start a Web browser on a client in your network.
3. Enter the IP address or the host name of the computer where you installed AXIS ThinWizard. (If the server is installed on another port than 80, you must enter the port name after the host name or the IP address).
4. The AXIS ThinWizard start page now appears in the Web browser. Enter the user id and password you specified during installation and click **Log in**.
5. The AXIS ThinWizard interface appears:

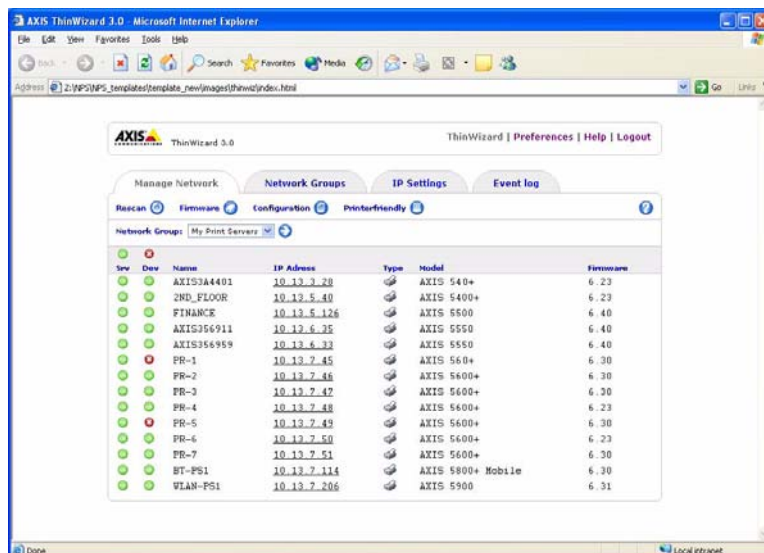

Important!

These parameters must be enabled in the print server's Web interface for AXIS ThinWizard to function properly:

- FTP_ENB (FTP enabled): click **Admin** | **Network Settings** | **Detailed View** | **TCP/IP Network** | **FTP Enabled** => **Yes**.
- SNMP_ENB (SNMP Enabled): click **Admin** | **Network Settings** | **Detailed View** | **SNMP** | **SNMPv1 Enabled** => **Yes**

These parameters are enabled by default in the print server.

The first time you use AXIS ThinWizard, set the **Preferences** to reflect your network environment:

Select a network group from the list on the **Manage Network** page. If the list is empty, you must first create a group. Click the **Network Groups** tab and follow the instructions.

Creating a Network Group in AXIS ThinWizard

The network group concept is the corner stone of AXIS ThinWizard. By dividing your network into network groups, you can monitor your print servers more efficiently. The scope of each network group is determined by the Axis server types and IP address ranges that are included. You can create as many network groups as you want.

Follow the instructions below to create a network group:

1. Click **Network Groups** in the AXIS ThinWizard main menu.
2. Click **Create**.
3. The Create Network Group page opens. Type the name of the network group, enter the IP address ranges and Axis server types that should be included. If you are only interested in managing print servers, deselect all options but the **print server** option.
4. Click **OK** to create the network group.

You can edit the properties of each network group from the Network Groups page. Simply select the network group from the list and use one of the **Edit**, **Copy** or **Remove** commands.

Managing Print Servers

Follow the instructions below to access the AXIS 540+/AXIS 560 using AXIS ThinWizard:

1. Click **Manage Network** in the main menu.
2. Select the network group, including the, from the drop-down list. All AXIS servers included in the network group appear in the window.
3. Click the link of the AXIS 540+/AXIS 560 to access its internal Web page.
4. The 'Srv' and 'Dev' columns show the status of your print servers and printers.

Changing the IP Settings Using AXIS ThinWizard you can also set or change each print server's IP parameters.

1. Click **IP Settings** in the main menu.
2. Select print server in the list.
3. Enter your data: IP address, Subnet mask, Default gateway and the print server's password (default password is **pass**).
4. Click **Set** to save your settings.
5. Click **Rescan** to update AXIS ThinWizard and see the changes.

If Your Print Server is not Shown in the List If your print server is not shown in the list, click "**Click here...**". By entering the serial number of the print server (found on the underside label) you will be able to set the print server's IP parameters.
Example: *00408c181cf0*

Upgrading Axis Servers Refer to "*Upgrading using AXIS ThinWizard*" on page 81 for more information about upgrading Axis servers using AXIS ThinWizard.

Multiple Configuration and Installation Using AXIS ThinWizard it possible to change the settings of several Axis servers simultaneously. It is also possible to copy the configuration from one server to another. This is a convenient way to install a new server, based on the settings of an already existing server.

For additional information, please refer to the AXIS ThinWizard online help.

Using FTP for Print Server Management

Having assigned an IP address to your Axis Network Print Server, as described in "*Assign an IP Address to the Print Server*" on page 14, you can change the print server parameter settings using the File Transport Protocol (FTP).

Ensure that **FTP Enabled** is set to *yes*. To check this parameter, browse to the print server and select **Admin | Network Settings | Detailed View | TCP/IP Network**.

Editing the *config* file Follow the instructions below to edit the *config* file using FTP:

1. Log in to the Axis Network Print Server by typing:
`ftp <host name> or ftp <IP address>` in a DOS window (Windows and OS/2) or in a UNIX shell.
2. Enter the user id and the password. (The default entries are `root` and `pass`.)
3. Download the *config* file to your host by typing:
`get config`
4. Edit the file using your preferred text editor.

5. Save the *config* file to the Axis Network Print Server by typing:

```
put config CONFIG
```

Notes:

- It is important that the destination file is specified in capital letters. Otherwise the edits are temporary and will be lost once the Axis Network Print Server has been powered off.
- To edit the *config* file from a Macintosh you will need FTP support such as MacTCP, Fetch or Anarchie. The procedure for editing the file is the same as described above.

The example below describes how to upload and download the *config* file using FTP from a DOS window.

Example:

```
> ftp npserver
connected to npserver.
220 AXIS 560 (rev 3) FTP Network Print Server V7.00
Sep 06 2004 ready.
Name (npserver: (none)): root
331 User name ok, need password
Password: pass          (not visible)
230 User logged in
ftp> get config
200 PORT command successful.
150 Opening data connection for config
(192,168,0,10,4,64), (mode ascii).
226 Transfer complete.
ftp: 10527 bytes received in 0.22Seconds 47.85
Kbytes/sec
ftp> put config CONFIG
200 PORT command successful.
150 Opening data connection for CONFIG
(192,168,0,10,4,65), (mode ascii).
226 Transfer complete.
10527 bytes received in 0.22Seconds 47.85 Kbytes/sec
ftp> bye
221 Goodbye.
>
```

Viewing the Account File

The *account* file contains data concerning the ten last print jobs. It specifies an internal job number, the user that initiated the job, the protocol and logical printer that was used, current status (Completed, Off-line, or Printing), number of bytes printed, elapsed time and off-line time.

Follow the instructions below to view the *account* file using FTP:

1. Log in to the Axis Network Print Server by typing:
ftp <host name> or ftp <IP address> in a DOS windows (Windows and OS/2) or in a UNIX shell.
2. Enter the user id and the password. (The default entries are *root* and *pass*.)

3. Download the *account* file to your host by typing:
`get account`
4. View the *account* file using your preferred text editor.

**Viewing
the *Status* File**

The status command shows which printer port the logical printers are assigned to, and their current status.

Follow the instructions below to view the *status* file using FTP:

1. Log in to the Axis Network Print Server by typing:
`ftp <host name>` or `ftp <IP address>` in a DOS windows (Windows and OS/2) or in a UNIX shell.
2. Enter the user id and the password. (The default entries are `root` and `pass`.)
3. Download the *status* file to your host by typing:
`get status`
4. View the status file using your preferred text editor.

FTP Help

By typing `help` in step 3 in the FTP instruction sets above, a list of all available files and commands will be displayed.

Using Telnet

Having assigned an IP address to your Axis Network Print Server, as described in “Assign an IP Address to the Print Server” on page 14, you can manage your Axis Network Print Server using the Telnet protocol.

**Viewing
the *Account* File**

The *account* file contains data concerning the last ten print jobs. It specifies an internal job number, the user that initiated the job, the protocol and logical printer that was used, current status (Completed, Off-line, or Printing), number of bytes printed, elapsed time and off-line time.

Follow the instructions below to view the *account* file using telnet:

1. Log in to the Axis Network Print Server by typing:
`telnet <host name>` or `telnet <IP address>` in a DOS window (Windows and OS/2) or in a UNIX shell.
2. Enter the user id and the password. (The default entries are `root` and `pass`.)
3. View the *account* file by typing:
`account`

The example below shows how to view the *account* file using Telnet from a UNIX shell.

Example:

```

> telnet npserver
Trying 192.36.253.96...
Connected to npserver.
Escape character is '^]'.

AXIS 560 TELNET Network Print Server V7.00 Sep 06 2004

Axis Network Print Server network login: root
Password: pass          (not visible)

Axis Network Print Server TELNET Print Server v6.30 Dec 16 2000

Root> account
Current account file:

```

JOB	USER	PROT	LPR S BYTES	ETIME	OTIME
1	Thomas	FTP	pr2 C 1885	2	0
2	Joe	LPT	pr1 C 23074	4	0
3	RICHARD	PSERVER	pr2 C 43044	5	0
4	MacUser	APPLE	pr1 C 6717	2	0
5	LSLM_user	NetBIOS	pr2 C 36995	3	0
6	patrick	PROS	pr5 P 83208	9	0

```

Root>

```

Typical Telnet session to view the *Account* File

**Viewing
the *Status* file**

The status command shows which printer port the logical printers are assigned to, and their current status.

Follow the instructions below to view the *status* file using telnet:

1. Log in to the Axis Network Print Server by typing:
telnet <host name> OR telnet <IP address> in a DOS window (Windows and OS/2) or in a UNIX shell.
2. Enter the user id and the password. (The default entries are `root` and `pass`.)
3. View the *status* file by typing:
status

Performing Resets

Three types of reset commands allow you to perform soft resets, to perform hard resets, and to reset the print server's parameters to its default settings.

Follow the instructions below to perform a soft reset using telnet:

1. Log in to the Axis Network Print Server by typing:
telnet <host name> OR telnet <IP address> in a DOS window (Windows and OS/2) or in a UNIX shell.
2. Enter the user id and the password. (The default entries are `root` and `pass`.)

3. Restart the print server's protocols by typing:

```
softreset
```

Replace the command in step 3 above with `hardreset` or `default` to perform the other two reset operations.

Using SNMP

You can use SNMP (Simple Network Management Protocol) for remotely monitoring and configuring of the Axis Network Print Server. All major functions for print servers are supported.

General Information SNMP refers to a set of standards for network management, including a protocol, a database structure specification, and a set of data objects. The Axis Network Print Server SNMP implementation runs in the TCP/IP environment.

The management is handled by NMS (Network Management System) software running on a host on your network. The NMS software communicates with network devices by the means of messages, which are references to one or more objects.

A message can be a question or an instruction to a device, or an alarm triggered by a specific event in a device. Objects are contained in data bases called MIBs (Management Information Base), where MIB-II is a standard database.

The Axis Network Print Server supports all relevant parts of MIB-II and also includes a private enterprise MIB. Refer to *The AXIS MIB*, on page 95.

System Requirements for SNMP The following requirements must be fulfilled in order to make full use of the Axis Network Print Server SNMP support:

- NMS software that allows you to install private enterprise MIBs
- A host, supporting FTP, on which to run the NMS software

Follow these steps to add the AXIS MIB to your NMS software:

1. Log in to the Axis Network Print Server using FTP.
2. Download the MIB file `/snmp/axis.mib` to the NMS host.
3. Install the AXIS MIB according to instructions in your NMS software documentation.

- The AXIS MIB** The AXIS MIB contains a large number of objects which may be categorized as follows:
- Menu objects - used for viewing and changing the Axis Network Print Server configuration from the NMS program. Refer to *The Parameter List*, on page 126.
 - Printer status and unit administration objects - used for monitoring Axis Network Print Server print jobs and storing parameter changes permanently.
 - Trap objects - used for alarms at various error conditions.
- For technical details, you can view the MIB file (*axis.mib*) with any text editor.


SNMP Device Index When using the TCP/IP protocol (and if the printer driver permits), the print server can use **SNMP Status** to find out if the printer is ready to accept a new job. See “*SNMP Device Index*” on page 144.

Using Novell Utilities

After installing the Axis Network Print Server into the NetWare environment, you can manage your Axis Network Print Server, using either PCONSOLE, Novell’s NetWare Administrator or iPrint.


NetWare Administration Some useful features provided by the NetWare Administrator are described in more detail below:

Printer Status The Printer Status menu, detailed below, shows the status of an active print job serviced by an Axis Network Print Server network print server. It displays detailed information concerning the active job including, Print Queue, print job description, size of print file, percentage of job completed, etc. You can also abort or pause the print job from this menu.

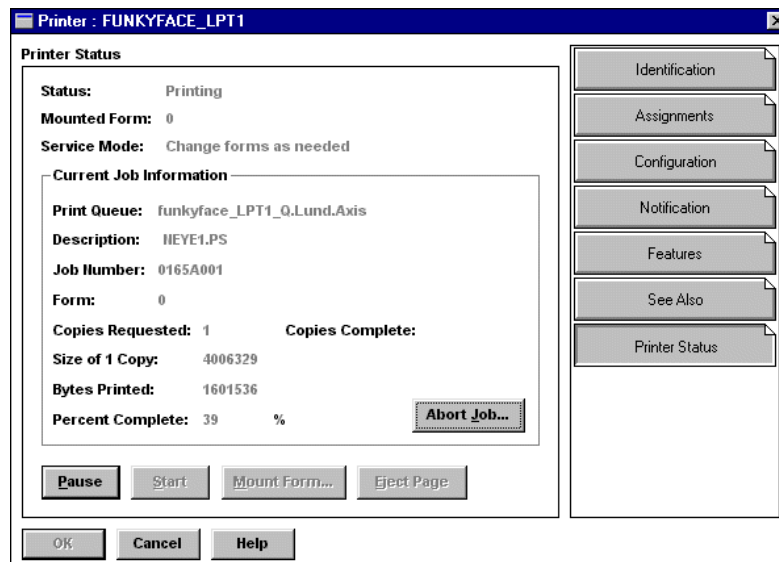

NetWare Administrator Printer Status Menu

- Notification** You can use the NetWare Administrator to enable or disable status notification messages for printers connected to the Axis Network Print Server, e.g. Busy, Off-line, Out of paper, Paper jam, etc. You can also add or remove print job owners and administrators from the list of persons to be notified.
- Print Layout** You can view installed Axis Network Print Server Network Print Servers and their relative print queues for any NetWare Organizational Unit. You can also display summary information by right-clicking on the printer object you want to examine.

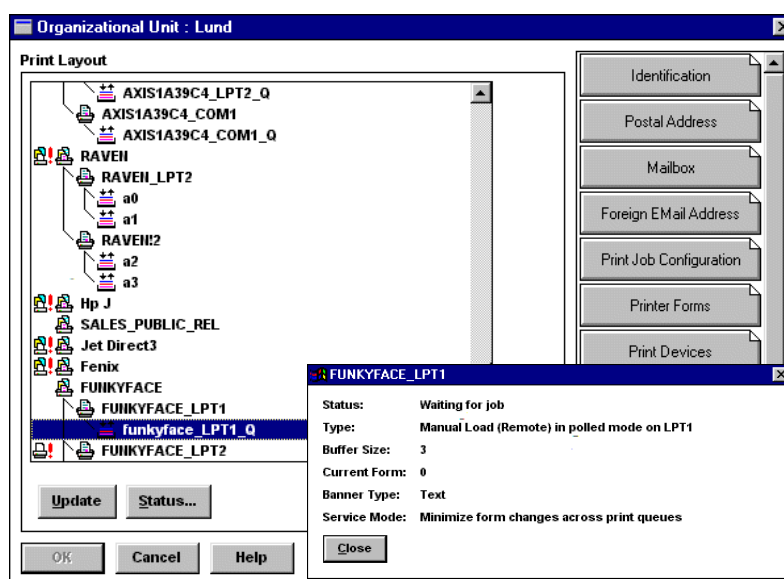

NetWare Print Layout with corresponding information summary

Section 11 Configuration Possibilities

This section describes some configuration possibilities offered by the Axis Network Print Server:

Autodetect Printer Type, on page 97

Changing Language in the Print Server's Web Interface, on page 107

E-mail Notification, on page 98

IPP (Internet Printing Protocol), on page 98

Autodetect Printer Type

The print server can automatically detect the type of printer you are using if you enable **Autodetect Printer Type**. The print server can then recognize Epson and Hewlett Packard InkJet printers. Most Epson and Hewlett Packard InkJet printers that have Mac OS printer drivers for network printing are supported. If Autodetect Printer Type is disabled, the AppleTalk printer type has to be specified manually in the print server. For Epson InkJets it would be "EPSONLQ2" and for HP InkJets it would be "DeskWriter". If the print server does not recognize the connected printer the default setting, "LaserWriter" will be used as printer type. "LaserWriter" is the recommended setting to be used with all PostScript printers.

To enable Autodetect Printer Type, log in to your print server's Web interface and select **Admin | Network Settings | Detailed View | Macintosh | Auto Detect Printer Type | Yes**.

See the **Help** pages in the print server's Web interface for details.

E-mail Notification

Whenever an event that needs human intervention occurs in a network printer, the concerned person can be notified by e-mail. This 'trouble-report' contains a short and concise description of the event. Five events are covered: **Paper Jam, Out of Paper, Toner Low, No Toner, Printer Off-line.**

In order to determine who the e-mail recipients will be of these different trouble-reports, follow these instructions:

1. From your print server's internal Web page, go to: **Admin | Network Settings | Detailed View | e-mail Notification**. The following options will appear:

Options	E-mail recipient
Administrator e-mail Address	This address will be used as "Reply to"-address in the e-mails
PAPER JAM	The person responsible for handling paper jams in the printer
OUT OF PAPER	The person responsible for filling the printer with paper
TONER LOW	The person responsible for filling up the toner in the printer
NO TONER	The person responsible for changing the toner in the printer
PRINTER OFFLINE	The person responsible for the overall maintenance of printer

2. Enter the respective e-mail address of the trouble-report recipients in the blank fields as follows: **name@company.com**
3. Click **OK** and exit when done.

Important:

Check that the **SMTP Server** and **Domain Name** parameters in the print server's internal Web pages are correct. This is done in **Admin | Network Settings | Detailed View | TCP/IP Network**.

IPP (Internet Printing Protocol)

The Axis Network Print Server enables printing over the Internet with IPP (Internet Printing Protocol), an industry standard that allows users to print to remote printers across the Internet.

With IPP, a user with an Internet connection can send a document to any printer which is connected to the Internet. IPP is platform independent and can be used to print over any LAN or WAN that supports TCP/IP.

In practical terms, this means that you can send documents to a remote printer as an addition to or replacement of fax and e-mail, with the same quality and color options of traditional network printing.

IPP Clients	<p>In order to print to a remote printer using IPP, you need an IPP client installed on your computer together with appropriate printer drivers. The IPP client is a tool that adds destination printers to your printer list. A list of available IPP clients can be viewed below.</p> <p>The Axis Network Print Server with integrated IPP is compatible with any 1.0 and 1.1 compliant IPP client.</p> <p>The Axis Network Print Server presents IPP printer objects to the client, one for each printer port. Some of the most common IPP client printing methods are described below. Please refer to your IPP client documentation for more specific information.</p>
Currently Available IPP Clients on the Market	<ul style="list-style-type: none"> • For Windows 2000/XP/2003: the Microsoft IPP Client (automatically installed with the Operating System). • For Windows 98, NT: IPP clients can be downloaded from the Microsoft Web site. • For UNIX/Linux: CUPS (can be downloaded from the Common Unix Printing System Web site at www.cups.org). • If you wish to print using iPrint over IPP, use AXIS IPP Gateway Configuration Snap-in for iPrint in NetWare 5.x. It is available on www.axis.com (Support Select Software). See its read-me file for installation instructions. • For Windows NT/2000: the Internet Printer Connection software from Hewlett Packard (can be downloaded from the Hewlett Packard Web site).
IPP Printing Requirements	<p>Before you print to an IPP printer you need to know:</p> <ul style="list-style-type: none"> • the address of the print server. • the brand and model of the printer in order to install the appropriate printer driver.
Address Schemes for IPP Printers	<p>When using IPP printing, you need to know the IP address or host name of your Axis print server. IPP is a client/server type protocol which comprises two industry standards:</p> <ul style="list-style-type: none"> • the 1.0 standard, which uses an <code>http://</code> address scheme • the 1.1 standard, which uses an <code>ipp://</code> address scheme
Example using a Host Name in the 1.0 Standard:	<p>If "axisps" is the host name of the print server, "631" is the port number and "LPT1" is the local printer port name, then the syntax of the address scheme will be <code>http://axisps:631/LPT1</code> in the 1.0 standard.</p>
Example using an IP Address in the 1.1 Standard:	<p>If "171.16.5.218" is the IP address of the print server and "LPT1" is the local printer port name, then the syntax of the address scheme will be <code>ipp://171.16.5.218/LPT1</code> in the 1.1 standard.</p>

IPP User Requirements	<p>The IPP protocol does not require any special configuration of the Axis Network Print Server, the IPP function is automatically activated when you install your print server.</p> <p>IPP is platform independent and functional in Windows (NT, 98, Me and 2000/XP/2003), Macintosh, NetWare and UNIX/Linux.</p>
<p>Firewall Considerations with IPP</p>	<p>If there are one or more firewalls between the IPP client and the server, you may have to make some changes to the firewall configuration. IPP uses TCP Port 631 for printing, so any firewalls between client and server must be configured to allow bi-directional traffic on that port. Please consult your network administrator if you think any configuration changes are necessary.</p>
<p>How to Print from Windows 98:</p>	<p>Before you print to an IPP printer you will need to know:</p> <ul style="list-style-type: none"> • the address of the print server. The address contains the IP address or host name of the print server and the printer port name. • the brand and type of the printer in order to install the appropriate printer driver. <p>If your destination printer does not exist in your Printer name list, you need to add it. Adding an IPP printer to your printer list is described below.</p> <ol style="list-style-type: none"> 1. Select the IPP printer to which you want to send your document. Choose the destination printer from the Printer name field (in File Print). 2. When you press Print, the print job is sent over the Internet to the Axis Network Print Server, which then forwards the print job to the destination printer. 3. The recipient of the print job can collect the print job at the destination printer.
<p>Adding an IPP Printer to your Printer List in Windows 98</p>	<ol style="list-style-type: none"> 1. Install the IPP client for Windows 98 on your computer. This IPP client can be downloaded from the Microsoft Web site. 2. Open Start Settings Printers. 3. Choose Add Printer, then Network Printer. 4. In the Printer field in the Connect to Printers window, write the address of the destination printer. (Example: <i>http://171.16.5.218:631/LPT1</i>) 5. Select the appropriate printer driver corresponding to the destination printer. 6. Specify a name for the printer you wish to add to your printer list. Click Finish. The destination printer will be added to your printer list and you are ready to print using IPP.

How to Print from Windows NT:

Before you print to an IPP printer you will need to know:

- the address of the print server. The address contains the IP address or host name of the print server and the **printer port name**.
- the brand and type of the printer in order to install the appropriate printer driver.

1. Select the IPP printer to which you want to send your document. Select the destination printer from your **Printer Name** list (in **File | Print | Printer Setup**).

The printer name will begin with a URL: **http://...**

If your destination printer does not exist in your **Printer Name** list, you need to add it. Adding an IPP printer to your printer list is described below.


2. Press **Print**. The print job is sent over the Internet/WAN to the Axis Network Print Server, which then forwards the print job to the destination printer.
3. The recipient of the print job can collect the print job at the destination printer.

Adding an IPP Printer to your Printer List in Windows NT


1. Install the **Internet Printer Connection** software from HP (can be downloaded from www.hp.com) on your computer.
2. Open **Start | Settings | Printers**.
3. Choose **Add Printer**. The Add Printer Wizard will start.
4. Next, the Wizard will ask you if you want to install on **My Computer** or on a **Network print server**. Choose **My Computer** and click **Next**.



5. In the Available Ports window, click **Add Port**:

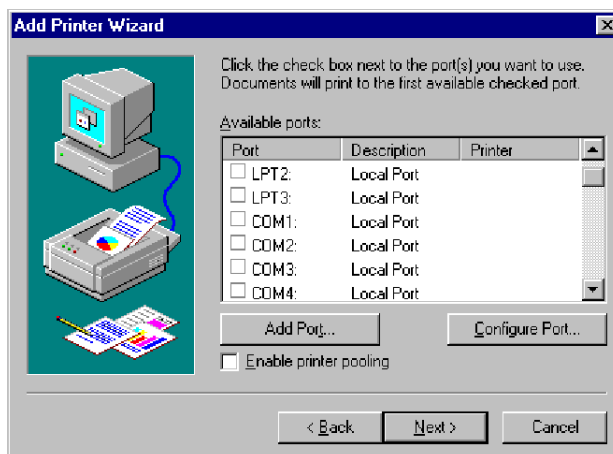


6. The **Printer Ports** dialog will appear, showing a list of **Available Printer Ports**.

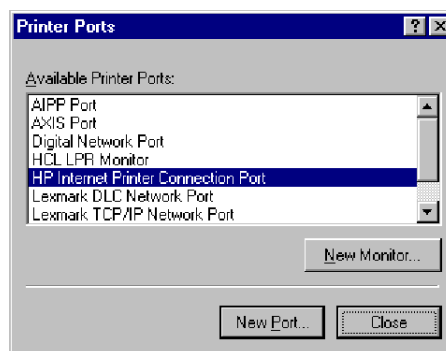


7. Choose **The HP Internet Printer Connection Port** and click **New Port**.
8. The HP Internet Printer Connection will start. Click **Next**.

9. In the **IP Address, Host Name or URL** field, type the address of the Axis Network Print Server to which the destination printer is connected. The URL will automatically appear in the **Port Name** field as well:

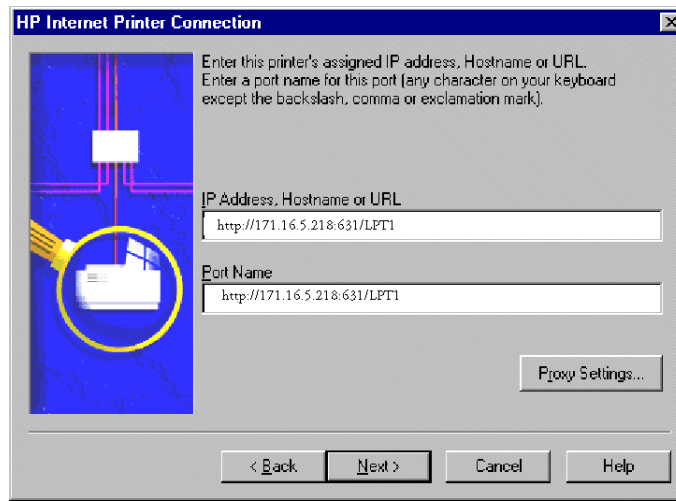


(Example: `http://171.16.5.218:631/LPT1` if you want to address the parallel port). Click **Next**.

10. The Wizard will confirm the information you have entered. Click **Finish** to complete the installation and go back to the **Available Ports** list.
11. The IPP printer port list is now available in the **Available Ports** list. Click **Next**.
12. Next, choose a suitable driver for the destination printer and install it. Click **Next**.

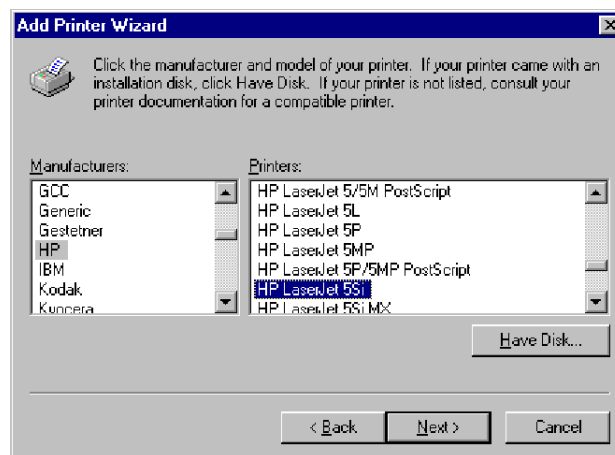

13. You will be asked if you want the newly added printer to be your default printer and if you want to share the printer on your network with other users. Choose the alternatives that suit your printing needs and click **Finish** to complete the installation.

14. The new printer will appear in your **Printer** window. You are now ready to start printing using IPP.

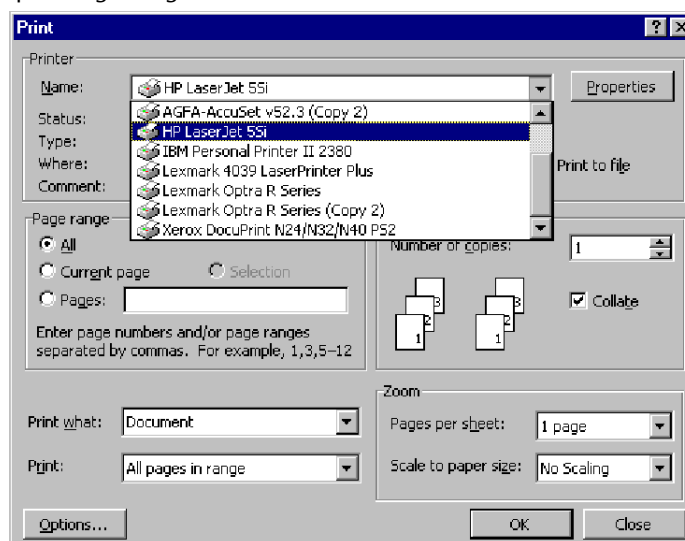


How to Print from Windows 2000/XP/2003

Before you print to an IPP printer you will need to know:

- the address of the print server. The address contains the IP address or host name of the print server and the printer port name.
 - the brand and type of the printer in order to install the appropriate printer driver.
1. Select the IPP printer to which you want to send your document. Choose the destination printer from the **Select Printer** field (in **File | Print**).
- If your destination printer does not exist in your **Select Printer** list, you need to add it. Adding an IPP printer to your printer list is described below.
2. When you press **Print**, the print job is sent over the Internet to the Axis Network Print Server, which then forwards the print job to the destination printer.
 3. The recipient of the print job can collect the print job at the destination printer.


Adding an IPP Printer to your Printer List in Windows 2000/XP/2003

1. Choose **File | Print** from the document you wish to print.
2. In the **Select Printer** field, click the **Add Printer** icon. The **Add Printer Wizard** will start. Click **Next**.
3. The Wizard will ask you if you want to install a local printer or a network printer. Choose **Network Printer** and click **Next**.
4. Enter the printer address in the **URL** field.

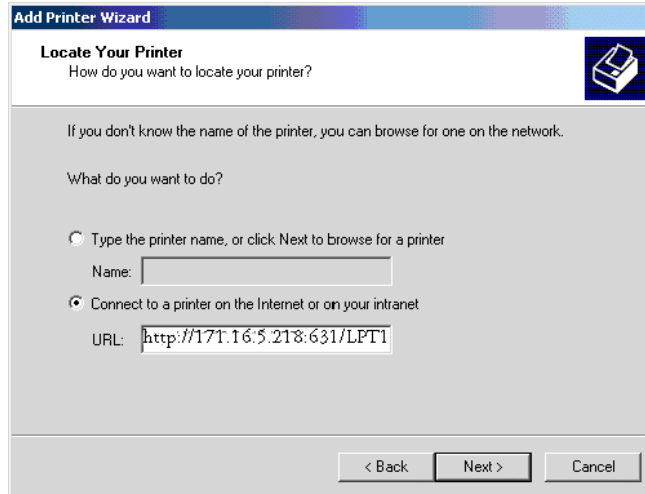


(Example: `http://171.16.5.218:631/LPT1` if want to address the parallel port)
Click **Next**.

5. If you do not have a driver corresponding to the destination printer installed on your computer, the Wizard will prompt you to install one. Click **OK**.
6. The Installation Wizard will ask you to select a printer driver corresponding to the destination printer. Select the printer driver from the list and click **OK**.

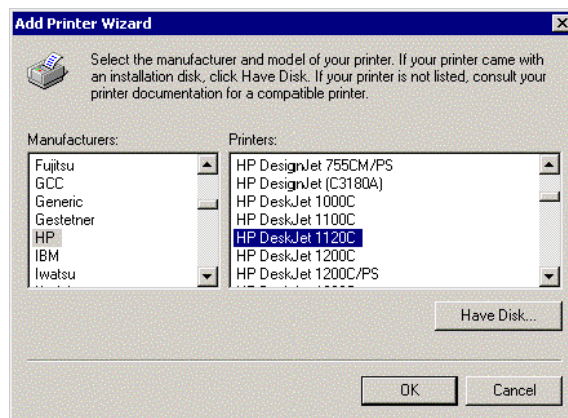

7. The Wizard will ask you if you want the printer to be your default destination printer. Make your choice and click **Next** to complete the Add Printer Wizard installation.

8. The new printer is added to your **Select Printer** window:

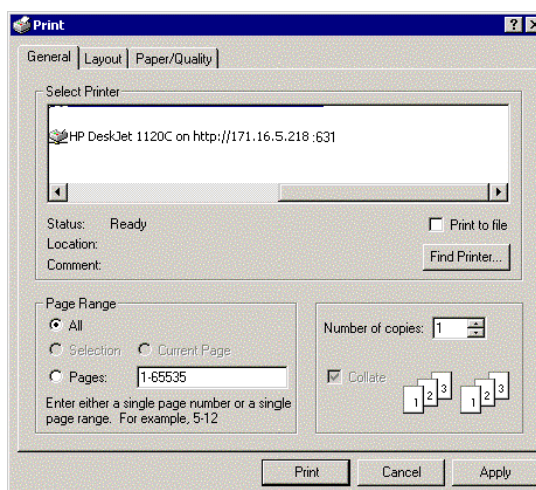

9. You are now ready to print using IPP: specify your new destination printer from the printer list and click **Print**.

Network Speed

With the Network Speed parameter you can manually specify the speed at which you will send and receive network packages. You can change the Network Speed setting to correspond to the type of network you are using.

To change the Network Speed in an Ethernet network, log in to the print server's internal Web pages and click **Admin | General Settings => Change**.

You have the options listed here:

<i>Network Speed</i>	<i>Comment</i>
AUTO_SENSE	This is the default value where the print server detects which speed is optimal for each network package you transfer.
10_HALF_DX	10 Half Duplex
10_FULL_DX	10 Full Duplex

The default Network Speed value is AUTO_SENSE, which is the correct option for the majority of users.

If you choose a faulty Network Speed option for your network, you may loose contact with the print server.

To reset the Network Speed parameter to AUTO_SENSE, you will have to reboot the print server (disconnect and then re-connect the external power supply).

Changing Language in the Print Server's Web Interface

English, French, German, Italian, Japanese and Spanish is supported in the print server's Web interface, with English as the default language. You can change the language used for the print server's Web interface from the **User** mode:

1. Click the **Change** button next to 'Language'.
2. Choose your preferred language and character set from the drop-down lists, click OK and then press **F5** to refresh the view.

You can change the **Character Set** by clicking the **Change** button. The default Character Set is **ISO-8859-1**, which can be applied in most cases. Japanese requires **SHIFT_JIS**.

Section 12 Logical Printers

The print server has a powerful facility for altering the print data. This means that your desired print format can be realized on any type of printer. The following actions can be invoked from the print server:

- The character set can be changed to suit the printer
- Strings can be added before and after the print data
- Strings within the print data can be substituted
- ASCII to PostScript conversion
- Redirection of print data to another printer if the printer is busy
- Hex Dump mode to assist with printing problems

If any of these actions are required, a Logical Printer is used to change the print data before being sent to the printer port. There are eight logical printers (PR1-PR8) that can be set up to filter the print data.

The default logical printers settings are such that PR1-PR4 cause no change to the flow of print data, while PR5-PR8 add CR to LF control characters:

<i>Logical Printer</i>	<i>Changes to data</i>
PR1	no change
PR2	no change
PR3	no change
PR4	no change
PR5	add CR to LF
PR6	add CR to LF
PR7	add CR to LF
PR8	add CR to LF

Each logical printer can be set via the print server's internal Web pages: Open a Web browser, enter the IP address of the print server in the Location/Address field and select **Admin | Logical Printers**.

The logical printers can also be set up by editing the *config* file. See "Editing the *config* file" on page 90.

Notes:

- The examples in this section describe how you can configure the available logical printers using a standard Web browser. If you want to set them directly by editing the *config* file, just enter the values for the corresponding parameters.
- The examples should only be viewed as suggestions how to configure the logical printers. You should, of course, configure them according to the needs of your network.
- In the Parameter List chapter of this manual, you can find a complete list of the print server's parameters.

Character Set Conversion A common problem in a multiple host environment is that different hosts use different ASCII character sets. As a result of this, language specific characters (such as å ü ô ñ) are sometimes printed incorrectly.

The Axis Network Print Server solution to this problem is to assign a character set conversion filter to a logical printer, and then link that logical printer to the host causing the problem.

You select your desired conversion filter by setting the **Character Set Conversion** (PRx_CSET.) parameter. The output from the conversion filter is always IBM PC Set 2 (Code Page 437), and this is the character set the printer must be set up for.

Example:

Your network contains a host using the character set ISO 8859-2 and a host using the character set DEC.

In order to direct print jobs to the printer connected to the Axis Network Print Server, you should assign the host to a separate logical printer, and install a character set conversion filter.

Follow the instructions below to change the conversion filter:

1. From the print server's internal Web page, select **Admin | Logical Printers**.
2. Select the **PR1** tab.
3. Set the parameter **Physical Port** to e.g. **LPT1**.
4. Set the parameter **Character Set Conversion** to **ISO>IBM**.
5. Click the **OK** button.
6. Select the **PR2** tab.
7. Set the parameter **Physical Port** to e.g. **LPT1**.
8. Set the parameter **Character Set Conversion** to **DEC>IBM**.
9. Click the **OK** button.

The ISO 8859-2 printer data that is sent to logical printer PR1 converts to IBM PC Set 2 and is printed on LPT1. Similarly, the DEC printer data that is sent to logical printer PR2 converts to IBM PC Set 2 and is printed on LPT1.

Adding Strings Before and After Print Jobs

These string functions provide a way to send printer control commands before and after each print job. They may be specified individually for each logical printer. All strings are entered as hexadecimal byte values.

Example:

Assume that the logical printer PR5 is configured as a PostScript printer and that you want to append the PostScript End of File character (hex 04) after each print job.

Follow the instructions below to add a string after the print job:

1. From the print server's internal Web page, select **Admin | Logical Printers**.
2. Select the **PR5** tab.
3. Enter the string **04** in the **String After Print Job** text field.
4. Click the **OK** button.

Example:

You have an HP LaserJet printer with dual trays, and want to print on pre-printed forms when using the logical printer PR4. The standard forms are taken from the lower tray, and the pre-printed forms are taken from the upper tray. The string before print job should contain the command to select the upper tray: `^C&11H` (hex 1B 26 6C 31 48). The string after print job should contain the command to select the lower tray: `^C&14H` (hex 1B 26 6C 34 48).

Follow the instructions below to add strings before and after the print job:

1. From the print server's internal Web page, select **Admin | Logical Printers**.
2. Select the **PR4** tab.
3. Enter the string **1B 26 6C 31 48** in the **String Before Print Job** text field.
4. Enter the string **1B 26 6C 34 48** in the **String After Print Job** text field.
5. Click the **OK** button.

String Substitutions

The string substitution function performs search and replace operations on the print data. The primary application is to replace printer control commands. Up to twenty string substitutions may be specified individually for each logical printer.

All strings must be entered as hexadecimal byte values, and each match and substitute string must be preceded by a count byte.

You substitute command strings by editing the String Substitutions (PRx_STR.) parameter.

Example:

Assume that you want to replace the UNIX/Linux New Line (hex 0A) with an Carriage Return/Line Feed (hex 0D 0A) for logical printer PR1.

Follow the instructions below to substitute command strings:

1. From the print server's internal Web page, select **Admin | Logical Printers**.
2. Select the **PR1** Web page.
3. Enter the string **01 0A 02 0D 0A** in the **String Substitutions** text field.

Hex Code	Explanation
01	length of the string you want to replace
0A	the string you want to replace
02	length of the substitute string
0D 0A	the substitute string

4. Click the **OK** button.

This conversion is the default setting for logical printers PR5 through PR8.

Example:

Assume that you want to replace the UNIX/Linux New Line (hex 0A) with an Carriage Return/Line Feed (hex 0D 0A), and the printer command $\text{E}_{\text{C}}\text{G1}$ (hex 1B 47 31) with $\text{E}_{\text{C}}\text{Y}$ (hex 1B 59) for logical printer PR2.

Follow the instructions below to substitute command strings:

1. From the print server's internal Web page, select **Admin | Logical Printers**.
2. Select the **PR2** tab.
3. Enter the string **01 0A 02 0D 0A 03 1B 47 31 02 1B 59** in the **String Substitutions** text field.

Hex code	Explanation
01	length of the UNIX/Linux New Line command
0A	the UNIX/Linux New Line command
02	length of the Carriage Return/Line Feed command
0D 0A	the Carriage Return/Line Feed command
03	length of the printer command to replace
1B 47 31	the printer command to replace
02	length of the new printer command
1B 59	the new printer command

Click the **OK** button.

Note:

Extensive use of string substitutions will naturally decrease the throughput rate of the Axis Network Print Server.

ASCII to Postscript Conversion The AXIS 540+/AXIS 560 logical printers can translate ASCII print data into PostScript format. This makes it possible to print on a PostScript printer from a host that does not support PostScript. The conversion is selected by activating a filter that converts ASCII data into Postscript. This filter can be activated individually for each logical printer.

Activate your desired filter by setting the Printer Language Translation (PRx_FILT.) parameter.

Example: Follow the instructions below to convert ASCII print data to PostScript for logical printer PR2:

1. From the print server's internal Web page, select **Admin | Logical Printers**.
2. Select the **PR2** tab.
3. Set the **Printer Language Translation** parameter to **POSTSCR**.
4. Click the **OK** button.

If you select the parameter value **AUTO_PS**, the print data for every print job is searched and if any ASCII data is found, it is translated into PostScript. This setting is recommended if you are not sure if the print data is ASCII or PostScript.

PostScript Settings When a logical printer is set for PostScript conversion, you must specify the following:

- page size
- page orientation
- page format
- which font to use

The default page size is A4 and the default page orientation is Portrait, while the page format parameters are as follows:

<i>Page Format Parameter</i>	<i>Default Value</i>	<i>Comment</i>
Lines per page (MPL)	66	
Characters per line (MPP)	0	0 = disable line wrap
Characters per inch (CPI)	100	100 = 10 char per inch
Lines per inch (LPI)	60	60 = 6 lines per inch
Left margin (LM)	30	30 = 3.0 mm
Top margin (TM)	50	50 = 5.0 mm

The PostScript font can be any font that is installed in the printer. If no font is specified, Courier will be used.

Example: Follow the instructions below to set the PostScript parameters for logical printer PR2:

1. From the print server's internal Web page, select **Admin | Logical Printers**.
2. Select the **PR2** tab.

3. Set the **Printer Language Translation** parameter to **POSTSCR**.
4. Set the **PostScript Page Size** parameter to **LETTER**.
5. Set the **PostScript Page Orientation** parameter to **LANDS**.
6. Enter the string **48 0 120 60 30 50** in the **PostScript Page Format** text field.

<i>Hex code</i>	<i>Explanation</i>
48	48 lines per page
0	disable line wrap
120	120 = 12 characters per inch
60	60 = 6 lines per inch
30	30 = 3 mm left margin
50	50 = 5 mm top margin

7. Enter the string **Helvetica** in the **PostScript Font** text field.
8. Click the **OK** button.

Redirecting Print Jobs when a Printer is Busy

If print data is received for a printer that is already busy, the host normally must wait. However, for a two-port print server it is possible to use a logical printer to redirect the print data to another logical printer when the target printer is busy. If the second printer is also busy, the host must wait until the target printer is ready.

Example: Follow the instructions below to redirect PR1 print jobs to PR3, when the printer assigned to PR1 is busy:

1. From the print server's internal Web page, select **Admin | Logical Printers**.
2. Select the **PR1** tab.
3. Set the **Physical Port** parameter to **LPT1**.
1. Set the **Secondary Printer** parameter to **PR3**.
2. Set the **Wait On Busy** parameter to **NO**.
3. Click the **OK** button.
4. Select **Admin | Logical Printers** and the **PR3** tab.
5. Set the **Physical Port** parameter to **LPT2**.
6. Click the **OK** button.

Notes:

- The two printers must use the same printer driver.
- Logical Printer redirection cannot be nested. If PR3 is redirected to another logical printer, the print job will not be redirected if PR3 is busy.
- If both printers are busy, the print job will be printed on the printer that first finishes its active print job.

Read Back of information The AXIS 540+/AXIS 560 supports bi-directional printing. The information from the printer is read back on the parallel port when the parameter Read Back Port (PRx_IN.) has the default setting of AUTO. However, it is required that the printer also supports bi-directional printing.

Please refer to your printer documentation for further details regarding bi-directional printing support.

Example: Follow the instructions below to disable the bi-directional communication for logical printer PR1:

1. From the print server's internal Web page, select **Admin | Logical Printers**.
2. Select the **PR1** tab.
3. Set the **Read Back Port** parameter to **NONE**.
4. Click the **OK** button.

Debugging using the Hex Dump Mode When hex dump mode is enabled, the print data is printed as hexadecimal byte values rather than characters; printer control commands are also printed as hex values. This allows you to inspect what control and print characters are actually being sent to the printer, which is a useful debugging facility for more difficult printing problems.

Example: Follow the instructions below to enable the hex dump mode for PR3:

1. From the print server's internal Web page, select **Admin | Logical Printers**.
2. Select the **PR3** tab.
3. Set the **Hex Dump Mode Enabled** radio button to **YES**.
4. Click **OK**.

Note:

The page length for hex dump printouts is determined by the lines per page value of the PostScript page format parameter.

Section 13 IP Addressing

IP Address and Subnet Mask	<p>The print server must be correctly configured with the following information to function properly:</p> <ul style="list-style-type: none"> • an IP address • a subnet mask • a default gateway (or router)
IP Address	<p>Each device on your network must have a unique IP address to operate correctly. An IP address identifies the address of the device to which data is being sent and the address of the destination network. IP addresses have the format n.n.n.x where n is a decimal number between 0 and 255 and x is a number between 1 and 254 inclusive.</p>
Subnet Mask	<p>In addition to the IP address, you need to set a subnet mask. All networks are divided into smaller sub-networks and a subnet mask is a number that enables a device to identify the sub-network to which it is connected. For your network to work correctly, all devices on the subnet must have:</p> <ul style="list-style-type: none"> • The same sub-network address • The same subnet mask <p>The only value that will be different is the specific host device number. This value must always be unique. The size of the network determines the structure of the IP addresses in it.</p>
Default Gateway	<p>In a network using subnets, the router that forwards traffic to a destination outside of the subnet of the transmitting device. If there is a server or a router which functions as a gateway, enter the IP address of the server or the router.</p>
IP Address and Subnet Mask Structures	<p>Two of the most common types of IP address and subnet mask structures are described here:</p> <p>Type One</p> <p>In a small (Class C) network, the IP address example '192.168.3.191' is split into two parts:</p> <ul style="list-style-type: none"> • Part one ('192.168.3') identifies the network on which the device resides. • Part two ('.191') identifies the device within the network. <p>This type of IP address generally operates on a subnet mask of '255.255.255.0'.</p>

Type Two

In larger (Class B) networks, where there are more devices, the IP address of '162.168.3.191' is split into two parts but is structured differently:

- Part one ('162.168') identifies the network on which the device resides.
- Part two ('.3.191') identifies the device within the network.

This type of IP Address operates on a subnet mask of '255.255.0.0'.

Default Gateway Examples

1. This example shows a network with:

- one computer
- one networked printer
- no router

Device	IP address	Subnet Mask	Default Gateway
print server	192.168.3.191	255.255.255.0	*
pc1	192.168.3.192	255.255.255.0	*

** When no router is present on the network, the default gateway can be left undefined.*

2. This example shows a network with:

- one computer
- one networked printer
- a router with IP value: 192.168.3.1

Device	IP address	Subnet Mask	Default Gateway
print server	192.168.3.191	255.255.255.0	192.168.3.1
pc1	192.168.3.192	255.255.255.0	192.168.3.1

Obtaining an IP Address and Subnet Mask

There are three different ways to obtain an IP address and subnet mask. These are:

- Dynamic Host Configuration Protocol (DHCP) Addressing
- Static Addressing
- Automatic Addressing (Auto-IP Addressing)

DHCP Addressing

If your network contains a DHCP server, print servers on your network will obtain an IP address and subnet mask automatically. DHCP assigns a temporary IP address and subnet mask which gets reallocated once you disconnect from the network. DHCP will work on any client Operating System such as Windows 95, 98 or NT. Also, using DHCP means that the same IP address and subnet mask will never be duplicated for devices on the network. DHCP is particularly useful for networks with large numbers of users on them.

Static Addressing

With this method you must enter an IP Address and the subnet mask manually on every device. Using a static IP and subnet mask means the address is permanently fixed.

Auto-IP Addressing Network devices use automatic IP addressing if they are configured to acquire an address using DHCP but are unable to contact a DHCP server. Automatic IP addressing is a scheme where devices allocate themselves an IP address at random from the industry standard subnet of 169.254.x.x (with a subnet mask of 255.255.0.0). If two devices allocate themselves the same address, the conflict is detected and one of the devices allocates itself a new address.

Automatic IP addressing support was introduced by Microsoft in the Windows 98 operating system and is also supported in Windows 2000/XP/2003.

Registering and Resolving Host Names In order to register the host name of the print server in networks with dynamic IP address settings, WINS (Windows Internet Name Service) and DDNS (Dynamic Domain Name System) are supported. It is recommended that at least one of these methods should be used if you are setting the IP address of the print server using DHCP.

The host name of the print server is specified by the PS_NAME parameter. Refer to the *“The Parameter List”* on page 126.

WINS Host Name Rules WINS only supports 15 character long host names. If your host name is longer than 15 characters, the print server truncates the host name to 15 characters when registering with a WINS server. You can view the print server's host name that is registered at a WINS server in the print server's Web interface. Refer to *“Using a Web Browser for Print Server Management”* on page 84.

DDNS Host Name Rules DDNS supports 47 character long host names and can only consist of the characters 'A-Z', 'a-z', '0-9' and '-'. If your host name consists of any other characters, they are converted to '-' when registering with a DDNS server. You can view which host name that is registered at a DDNS server in the print server's Web interface. Refer to *“Using a Web Browser for Print Server Management”* on page 84.

If the host name matches another entry in the DDNS data base, the print server deletes that entry before registering.

Notes:

- The default host name of the print server is 'AXIS' followed by the last 6 digits in the serial number. e.g. AXIS181636. The host name (Print server name) can be changed in the PS_NAME field on the **Admin | General Settings** page.
- The host name limitations conclude that if you want to register the same host name at a WINS server and a DDNS server, the host name should be no longer than 15 characters and it should only contain the characters 'A-Z', 'a-z', '0-9' and '-'.
- Refer to your system manuals or to your network administrator for instructions on how host name resolutions are performed on your system.

Setting the IP Address using DHCP

Follow the instructions below to download the IP address using DHCP:

1. Edit or create a scope in the DHCP manager of the DHCP daemon. The entries included in this scope should contain the following parameters:
 - range of IP addresses
 - subnet mask
 - default router IP address
 - WINS server IP address(es) or DDNS server IP address(es)
 - lease duration
2. Activate the scope. The print server automatically downloads the DHCP parameters. If you are using WINS or DNS, you should include at least one WINS or DNS server IP address in the DHCP scope. Immediately after the IP address has been received, the print server registers its host name and IP address on the WINS alternatively DNS server. Refer to *"Registering and Resolving Host Names"* on page 117 for more information. The print server can automatically download a customized *config* file from a TFTP server. Just add the name of the config file and the TFTP server's IP address to your DHCP scope. The *config* file is downloaded immediately after the print server receives its IP address.
3. You have now successfully set the IP address of your print server.

Note:

You have to restart the print server to download the IP address.

Section 14 The Test Button

The test button is located on the front right hand side of the AXIS 540+/AXIS 560 and is used for:

- Printing a test page to check the connection to the printer.
- Printing a parameter list to see the print server's current settings.
- Performing a Factory Default of the print server.

If you want to change any of the parameters, use one of the methods described in *Management and Configuration*, on page 84.

Printing a Test Page Press the test button **once** to print a test page. The test page contains basic information about the AXIS 540+/AXIS 560. It is recommended that you print a test page every time you connect the print server to a printer.

Note:

For AXIS 560: if just one of the ports is connected to a printer, the test page will be printed on that port. If each port is connected to a printer, the default setting is to send the test page to 1) LPT1, 2) COM1, 3) LPT2. The default behavior can be changed from the print server's internal Web pages under **Admin | General Settings => Change**.

Printing the Parameter List Press the test button **twice** to print a parameter list showing the current AXIS 540+/AXIS 560 settings. This list provides comprehensive details of all the parameters and their current status. Refer to *Section 17 The Parameter List*, on page 126.

Performing a Factory Default

1. Remove the external power supply to switch off the print server.
2. Press and hold down the test button while you reconnect the external power supply.
3. Continue to hold down the test button until the network indicator remains constantly lit. This should take about 20 seconds.
4. Restart the print server by disconnecting and reconnecting the external power supply.

Section 15 Troubleshooting

This section provides useful information to help you resolve difficulties you might have with your AXIS 540+/AXIS 560. Fault symptoms, possible causes and remedial actions are provided within a quick reference table.

Please visit the Axis Web site for latest troubleshooting tips, more support and additional help through the FAQ database or to fill in and submit a Support question.

LED Indicators

<i>Indicator</i>	<i>Color/Behavior</i>	<i>Explanation</i>
Power	Green	OK
	Not lit	No power/Error
Network	Orange	OK - network connected
	Orange flashing	Activity on network
	Not lit	No physical connection to the network

Web Interface

<i>Symptoms</i>	<i>Possible causes</i>	<i>Remedial actions</i>
The AXIS 540+/AXIS 560 Web interface cannot be accessed from a Web browser.	The AXIS 540+/AXIS 560 is not connected properly.	<ol style="list-style-type: none"> 1. Check Power and Network indicator. 2. Check that assignment of IP addresses for the AXIS 540+/AXIS 560 is correct. 3. To further check the IP addresses, run the Ping command from another computer as described in "IP address check" at the end of this chapter. Follow the appropriate recommendations.
	Problem with your proxy server.	Verify the proxy server settings in your Web browser.
	Other networking problems.	<ol style="list-style-type: none"> 1. Verify that your network is accessible through your network socket. 2. Verify that your network cable is functional.

IP Address Check with Ping By sending a data packet to a specific IP address and waiting for a reply, Ping can determine whether that IP address is accessible. Ping can also help you to determine IP address conflicts with your AXIS 540+/AXIS 560 and troubleshoot TCP/IP problems on the network. Follow the instructions below to diagnose your problem.

Windows: Open a Command Prompt and enter the following commands:

<i>Syntax</i>	<i>Example</i>
ping <IP address>	ping 192.168.3.191

The host will return reply from 192.168.3.191, or a similar message. This indicates that the address has been set and that communication is established

UNIX/Linux and Mac OS X Open a Terminal and enter the following commands:

<i>Syntax</i>	<i>Example</i>
ping <IP address>	ping 192.168.3.191

The host will return psname is alive, or a similar message. This indicates that the address has been set and that communication is established.

Replies: Subsequent replies will provide an explanation of the cause of the problem. Replies from DOS can be interpreted as defined in the table below (for UNIX/Linux replies please refer to the UNIX/Linux chapter of this manual):

<i>Ping Reply</i>	<i>Interpretation and recommendation</i>	
	<i>Axis Network Print Server connected</i>	<i>Axis Network Print Server disconnected</i>
bytes = 32 time = 2 ms..... - or something similar	The AXIS 540+/AXIS 560 is responding correctly. There are probably no conflicts with the IP address - disconnect the AXIS 540+/AXIS 560 and ping again to verify.	The IP address is already in use and cannot be used again. You must obtain a new IP address for your AXIS 540+/AXIS 560.
destination host unreachable	The AXIS 540+/AXIS 560 is not accessible. Check your network settings.	—
request timed out	The IP address is not in use. You are either pinging the wrong IP address or your AXIS 540+/AXIS 560 does not have the correct IP address.	This IP address is not used by anyone and is available for use for your AXIS 540+/AXIS 560. Set the IP address again, power on the AXIS 540+/AXIS 560 and then try accessing the unit.
no response from ping command	The AXIS 540+/AXIS 560 is not accessible. Check your network settings.	—

SNMP Device Index If you are using the TCP/IP protocol, check that the SNMP Device Index is correct. See “*SNMP Device Index*” on page 144.

- | | |
|-------------------------------|--|
| Axis Support
Server Report | <p>In order to obtain optimal support from Axis support technicians, please follow these instructions when filling in and submitting a Support question.</p> <ol style="list-style-type: none">1. Go to the print server's Web pages by typing the print server's IP address in the Address/Location field of your Web browser.2. Go to Admin Support. Click the Server Report link. A new window will open.3. Save the Server report as an HTML file (with an .html file extension) and go to the Axis Web site.4. Choose Support and report your case, attaching the Server Report. |
|-------------------------------|--|

Section 16 Technical Specification

Supported Printers	All printers except host-based printers and copiers, e.g. CAPT, GDI, PPA
Supported Systems	
Microsoft Windows	95, 98, Me, NT, 2000, XP and 2003
Novell NetWare	3.X, 4.X, 5.X, 6.X. Supports bindery and NDS mode. Supports user messages and printer status. NDPS supported over IP and IPX. Support for iPrint using LPR protocol. PSERVER (IP/IPX), RPRINTER/NPRINTER supported
Apple	Mac OS 7, 8, 9, Mac OS X version 10.X
Unix/Linux	All Unix systems supporting TCP/IP (Linux, BSD, System V, Solaris, HP-UX, IBM AIX, Silicon Graphics IRIX, etc.)
Additional Systems	Other systems supporting TCP/IP: IBM (MVS, VM, VSE, OS/400), DEC, VMS Microsoft LAN Manager IBM LAN Server LANtastic
Supported Web browsers	Any standard Web browser (Netscape 6.x and higher and MS Internet Explorer 5.x and higher)
Supported Protocols	NetBIOS/NetBEUI
TCP/IP	ARP, DHCP, BOOTP, RARP, DNS, DDNS, Telnet, TFTP, FTP, LPR, Reverse Telnet, PROS, IPP, IP, TCP, UDP, HTTP, SNMPv1, SLP v1/v2, ICMP, IGMP, Bonjour
NetWare	IPX, SPX, SAP, NCP (extended with NDS), NDPS, NLSP, LIP, RIP, RIP-II, OSPF
Apple EtherTalk	AAPR, ATP, DDP, NBP, PAP, RTMP, ZIP
Logical Printers	Logical printer ports can be programmed to perform auto ASCII to PostScript conversion, add string before and after job, string substitution, alternative output and character set conversion

Security	<p>Password protected configuration</p> <p>Option to disable protocols</p>
Print Server Management	<p>AXIS ThinWizard for installation, configuration, monitoring and firmware upgrading of multiple units</p> <p>Bonjour support for quick and easy installation in Mac OS X environments</p> <p>AXIS AddPrinter for easy and automated installation in Windows environments</p> <p>Internal Web pages or FTP for installation, configuration, monitoring and firmware upgrading</p> <p>SNMP-MIB II compliant (RFC 1213), Axis private enterprise MIB included</p> <p>Netware: Full PCONSOLE, NWAdmin, ConsoleOne and iPrint-iManager support</p>
Supported Languages	English, French, German, Italian, Japanese and Spanish
Firmware Upgrade	Firmware upgrade using AXIS ThinWizard, the print server's Web pages or FTP
Network Connection	<p>All standard Ethernet networks: RJ-45 connector (Category 5 or 6, shielded twisted pair cable) for 10baseT Ethernet with full duplex</p> <p>Supports: IEEE802.2, IEEE802.3, SNAP and Ethernet II frame types simultaneously</p>
Printer Connection	Bi-directional support for Apple EtherTalk, Reverse Telnet and PROS
AXIS 540+	Parallel: One 36-pin Centronics connector, high-speed IEEE 1284 compliant with ECP support and throughput of 1 MB/sec
AXIS 560	<p>Parallel: Two 25-pin DSUB parallel ports, high-speed IEEE 1284 compliant with ECP support and throughput of 1 MB/sec</p> <p>Serial: One 9-pin DSUB connector, RS-232, XON/ XOFF or RTS/CTS, data rates up to 115,200 baud</p>
Hardware	
Processor	AXIS Etrax 100LX 32-bit 100 MHz RISC
Memory	2 MB Flash, 8 MB RAM

Front Panel	2 LED indicators: Power and Network Test button for information printouts
Power Consumption	Power provided by external supply. Maximum 5.6W (Type PS-H, 5.1 VDC 2000mA)
Dimensions	
AXIS 540+	Height: 2.7 cm/1.1 in Width: 5.4 cm/2.1 in Depth: 11.6 cm/4.6 in Weight: 0.1 kg/0.22 lb
AXIS 560	Height: 2.9 cm/1.1 in Width: 16.0 cm/6.3 in Depth: 12.9 cm/5.1 in Weight: 0.28 kg/0.64 lb
Environmental	Temperature: 40-105 °F (5-40 °C) Humidity: 10-90% non-condensing
Approvals	
EMC	-EN 55022/1998 -EN 55024:1998 -EN 61000-3-2 -EN 61000-3-3 -VCCI Class B -C-TICK AS/NZS 3548 -Compliance to FCC part 15 Subpart B, Class B
Safety	EN 60950
Included Accessories	AXIS Network Product CD with software for installation, management and printing, including AXIS ThinWizard (the recommended Axis management software for large enterprise networks) and AXIS AddPrinter (for easy and quick installation) User documentation Quick Installation Guide Power adapter

All specifications are subject to change without prior notice.
--

Section 17 The Parameter List

These are the default parameters in a new, unconfigured print server. A complete list of all Axis print server parameters can be found on www.axis.com

AXIS 540+

(AXIS 540+ (rev 2) Network Print Server V7.00 Sep 21 2004. S/N: 00408C18202B)

Parameter settings:

--- General Menu

NODE_ADDR. : 00 40 8C 18 20 2B

NETWORK_SPEED. : AUTO_SENSE (AUTO_SENSE, 10_HALF_DX, 10_FULL_DX)

PS_NAME. : AXIS18202B

ROOT_PWD. : pass

USERS. :

BASE_URL. : www.axis.com

CHARSET. : ISO-8859-1 (SHIFT_JIS, ISO-8859-1, UTF-8)

LANG. : English (English, French, German, Spanish, Italian, Japanese)

AXIS_PRINT_SYSTEM. : YES

RCONFIG_ENB. : YES

DEF_OUT. : PR1 (PR1, PR2, PR3, PR4, PR5, PR6, PR7, PR8, LPT1)

SYS_LOC. :

SYS_CONT. :

--- LLC Menu

LLC_RESPONSE. : 1300

LLC_REC_ACK. : 20

LLC_INACTIVITY. : 15

--- TCP/IP Network Menu

INT_ADDR. : 10 91 2 40
DEF_ROUT. : 10 91 0 1
NET_MASK. : 255 255 0 0
DHCP_ENB. : YES
AUTOIP_ENB. : YES
BOOTP_ENB. : YES
RARP_ENB. : YES
WINS_ENB. : YES
WINS_ADDR1. : 10 0 5 50
WINS_ADDR2. : 0 0 0 0
NBT_SCOPE_ID. :
DNS_ENB. : YES
DNS_ADDR1. : 193 13 178 7
DNS_ADDR2. : 193 13 178 2
DOMAIN_NAME. : se.axis.com
SLP_ENB. : YES
SLP_SCOPE_LIST. : DEFAULT
RENDEZVOUS_ENB. : YES
RENDEZVOUS_SRVNAME_LPT1. :
FTP_ENB. : YES
TELNET_ENB. : YES
DEF_IP_FRAME_TYPE. : EthernetII (EthernetII, SNAP)

--- TCP/IP Printing Menu

TCP_ENB. : YES
PROS_PWD. : netprinter
PROS_PRT. : 35
LPD_BANN. : OFF (OFF, AUTO, LAST)
DEFAULT_RAW_TCP. : 9100 (9100, CLOSED)
RTN_OPT. : NO
RTEL_PR1. : 0
RTEL_PR2. : 0
RTEL_PR3. : 0
RTEL_PR4. : 0

RTEL_PR5. : 0

RTEL_PR6. : 0

RTEL_PR7. : 0

RTEL_PR8. : 0

--- SNMP Menu

SNMP_V1_ENB. : YES

READ_COM. : public

WRT_COM. : pass

TRAPADDR. : 0 0 0 0

TRAP_COM. : public

SYS_NAME. :

SNMP_AUT. : DISABLE (DISABLE, ENABLE)

TRAP_PRT. : DISABLE (DISABLE, ENABLE)

--- NetWare Menu

NETW_ENB. : YES

NETW_TRANSPORT_PROTOCOL. : DUAL_STACK (IPX_ONLY, IP_ONLY, DUAL_STACK)

NDPS. : TCP_AND_SPX (TCP_AND_SPX, TCP_ONLY, SPX_ONLY, DISABLED)

JOB_CHECK_DELAY. : 5

CONF_CHECK_DELAY. : 300

FR_802_3. : YES

FR_ETH_2. : YES

FR_802_2. : YES

FR_SNAP. : YES

NCP_BURST_MODE. : YES

PSERVER_NDS_TREE. :

PSERVER_NDS_FILESERVER. :

PSERVER_NDS_DISTINGUISHED_NAME. :

PSERVER_BINDERY1. :

PSERVER_BINDERY2. :

PSERVER_BINDERY3. :

PSERVER_BINDERY4. :
PSERVER_BINDERY5. :
PSERVER_BINDERY6. :
PSERVER_BINDERY7. :
PSERVER_BINDERY8. :
PSERVER_BINDERY9. :
PSERVER_BINDERY10. :
PSERVER_BINDERY11. :
PSERVER_BINDERY12. :
PSERVER_BINDERY13. :
PSERVER_BINDERY14. :
PSERVER_BINDERY15. :
PSERVER_BINDERY16. :

NPRINTER1. :
NPRINTER2. :
NPRINTER3. :
NPRINTER4. :
NPRINTER5. :
NPRINTER6. :
NPRINTER7. :
NPRINTER8. :

--- NetBIOS/NetBEUI Menu

LSLM_ENB. : YES
NB_FR_TYPE. : FR_802_2 (FR_AUTO, FR_802_2, FR_DIX)
LPRINT_1. : AX18202B.LP1
LLOGIC_1. : PR1 (PR1, PR2, PR3, PR4, PR5, PR6, PR7, PR8, LPT1)
LPRINT_2. :
LLOGIC_2. : PR2 (PR1, PR2, PR3, PR4, PR5, PR6, PR7, PR8, LPT1)
LPRINT_3. :
LLOGIC_3. : PR3 (PR1, PR2, PR3, PR4, PR5, PR6, PR7, PR8, LPT1)
LPRINT_4. :
LLOGIC_4. : PR4 (PR1, PR2, PR3, PR4, PR5, PR6, PR7, PR8, LPT1)
LPRINT_5. :

LLOGIC_5. : PR5 (PR1, PR2, PR3, PR4, PR5, PR6, PR7, PR8, LPT1)
LPRINT_6. :
LLOGIC_6. : PR6 (PR1, PR2, PR3, PR4, PR5, PR6, PR7, PR8, LPT1)
LPRINT_7. :
LLOGIC_7. : PR7 (PR1, PR2, PR3, PR4, PR5, PR6, PR7, PR8, LPT1)
LPRINT_8. :
LLOGIC_8. : PR8 (PR1, PR2, PR3, PR4, PR5, PR6, PR7, PR8, LPT1)

--- AppleTalk Menu

ATLK_ENB. : YES
ATK_ZONE. :
ZONER_EN. : YES
ATK_FONT. : DEFAULT (DEFAULT, 35N, ALL)
AUTO_DT_PRIN1. : YES
APRINT_1. : AXIS18202B_LPT1
ATYPE_1. : LaserWriter
ALOGIC_1. : PR1 (PR1, PR2, PR3, PR4, PR5, PR6, PR7, PR8, LPT1)
BINARY_TYPE_1. : TBCP (TBCP, BCP, NONE)
APRINT_2. : AXIS18202B_2
ATYPE_2. :
ALOGIC_2. : PR2 (PR1, PR2, PR3, PR4, PR5, PR6, PR7, PR8, LPT1)
BINARY_TYPE_2. : TBCP (TBCP, BCP, NONE)

--- Printer1 Menu

PR1_NAME. :
PR1_IN. : AUTO (AUTO, NONE)
PR1_BEF. :
PR1_STR. :
PR1_CSET. : NONE (NONE, ISO>IBM, 7UK>IBM, 7SW>IBM, 7GE>IBM, 7FR>IBM, 7ND>IBM, DEC>IBM)
PR1_FILT. : NONE (NONE, POSTSCR, AUTO_PS)
PR1_AFT. :
PR1_DUMP. : NO
PR1_SIZE. : A4 (A4, LETTER, LEGAL, EXECUT)

PR1_ORNT. : PORTR (PORTR, LANDS, R_PORTR, R_LANDS)

PR1_FORM. : 66 0 100 60 30 50

PR1_FONT. :

--- Printer2 Menu

PR2_NAME. :

PR2_IN. : AUTO (AUTO, NONE)

PR2_BEF. :

PR2_STR. :

PR2_CSET. : NONE (NONE, ISO>IBM, 7UK>IBM, 7SW>IBM, 7GE>IBM,
7FR>IBM, 7ND>IBM, DEC>IBM)

PR2_FILT. : NONE (NONE, POSTSCR, AUTO_PS)

PR2_AFT. :

PR2_DUMP. : NO

PR2_SIZE. : A4 (A4, LETTER, LEGAL, EXECUT)

PR2_ORNT. : PORTR (PORTR, LANDS, R_PORTR, R_LANDS)

PR2_FORM. : 66 0 100 60 30 50

PR2_FONT. :

--- Printer3 Menu

PR3_NAME. :

PR3_IN. : AUTO (AUTO, NONE)

PR3_BEF. :

PR3_STR. :

PR3_CSET. : NONE (NONE, ISO>IBM, 7UK>IBM, 7SW>IBM, 7GE>IBM,
7FR>IBM, 7ND>IBM, DEC>IBM)

PR3_FILT. : NONE (NONE, POSTSCR, AUTO_PS)

PR3_AFT. :

PR3_DUMP. : NO

PR3_SIZE. : A4 (A4, LETTER, LEGAL, EXECUT)

PR3_ORNT. : PORTR (PORTR, LANDS, R_PORTR, R_LANDS)

PR3_FORM. : 66 0 100 60 30 50

PR3_FONT. :

--- Printer4 Menu

PR4_NAME. :
PR4_IN. : AUTO (AUTO, NONE)
PR4_BEF. :
PR4_STR. :
PR4_CSET. : NONE (NONE, ISO>IBM, 7UK>IBM, 7SW>IBM, 7GE>IBM,
7FR>IBM, 7ND>IBM, DEC>IBM)
PR4_FILT. : NONE (NONE, POSTSCR, AUTO_PS)
PR4_AFT. :
PR4_DUMP. : NO
PR4_SIZE. : A4 (A4, LETTER, LEGAL, EXECUT)
PR4_ORNT. : PORTR (PORTR, LANDS, R_PORTR, R_LANDS)
PR4_FORM. : 66 0 100 60 30 50
PR4_FONT. :

--- Printer5 Menu

PR5_NAME. :
PR5_IN. : AUTO (AUTO, NONE)
PR5_BEF. :
PR5_STR. : 01 0A 02 0D 0A
PR5_CSET. : NONE (NONE, ISO>IBM, 7UK>IBM, 7SW>IBM, 7GE>IBM,
7FR>IBM, 7ND>IBM, DEC>IBM)
PR5_FILT. : NONE (NONE, POSTSCR, AUTO_PS)
PR5_AFT. :
PR5_DUMP. : NO
PR5_SIZE. : A4 (A4, LETTER, LEGAL, EXECUT)
PR5_ORNT. : PORTR (PORTR, LANDS, R_PORTR, R_LANDS)
PR5_FORM. : 66 0 100 60 30 50
PR5_FONT. :

--- Printer6 Menu

PR6_NAME. :
PR6_IN. : AUTO (AUTO, NONE)
PR6_BEF. :

PR6_STR. : 01 0A 02 0D 0A
PR6_CSET. : NONE (NONE, ISO>IBM, 7UK>IBM, 7SW>IBM, 7GE>IBM,
7FR>IBM, 7ND>IBM, DEC>IBM)
PR6_FILT. : NONE (NONE, POSTSCR, AUTO_PS)
PR6_AFT. :
PR6_DUMP. : NO
PR6_SIZE. : A4 (A4, LETTER, LEGAL, EXECUT)
PR6_ORNT. : PORTR (PORTR, LANDS, R_PORTR, R_LANDS)
PR6_FORM. : 66 0 100 60 30 50
PR6_FONT. :

--- Printer7 Menu

PR7_NAME. :
PR7_IN. : AUTO (AUTO, NONE)
PR7_BEF. :
PR7_STR. : 01 0A 02 0D 0A
PR7_CSET. : NONE (NONE, ISO>IBM, 7UK>IBM, 7SW>IBM, 7GE>IBM,
7FR>IBM, 7ND>IBM, DEC>IBM)
PR7_FILT. : NONE (NONE, POSTSCR, AUTO_PS)
PR7_AFT. :
PR7_DUMP. : NO
PR7_SIZE. : A4 (A4, LETTER, LEGAL, EXECUT)
PR7_ORNT. : PORTR (PORTR, LANDS, R_PORTR, R_LANDS)
PR7_FORM. : 66 0 100 60 30 50
PR7_FONT. :

--- Printer8 Menu

PR8_NAME. :
PR8_IN. : AUTO (AUTO, NONE)
PR8_BEF. :
PR8_STR. : 01 0A 02 0D 0A
PR8_CSET. : NONE (NONE, ISO>IBM, 7UK>IBM, 7SW>IBM, 7GE>IBM,
7FR>IBM, 7ND>IBM, DEC>IBM)
PR8_FILT. : NONE (NONE, POSTSCR, AUTO_PS)
PR8_AFT. :

PR8_DUMP. : NO
PR8_SIZE. : A4 (A4, LETTER, LEGAL, EXECUT)
PR8_ORNT. : PORTR (PORTR, LANDS, R_PORTR, R_LANDS)
PR8_FORM. : 66 0 100 60 30 50
PR8_FONT. :

--- LPT1 Menu

L1_CENTR. : HISPEED (IBM_PC, STNDRD, FAST, HISPEED, HINOACK)
L1_BSYTM. : 60
L1_MGM_INFO. : AUTO (DISABLE, AUTO)
L1_COMMENT. :
L1_BIDIR. : AUTO (DISABLE, AUTO)
L1_READT. : 3

AXIS 560

(AXIS 561 (rev 2) Network Print Server V7.00 Sep 10 2004. S/N:
00408C18202B)

Parameter settings:

--- General Menu

NODE_ADDR. : 00 40 8C 18 20 2B
NETWORK_SPEED. : AUTO_SENSE (AUTO_SENSE, 10_HALF_DX,
10_FULL_DX)
PS_NAME. : AXIS18202B
ROOT_PWD. : pass
USERS. :
BASE_URL. : www.axis.com
CHARSET. : ISO-8859-1 (SHIFT_JIS, ISO-8859-1, UTF-8)
LANG. : English (English, French, German, Spanish, Italian,
Japanese)
AXIS_PRINT_SYSTEM. : YES
RCONFIG_ENB. : YES
DEF_OUT. : PR1 (PR1, PR2, PR3, PR4, PR5, PR6, PR7, PR8, LPT1,

COM1, LPT2)

SYS_LOC. :

SYS_CONT. :

--- LLC Menu

LLC_RESPONSE. : 1300

LLC_REC_ACK. : 20

LLC_INACTIVITY. : 15

--- TCP/IP Network Menu

INT_ADDR. : 171 16 115 195

DEF_ROUT. : 171 15 115 1

NET_MASK. : 255 255 0 0

DHCP_ENB. : NO

AUTOIP_ENB. : NO

BOOTP_ENB. : NO

RARP_ENB. : NO

WINS_ENB. : YES

WINS_ADDR1. : 171 16 115 16

WINS_ADDR2. : 0 0 0 0

NBT_SCOPE_ID. :

DNS_ENB. : YES

DNS_ADDR1. : 171 16 115 28

DNS_ADDR2. : 0 0 0 0

DOMAIN_NAME. :

SLP_ENB. : YES

SLP_SCOPE_LIST. : DEFAULT

RENDEZVOUS_ENB. : YES

RENDEZVOUS_SRVNAME_LPT1. :

RENDEZVOUS_SRVNAME_COM1. :

RENDEZVOUS_SRVNAME_LPT2. :

FTP_ENB. : YES

TELNET_ENB. : YES

DEF_IP_FRAME_TYPE. : EthernetII (EthernetII, SNAP)

--- TCP/IP Printing Menu

TCP_ENB. : YES
PROS_PWD. : netprinter
PROS_PRT. : 35
LPD_BANN. : OFF (OFF, AUTO, LAST)
DEFAULT_RAW_TCP. : 9100-9102 (9100-9102, CLOSED)
RTN_OPT. : NO
RTEL_PR1. : 9001
RTEL_PR2. : 9002
RTEL_PR3. : 9003
RTEL_PR4. : 0
RTEL_PR5. : 0
RTEL_PR6. : 0
RTEL_PR7. : 0
RTEL_PR8. : 0

--- SNMP Menu

SNMP_V1_ENB. : YES
READ_COM. : public
WRT_COM. : pass
TRAPADDR. : 0 0 0 0
TRAP_COM. : public
SYS_NAME. :
SNMP_AUT. : DISABLE (DISABLE, ENABLE)
TRAP_PRT. : DISABLE (DISABLE, ENABLE)

--- NetWare Menu

NETW_ENB. : YES
NETW_TRANSPORT_PROTOCOL. : DUAL_STACK (IPX_ONLY, IP_ONLY, DUAL_STACK)
NDPS. : TCP_AND_SPX (TCP_AND_SPX, TCP_ONLY, SPX_ONLY, DISABLED)
JOB_CHECK_DELAY. : 5

CONF_CHECK_DELAY. : 300
FR_802_3. : YES
FR_ETH_2. : YES
FR_802_2. : YES
FR_SNAP. : YES
NCP_BURST_MODE. : YES
PSERVER_NDS_TREE. : 6PACKTREE
PSERVER_NDS_FILESERVER. :
PSERVER_NDS_DISTINGUISHED_NAME. : TV560P.axis
PSERVER_BINDERY1. :
PSERVER_BINDERY2. :
PSERVER_BINDERY3. :
PSERVER_BINDERY4. :
PSERVER_BINDERY5. :
PSERVER_BINDERY6. :
PSERVER_BINDERY7. :
PSERVER_BINDERY8. :
PSERVER_BINDERY9. :
PSERVER_BINDERY10. :
PSERVER_BINDERY11. :
PSERVER_BINDERY12. :
PSERVER_BINDERY13. :
PSERVER_BINDERY14. :
PSERVER_BINDERY15. :
PSERVER_BINDERY16. :
NPRINTER1. :
NPRINTER2. :
NPRINTER3. :
NPRINTER4. :
NPRINTER5. :
NPRINTER6. :
NPRINTER7. :
NPRINTER8. :

--- NetBIOS/NetBEUI Menu

LSLM_ENB. : YES

NB_FR_TYPE. : FR_802_2 (FR_AUTO, FR_802_2, FR_DIX)

LPRINT_1. : AX18202B.LP1

LLOGIC_1. : PR1 (PR1, PR2, PR3, PR4, PR5, PR6, PR7, PR8, LPT1, COM1, LPT2)

LPRINT_2. : AX18202B.LP2

LLOGIC_2. : PR2 (PR1, PR2, PR3, PR4, PR5, PR6, PR7, PR8, LPT1, COM1, LPT2)

LPRINT_3. : AX18202B.CM1

LLOGIC_3. : PR3 (PR1, PR2, PR3, PR4, PR5, PR6, PR7, PR8, LPT1, COM1, LPT2)

LPRINT_4. :

LLOGIC_4. : PR4 (PR1, PR2, PR3, PR4, PR5, PR6, PR7, PR8, LPT1, COM1, LPT2)

LPRINT_5. :

LLOGIC_5. : PR5 (PR1, PR2, PR3, PR4, PR5, PR6, PR7, PR8, LPT1, COM1, LPT2)

LPRINT_6. :

LLOGIC_6. : PR6 (PR1, PR2, PR3, PR4, PR5, PR6, PR7, PR8, LPT1, COM1, LPT2)

LPRINT_7. :

LLOGIC_7. : PR7 (PR1, PR2, PR3, PR4, PR5, PR6, PR7, PR8, LPT1, COM1, LPT2)

LPRINT_8. :

LLOGIC_8. : PR8 (PR1, PR2, PR3, PR4, PR5, PR6, PR7, PR8, LPT1, COM1, LPT2)

--- AppleTalk Menu

ATLK_ENB. : YES

ATK_ZONE. : G3 zone

ZONER_EN. : YES

ATK_FONT. : DEFAULT (DEFAULT, 35N, ALL)

AUTO_DT_PRIN1. : YES

APRINT_1. : AXIS18202B_LPT1

ATYPE_1. : LaserWriter

ALOGIC_1. : PR1 (PR1, PR2, PR3, PR4, PR5, PR6, PR7, PR8, LPT1, COM1, LPT2)

BINARY_TYPE_1. : TBCP (TBCP, BCP, NONE)

AUTO_DT_PRIN2. : YES

APRINT_2. : AXIS18202B_LPT2

ATYPE_2. : LaserWriter

ALOGIC_2. : PR2 (PR1, PR2, PR3, PR4, PR5, PR6, PR7, PR8, LPT1, COM1, LPT2)

BINARY_TYPE_2. : TBCP (TBCP, BCP, NONE)

AUTO_DT_PRIN3. : YES

APRINT_3. : AXIS18202B_COM1

ATYPE_3. : LaserWriter

ALOGIC_3. : PR3 (PR1, PR2, PR3, PR4, PR5, PR6, PR7, PR8, LPT1, COM1, LPT2)

BINARY_TYPE_3. : TBCP (TBCP, BCP, NONE)

--- Printer1 Menu

PR1_OUT. : LPT1 (NONE, LPT1, COM1, LPT2)

PR1_NAME. :

PR1_SCND. : PR1 (PR1, PR2, PR3, PR4, PR5, PR6, PR7, PR8)

PR1_WAIT. : YES

PR1_IN. : AUTO (AUTO, NONE, COM1)

PR1_BEF. :

PR1_STR. :

PR1_CSET. : NONE (NONE, ISO>IBM, 7UK>IBM, 7SW>IBM, 7GE>IBM, 7FR>IBM, 7ND>IBM, DEC>IBM)

PR1_FILT. : NONE (NONE, POSTSCR, AUTO_PS)

PR1_AFT. :

PR1_DUMP. : NO

PR1_SIZE. : A4 (A4, LETTER, LEGAL, EXECUT)

PR1_ORNT. : PORTR (PORTR, LANDS, R_PORTR, R_LANDS)

PR1_FORM. : 66 0 100 60 30 50

PR1_FONT. :

--- Printer2 Menu

PR2_OUT. : LPT2 (NONE, LPT1, COM1, LPT2)
 PR2_NAME. :
 PR2_SCND. : PR2 (PR1, PR2, PR3, PR4, PR5, PR6, PR7, PR8)
 PR2_WAIT. : YES
 PR2_IN. : AUTO (AUTO, NONE, COM1)
 PR2_BEF. :
 PR2_STR. :
 PR2_CSET. : NONE (NONE, ISO>IBM, 7UK>IBM, 7SW>IBM, 7GE>IBM, 7FR>IBM, 7ND>IBM, DEC>IBM)
 PR2_FILT. : NONE (NONE, POSTSCR, AUTO_PS)
 PR2_AFT. :
 PR2_DUMP. : NO
 PR2_SIZE. : A4 (A4, LETTER, LEGAL, EXECUT)
 PR2_ORNT. : PORTR (PORTR, LANDS, R_PORTR, R_LANDS)
 PR2_FORM. : 66 0 100 60 30 50
 PR2_FONT. :

--- Printer3 Menu

PR3_OUT. : COM1 (NONE, LPT1, COM1, LPT2)
 PR3_NAME. :
 PR3_SCND. : PR3 (PR1, PR2, PR3, PR4, PR5, PR6, PR7, PR8)
 PR3_WAIT. : YES
 PR3_IN. : AUTO (AUTO, NONE, COM1)
 PR3_BEF. :
 PR3_STR. :
 PR3_CSET. : NONE (NONE, ISO>IBM, 7UK>IBM, 7SW>IBM, 7GE>IBM, 7FR>IBM, 7ND>IBM, DEC>IBM)
 PR3_FILT. : NONE (NONE, POSTSCR, AUTO_PS)
 PR3_AFT. :
 PR3_DUMP. : NO
 PR3_SIZE. : A4 (A4, LETTER, LEGAL, EXECUT)
 PR3_ORNT. : PORTR (PORTR, LANDS, R_PORTR, R_LANDS)
 PR3_FORM. : 66 0 100 60 30 50
 PR3_FONT. :

--- Printer4 Menu

PR4_OUT. : COM1 (NONE, LPT1, COM1, LPT2)
PR4_NAME. :
PR4_SCND. : PR4 (PR1, PR2, PR3, PR4, PR5, PR6, PR7, PR8)
PR4_WAIT. : YES
PR4_IN. : AUTO (AUTO, NONE, COM1)
PR4_BEF. :
PR4_STR. :
PR4_CSET. : NONE (NONE, ISO>IBM, 7UK>IBM, 7SW>IBM, 7GE>IBM,
7FR>IBM, 7ND>IBM, DEC>IBM)
PR4_FILT. : NONE (NONE, POSTSCR, AUTO_PS)
PR4_AFT. :
PR4_DUMP. : NO
PR4_SIZE. : A4 (A4, LETTER, LEGAL, EXECUT)
PR4_ORNT. : PORTR (PORTR, LANDS, R_PORTR, R_LANDS)
PR4_FORM. : 66 0 100 60 30 50
PR4_FONT. :

--- Printer5 Menu

PR5_OUT. : LPT1 (NONE, LPT1, COM1, LPT2)
PR5_NAME. :
PR5_SCND. : PR5 (PR1, PR2, PR3, PR4, PR5, PR6, PR7, PR8)
PR5_WAIT. : YES
PR5_IN. : AUTO (AUTO, NONE, COM1)
PR5_BEF. :
PR5_STR. : 01 0A 02 0D 0A
PR5_CSET. : NONE (NONE, ISO>IBM, 7UK>IBM, 7SW>IBM, 7GE>IBM,
7FR>IBM, 7ND>IBM, DEC>IBM)
PR5_FILT. : NONE (NONE, POSTSCR, AUTO_PS)
PR5_AFT. :
PR5_DUMP. : NO
PR5_SIZE. : A4 (A4, LETTER, LEGAL, EXECUT)
PR5_ORNT. : PORTR (PORTR, LANDS, R_PORTR, R_LANDS)

PR5_FORM. : 66 0 100 60 30 50

PR5_FONT. :

--- Printer6 Menu

PR6_OUT. : LPT2 (NONE, LPT1, COM1, LPT2)

PR6_NAME. :

PR6_SCND. : PR6 (PR1, PR2, PR3, PR4, PR5, PR6, PR7, PR8)

PR6_WAIT. : YES

PR6_IN. : AUTO (AUTO, NONE, COM1)

PR6_BEF. :

PR6_STR. : 01 0A 02 0D 0A

PR6_CSET. : NONE (NONE, ISO>IBM, 7UK>IBM, 7SW>IBM, 7GE>IBM, 7FR>IBM, 7ND>IBM, DEC>IBM)

PR6_FILT. : NONE (NONE, POSTSCR, AUTO_PS)

PR6_AFT. :

PR6_DUMP. : NO

PR6_SIZE. : A4 (A4, LETTER, LEGAL, EXECUT)

PR6_ORNT. : PORTR (PORTR, LANDS, R_PORTR, R_LANDS)

PR6_FORM. : 66 0 100 60 30 50

PR6_FONT. :

--- Printer7 Menu

PR7_OUT. : COM1 (NONE, LPT1, COM1, LPT2)

PR7_NAME. :

PR7_SCND. : PR7 (PR1, PR2, PR3, PR4, PR5, PR6, PR7, PR8)

PR7_WAIT. : YES

PR7_IN. : AUTO (AUTO, NONE, COM1)

PR7_BEF. :

PR7_STR. : 01 0A 02 0D 0A

PR7_CSET. : NONE (NONE, ISO>IBM, 7UK>IBM, 7SW>IBM, 7GE>IBM, 7FR>IBM, 7ND>IBM, DEC>IBM)

PR7_FILT. : NONE (NONE, POSTSCR, AUTO_PS)

PR7_AFT. :

PR7_DUMP. : NO

PR7_SIZE. : A4 (A4, LETTER, LEGAL, EXECUT)
PR7_ORNT. : PORTR (PORTR, LANDS, R_PORTR, R_LANDS)
PR7_FORM. : 66 0 100 60 30 50
PR7_FONT. :

--- Printer8 Menu

PR8_OUT. : COM1 (NONE, LPT1, COM1, LPT2)
PR8_NAME. :
PR8_SCND. : PR8 (PR1, PR2, PR3, PR4, PR5, PR6, PR7, PR8)
PR8_WAIT. : YES
PR8_IN. : AUTO (AUTO, NONE, COM1)
PR8_BEF. :
PR8_STR. : 01 0A 02 0D 0A
PR8_CSET. : NONE (NONE, ISO>IBM, 7UK>IBM, 7SW>IBM, 7GE>IBM,
7FR>IBM, 7ND>IBM, DEC>IBM)
PR8_FILT. : NONE (NONE, POSTSCR, AUTO_PS)
PR8_AFT. :
PR8_DUMP. : NO
PR8_SIZE. : A4 (A4, LETTER, LEGAL, EXECUT)
PR8_ORNT. : PORTR (PORTR, LANDS, R_PORTR, R_LANDS)
PR8_FORM. : 66 0 100 60 30 50
PR8_FONT. :

--- LPT1 Menu

L1_CENTR. : HISPEED (IBM_PC, STNDRD, FAST, HISPEED, HINOACK)
L1_BSYTM. : 60
L1_MGM_INFO. : AUTO (DISABLE, AUTO)
L1_COMMENT. :
L1_BIDIR. : AUTO (DISABLE, AUTO)
L1_READT. : 3

--- COM1 Menu

C1_BAUDR. : 9600 (300, 600, 1200, 2400, 4800, 9600, 19200, 38400,
57600, 115200)

C1_NBITS. : 8 (7, 8)
C1_PARIT. : NONE (NONE, ODD, EVEN)
C1_STOPB. : 2 (1, 2)
C1_HNDSH. : ROBUST-BOTH (NONE, XON/XOFF, ROBUST, RDY/BSY, BOTH, ROBUST-BOTH)
C1_READT. : 3
C1_BSYTM. : 60
C1_MGM_INFO. : AUTO (DISABLE, AUTO)
C1_COMMENT. :

--- LPT2 Menu

L2_CENTR. : HISPEED (IBM_PC, STNDRD, FAST, HISPEED, HINOACK)
L2_BSYTM. : 60
L2_MGM_INFO. : AUTO (DISABLE, AUTO)
L2_COMMENT. :
L2_BIDIR. : AUTO (DISABLE, AUTO)
L2_READT. : 3

SNMP Device Index

When using the TCP/IP protocol (and if the printer driver permits), the print server can use **SNMP Status** to find out if the printer is ready to accept a new job.

By default, Windows uses the value “1” when addressing an SNMP device, which is correct for single port print servers. For a multiport print server, obtain the SNMP Device Index from the table below.

<i>Print Server</i>	<i>LPR Queue Name</i>	<i>Raw Port Number</i>	<i>SNMP Device Index</i>
Single Port: Parallel	LPT1	9100	1
Single Port: USB	USB1	9100	1
Dual Port: Parallel USB	LPT1 USB1	9100 9101	1 2


<i>Print Server</i>	<i>LPR Queue Name</i>	<i>Raw Port Number</i>	<i>SNMP Device Index</i>
Dual Port: Parallel Parallel	LPT1 LPT2	9100 9101	1 2
Three Port: Parallel Parallel Serial	LPT1 LPT2 COM1	9100 9101 9102	1 3 2

Enable SNMP Status SNMP Status is enabled through Windows' printer port settings.

Example You have a three port print server and want to enable SNMP Status for LPT2. The table above tells you to set the SNMP Device Index to 3.

Using Windows XP as an example:

1. Go to **Start | Printers and Faxes**.
2. Select **Printer** and then **Properties**.
3. Select **Port** and mark the **Port** you would like to change.
4. Click **Configure Port...**

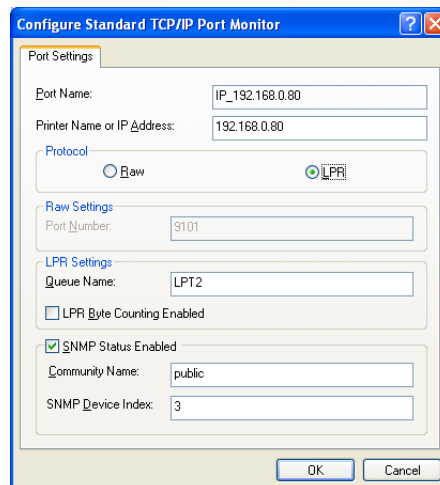

5. Ensure that **SNMP Status Enabled** is ticked and enter the correct index number in **SNMP Device Index**, taken from the table above (3 in this example).
6. Click **OK** and **Close**.

Section 18 Glossary

AIX	Advanced Interactive eXecutive. A version of the UNIX operating system from IBM that runs on various IBM computers including Mainframe systems.
AppleTalk	A local area network protocol for communication between Apple Computer products and other computers and peripherals.
ARP	Address Resolution Protocol. A protocol within the TCP/IP suite of network protocols that allows a host to find the physical address of a node on the same network. ARP cannot be used across routers.
Authentication	Verification of identity, for instance by use of digital signatures.
Auto-IP	A method to automatically set an IP address in the absence of a DHCP server.
Bonjour	Bonjour enables automatic discovery of computers, devices, and services on IP networks without the need to enter IP addresses or configure DNS servers.
BOOTP	BOOT Protocol. A TCP/IP protocol, used for downloading start-up information such as the IP address to hosts on the network. BOOTP requires a BOOTP daemon on your system. A request made to an active BOOTP daemon initiates a search of the Boot Table for an entry matching the print server's Ethernet address. If a matching entry is found, the daemon downloads the IP address to the print server.
BSD	Berkeley Software Distribution. The University of California, Berkeley additions to the UNIX operating system.
Certificate Authority, CA	An organization or company that issues digital certificates.
<i>config</i> File	This is a file that resides in the print server's memory and contains all the parameters that determine the print server's functionality. By editing the <i>config</i> file (changing the parameter settings), you can configure the print server to meet the printing needs of your network.
Client/server Printing	Means that print jobs are sent to a file server, with different clients attached to the print queue, rather than directly to the print server (Peer-to-Peer printing).

DHCP	Dynamic Host Configuration Protocol. Enables e.g. a print server to automatically obtain an unused IP address from the DHCP server. To fully benefit from this method, the print server also supports DDNS, which is available in Windows 2000 networks.
Digital Certificate	Used to create digital signatures and public/private key pairs for secure Web services.
DNS	Domain Name System. Resolves host names into IP addresses.
Dynamic DNS	Dynamic Domain Name System. Allows hosts to dynamically change the IP address in DNS, e.g. when the host is given a new IP address by DHCP.
Firmware	Firmware is the print server's internal software.
Flash Memory	The print server firmware is stored in Flash memory.
FTP	File Transfer Protocol. A TCP/IP protocol used for logging in to network servers and for transferring files.
HTML	Hypertext Markup Language. A standard hypertext language used for creating World Wide Web pages and other hypertext documents.
HTTP	Hypertext Transfer Protocol. The TCP/IP protocol for Web based communication.
HTTPS	HyperText Transmission Protocol, Secure, i.e. HTTP for secure transactions.
IP	Internet Protocol. The TCP/IP network-layer protocol that regulates packet forwarding by tracking IP addresses, routing outgoing messages and recognizing incoming messages.
IPP	Internet Printing Protocol. A developing industry standard that allows users to print to remote printers across the Internet. With IPP, a user with an Internet connection can send a document to any printer connected to the Internet. IPP is platform independent and can be used to print over any LAN or WAN that supports TCP/IP.
IPX	Internetwork Packet Exchange, a networking protocol used by NetWare.
LAN	Local Area Network.
LED	Light Emitting Diode.

Linux	An open source implementation of UNIX.
LLC	Logical Link Control. An additional data link layer protocol which operates on top of the MAC protocol defined in the original Ethernet standard (the "Blue Book").
LPD	The Line Printer Daemon is a protocol for transferring print jobs between hosts. This is the recommended method for UNIX/Linux systems, but some System V versions do not support LPD.
Logical Printer	A logical printer acts as a filter between the network and the physical printer. It appears to the user as a normal printer with additional characteristics. For example a UNIX/Linux workstation may only send a line feed (LF) to a shared printer that needs carriage return (CR) and LF. The logical printer can solve this problem by adding a CR whenever a line feed is detected.
NCP	NetWare Core Protocol. Network clients use the NCP to request services of servers, and servers use NCP to provide services, such as file and print services.
NDPS	Novell's Distributed Printing Services.
NDS	NetWare Directory Services. A hierarchical data base that manages NetWare network resources such as servers and volumes.
NetBIOS/NetBEUI	Network Basic Input Output System, a network protocol with special functions for local area networks. NetBIOS Enhanced User Interface is an enhanced version of NetBIOS.
NetWare	An operating system for local area networks.
PCL	Printer Control Language – a set of command codes used when printing. A PCL driver is a small program that works between the operating system and the printer.
Peer-to-Peer Printing	When selecting Peer-to-peer printing, all print jobs are sent directly to the print server, rather than through a file server (client/server).
PEM	Privacy Enhanced Mail.
RARP	Reverse Address Resolution Protocol. A TCP/IP protocol used for downloading IP addresses in UNIX/Linux networks. It requires a RARP daemon on your system, and only operates within a single network segment. A request made to an active RARP daemon initiates a search of

the Ethernet Address Table for an entry matching the print server's Ethernet address. If a matching entry is found, the daemon downloads the IP address to the print server.

- RISC** Reduced Instruction Set Computing. A processor designed to increase performance, using a limited set of assembly language instructions.
- SAP** Service Advertising Protocol. A NetWare network name advertising service that e.g. file servers can use for advertising their existence to network clients.
- SNMP** Simple Network Management Protocol. Standard management protocol for network attached devices.
- SSL** Secure Sockets Layer, a protocol designed to provide secure communications on the Internet.
- SPX** Sequenced Packet Exchange, a NetWare communications protocol used to transmit messages reliably over a network.
- TCP** Transmission Control Protocol. The connection-oriented, transport-level protocol used in the TCP/IP suite of protocols.
- Telnet** A terminal emulation program for networks, often used to remotely control Web servers.
- TFTP** Trivial File Transfer Protocol (TFTP) is an Internet software utility for transferring files that is simpler to use than the File Transfer Protocol (FTP) but less capable. It is used where user authentication and directory visibility are not required. TFTP uses the User Datagram Protocol (UDP) rather than the Transmission Control Protocol (TCP).
- TLS** Transport Layer Security, a protocol that guarantees privacy and data integrity between applications communicating over the Internet.
- UNIX** A 32-bit multi-tasking, multi-user operating system originally developed by AT&T.
- URL** Uniform Resource Locator. A way of specifying the location of information on the Internet.
- USB** Universal Serial Bus.
- WAN** Wide Area Network.

WINS Windows Internet Name Service. A NetBIOS Name Server that maps NetBIOS names to dynamically assigned IP addresses.

Wizard A special form of user assistance that automates a task through a dialog with the user. Wizards help the user to accomplish tasks that are complex and require experience, and even for the experienced user can help to speed up an operation.

Index

A	
Account File	91, 92
Adding printers in OS/2.....	78
Addressing	
Auto-IP.....	117
DHCP	116
Static	116
Admin	85
AIX	146
AppleTalk	38, 146
ASCII to Postscript Conversion	112
Assistance.....	7
Authentication	146
Autodetect	38
Autodetect Printer Type	40
Auto-IP.....	97, 146
Addressing	16, 117
axinstall	74
AXIS AddPrinter.....	20
AXIS IPP Gateway Configuration.....	57
AXIS LPR Gateway Configuration	57
AXIS MIB.....	95
AXIS Print Monitor	28
AXIS Print Utility for OS/2.....	79
AXIS ThinWizard	88
B	
Basic Installation.....	13
Basic setup	
AXIS NetPilot	61
TCP/IP.....	14
BCP and TBCP	40
Bi-directional Printing.....	114
Binary Protocol for Printer	40
Bonjour.....	146
Bonjour Printing	35
BSD.....	146
C	
CA.....	146
Certificate Authority.....	146
Change the Bonjour Service Name	36
Character Set Conversion	109
Client/Server Printing	146
Config File.....	84, 146
Configuration and Management.....	11

Configuration methods	
FTP	90
NetWare Administrator	66, 95
PCONSOLE	66
SNMP	94
Telnet	92
Web browser	85
Configuration Possibilities.....	97
Connectors	10
Conversions.....	109, 110, 112
Creating a Network Group	89
 D	
DDNS	117
DDNS Host Name Rules.....	117
Debugging.....	114
Hex Dump Mode.....	114
Print Problems	114
Default Gateway/Router	115
Default printer port.....	119
Default printer port - printing test page	119
Description	10
DHCP Addressing.....	116
Digital Certificate	147
DNS.....	147
Dynamic DNS	147
 E	
Enable SNMP Status	145
 F	
Firmware.....	147
Upgrade	87
Flash Loading over the Web	81
Flash Memory	147
FTP	90, 147
FTP Enabled.....	82, 90
 G	
Gateway	
Default	115
Glossary	146
 H	
Hex Dump Mode.....	114
Host Name	117
DDNS Rules	117
WINS Rules.....	117
HTML.....	147
HTTP	147
HTTPS	147

I	
Indicators	11, 120
Installing AXIS ThinWizard	88
Internet Address	61
IP	147
IP Address	115
Automatic Assignment Methods.....	14
Checking, using Ping.....	121
Default Gateway Example.....	116
Manual Assignment Methods.....	14
Setting - Macintosh	40
Setting, using ARP	16, 17
Setting, using AXIS AddPrinter	17
Setting, using BOOTP	15
Setting, using DHCP	118
Setting, using RARP	118
Subnet Mask.....	115
Subnet Mask Structures	115
IPP.....	147
Clients	99
Printing Requirements	99
iPrint.....	42, 95
Snap-in.....	57
IPX	147
L	
LAN.....	147
LED	120, 147
Linux.....	148
LLC	148
Local Printer	19, 25
Logical Printers	106, 108, 148
LPD	76, 148
M	
Macintosh	
Choosing a Printer	38
Installing the Print Server.....	38
N	
NCP.....	148
NDPS.....	42, 43, 148
NDS.....	63, 148
NetBIOS/NetBEUI	148
NetWare	148
Administrator.....	66
Advanced Installation.....	62
Basic installation	61
NDPS	43, 100
Printing Modes	
Print Server Mode	65

Remote Printer Mode.....	66
Setting up.....	42
Network	
Client/Server.....	19
Connectors.....	10
Create a Group.....	89
Indicator.....	11, 120
Peer-to-Peer.....	19
Printer	19, 26
Speed	106
Structures.....	19
 O	
Obtaining an IP Address and Subnet Mask	116
OS/2	
AXIS Print Utility for OS/2	79
Installing the print server	79
 P	
Parameter List.....	87, 119
PCL	148
PCONSOLE.....	95
Peer-to-Peer Printing	148
PEM	148
Power	
Indicator.....	11, 120
Print Jobs	
Redirect	113
Print Problems	
Debugging	114
Printer	
Autodetect	38
Printer compatibility	11
Printer Port	10
Printer Ports	10
Printing	
Bi-directional	114
Client/Server.....	146
Parameter List	119
Peer-to-Peer.....	148
Test Page	119
Product Overview	8
Pure IP	64
 Q	
Queue-based printing	42
 R	
Receiving an IP Address using DHCP.....	15
Redirecting Print Jobs.....	113
Reset Print Server	87

Restart	87
RISC	149
S	
SAP	149
Server Report	122
Snap-in for iPrint	57
SNMP	94, 149
SNMP Device Index	20, 95, 121, 144
SNMP Status	
Enable	145
Software Default	87
SPX	149
SSL	149
Starting AXIS ThinWizard	88
Static Addressing	116
Status File	92, 93
String Functions	110
String Substitutions	110
Subnet Mask	115
Substitutions	110
Support	7, 122
T	
TCP	149
Technical Assistance	7, 122
Telnet	149
Test Button	11, 119
Test Page	119
TFTP	15, 149
TLS	149
Troubleshooting	120
U	
UNIX	149
UNIX/Linux Printing Methods	
FTP	76
LPD	76
PROS A	77
PROS B	77
Reverse Telnet	77
Upgrading	81
URL	149
USB	149
User	84
W	
WAN	149
Windows	
Adding Printers	19

WINS.....	150
Host Name Rules	117
Wizard	150